



MODEL:  
**ITG-100AI**

**Fanless Embedded System with Intel® Atom™ x5-E3930,  
VGA , GbE, Two RS-232/422/485,  
Two USB 3.0 and RoHS Compliant**

# User Manual

# Revision

---

Date	Version	Changes
October 2, 2019	1.00	Initial release

# Copyright

---

## **COPYRIGHT NOTICE**

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

## **TRADEMARKS**

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

# Manual Conventions

---



## **WARNING**

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



## **CAUTION**

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



## **NOTE**

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.



## **HOT SURFACE**

This symbol indicates a hot surface that should not be touched without taking care.

# Table of Contents

<b>1 INTRODUCTION.....</b>	<b>1</b>
1.1 OVERVIEW.....	2
1.2 FEATURES.....	2
1.3 TECHNICAL SPECIFICATIONS .....	3
1.4 SIDE PANEL .....	4
1.5 FRONT PANEL.....	5
1.6 PHYSICAL DIMENSIONS .....	6
<b>2 UNPACKING .....</b>	<b>7</b>
2.1 UNPACKING.....	8
2.2 PACKING LIST.....	8
<b>3 INSTALLATION .....</b>	<b>10</b>
3.1 ANTI-STATIC PRECAUTIONS.....	11
3.2 INSTALLATION PRECAUTIONS.....	11
3.3 BOTTOM COVER REMOVAL AND RE-INSTALLATION.....	12
3.4 SO-DIMM INSTALLATION .....	13
3.5 WIRELESS LAN MODULE INSTALLATION (OPTIONAL).....	15
3.6 RS-232/422/485 SERIAL PORT CONNECTION .....	17
3.6.1 DB-9 RS-232/422/485 Serial Port Connection.....	17
3.6.2 RJ-45 RS-232/422/485 Serial Port Connection.....	18
3.7 AT/ATX MODE SELECTION.....	21
3.7.1 AT Power Mode.....	21
3.7.2 ATX Power Mode.....	22
3.8 MOUNTING THE SYSTEM .....	22
3.9 POWERING ON/OFF THE SYSTEM .....	24
3.10 RESET THE SYSTEM.....	24
<b>4 BIOS.....</b>	<b>25</b>
4.1 INTRODUCTION.....	26
4.1.1 Starting Setup.....	26

4.1.2	Using Setup .....	26
4.1.3	Getting Help.....	27
4.1.4	Unable to Reboot after Configuration Changes .....	27
4.1.5	BIOS Menu Bar.....	27
4.2	MAIN.....	28
4.3	ADVANCED.....	29
4.3.1	ACPI Settings .....	30
4.3.2	F81866 Super IO Configuration .....	31
4.3.2.1	Serial Port n Configuration.....	31
4.3.3	Hardware Monitor .....	33
4.3.4	RTC Wake Settings.....	34
4.3.5	Serial Port Console Redirection .....	36
4.3.5.1	Console Redirection Settings.....	36
4.3.6	CPU Configuration.....	39
4.3.7	USB Configuration.....	40
4.3.8	iEi Feature.....	41
4.3.9	SATA Configuration .....	42
4.4	CHIPSET .....	43
4.4.1	North Bridge Configuration.....	44
4.4.1.1	Intel IGD Configuration.....	44
4.4.2	Southbridge Configuration .....	46
4.4.2.1	PCI Express Configuration .....	47
4.4.2.2	SCC Configuration.....	48
4.5	SECURITY.....	49
4.6	BOOT.....	50
4.7	EXIT.....	52
<b>5</b>	<b>SOFTWARE INSTALLATION .....</b>	<b>54</b>
5.1	AVAILABLE DRIVERS .....	55
5.1.1	Driver Download .....	55
5.2	OPENVINO™ TOOLKIT INSTALLATION.....	57
<b>A</b>	<b>REGULATORY COMPLIANCE .....</b>	<b>58</b>
<b>B</b>	<b>SAFETY PRECAUTIONS .....</b>	<b>63</b>
B.1	SAFETY PRECAUTIONS.....	64

## **ITG-100AI Embedded System**

<i>B.1.1 General Safety Precautions</i> .....	64
<i>B.1.2 Anti-static Precautions</i> .....	65
<i>B.1.3 Product Disposal</i> .....	66
<b>B.2 MAINTENANCE AND CLEANING PRECAUTIONS</b> .....	67
<i>B.2.1 Maintenance and Cleaning</i> .....	67
<i>B.2.2 Cleaning Tools</i> .....	67
<b>C BIOS MENU OPTIONS</b> .....	69
<b>D TERMINOLOGY</b> .....	72
<b>E HAZARDOUS MATERIALS DISCLOSURE</b> .....	76

# List of Figures

---

Figure 1-1: ITG-100AI .....	2
Figure 1-2: ITG-100AI Side Panel .....	4
Figure 1-3: ITG-100AI Front Panel.....	5
Figure 1-4: Physical Dimensions (mm) .....	6
Figure 3-1: Bottom Cover Retention Screws .....	12
Figure 3-2: Bottom Cover Installation .....	13
Figure 3-3: SO-DIMM Socket .....	14
Figure 3-4: SO-DIMM Installation .....	14
Figure 3-5: Accelerator Card Retention Screws.....	15
Figure 3-6: WLAN M.2 Card Slot Location .....	16
Figure 3-7: Inserting the WLAN Card into the Slot at an Angle .....	16
Figure 3-8: Securing the WLAN Card .....	17
Figure 3-9: Serial Device Connector.....	18
Figure 3-10: DB-9 RS-232/422/485 Serial Port Connector .....	18
Figure 3-11: Serial Device Connector.....	19
Figure 3-12: RJ-45 RS-232/422/485 Serial Port Connector.....	19
Figure 3-13: DB-9 RS-232/422/485 Connector Pinout Location .....	20
Figure 3-14: AT/ATX Switch Location.....	21
Figure 3-15: Mounting the DIN Rail.....	23
Figure 3-16: Mounting to DIN Rail.....	23
Figure 3-17: Power Button Location.....	24
Figure 3-18: Reset Button Location.....	24
Figure 5-1: IEI Resource Download Center.....	55



# List of Tables

---

Table 1-1: Technical Specifications.....	4
Table 2-1: Package List Contents .....	9
Table 3-1: RJ-45 RS-232/422/485 Serial Port Pinouts .....	19
Table 3-2: DB-9 RS-232/422/485 Connector Pinouts.....	20
Table 4-1: BIOS Navigation Keys .....	27

# BIOS Menus

---

BIOS Menu 1: Main .....	28
BIOS Menu 2: Advanced .....	29
BIOS Menu 3: ACPI Configuration .....	30
BIOS Menu 4: Super IO Configuration.....	31
BIOS Menu 5: Serial Port 1 Configuration Menu .....	31
BIOS Menu 6: Hardware Monitor.....	34
BIOS Menu 7: RTC Wake Settings .....	35
BIOS Menu 8: Serial Port Console Redirection .....	36
BIOS Menu 9: Console Redirection Settings.....	37
BIOS Menu 10: CPU Configuration .....	39
BIOS Menu 11: USB Configuration .....	40
BIOS Menu 12: iEi Feature .....	41
BIOS Menu 13: IDE Configuration.....	42
BIOS Menu 14: Chipset .....	43
BIOS Menu 15: Northbridge Chipset Configuration.....	44
BIOS Menu 16: Integrated Graphics .....	45
BIOS Menu 17: Southbridge Chipset Configuration .....	46
BIOS Menu 18: PCI Express Configuration .....	47
BIOS Menu 19: PCI Express Configuration .....	48
BIOS Menu 20: Security .....	49
BIOS Menu 21: Boot .....	50
BIOS Menu 22: Exit.....	52

Chapter

1

# Introduction

---

## 1.1 Overview



**Figure 1-1: ITG-100AI**

The ITG-100AI embedded system is a fanless system with one VGA port for display. It accepts an Intel® Atom™ x5-E3930 processor and supports one 204-pin DDR3L SO-DIMM module pre-installed with 8 GB memory. Two RS-232/422/485 serial ports and two USB 3.1 GEN 1 ports ensure simplified connectivity to a variety of external peripheral devices.

## 1.2 Features

The ITG-100AI features are listed below:

- Intel® Atom™ x5-E3930 1.3GHz (up to 1.8 GHz)
- Two GbE LAN ports
- Two RS-232/422/485
- M.2 A-key slot for expansion
- Pre-installed Mustang-MPCIE-MX2 , 2 x Intel Myriad X VPU for AI deep learning workload consolidation

## ITG-100AI Embedded System

### 1.3 Technical Specifications

The ITG-100AI technical specifications are listed in **Table 1-1**.

<b>Model Name</b>	<b>ITG-100AI</b>
<b>AI Accelerator</b>	Mustang-MPCI-E-MX2
<b>Chassis</b>	
<b>Color</b>	Blue & Silver
<b>Dimensions (WxDxH)</b>	137 x 102.8 x 50 (mm)
<b>System Fan</b>	Fanless
<b>Chassis Construction</b>	Extruded aluminum alloy
<b>Motherboard</b>	
<b>CPU</b>	Intel® Atom™ x5-E3930 1.3 GHz (up to 1.8GHz, dual-core, TDP=6.5W)
<b>Chipset</b>	SoC
<b>System Memory</b>	1x 204-pin DDR3L SO-DIMM slot pre-installed with 8 GB memory
<b>Storage</b>	
<b>SATADOM</b>	Pre-installed 128GB
<b>eMMC</b>	1 x eMMC 5.0 support (up to 32GB optional)
<b>Micro SD</b>	1 x Micro SD Slot
<b>I/O Interfaces</b>	
<b>USB 3.1 Gen 1 (5Gb/s)</b>	2 x USB 3.1 GEN 1 ports
<b>Ethernet</b>	2 x RJ-45 PCIe GbE by I211-AT controller
<b>COM Port</b>	2 x RS-232/422/485 (DB-9/RJ45)
<b>Display</b>	1 x VGA
<b>Resolution</b>	Up to 1920x1080@60Hz
<b>Wireless</b>	1 x 802.11a/b/g/n/ac (optional)
<b>Others</b>	1 x Power Button, 1 x Reset Button, 1 x AT/ATX Switch, 1 x LED for HDD (Yellow), 1 x LED for Power (Green)
<b>Expansions</b>	


<b>M.2</b>	1 x M.2 2230 (A key, PCIe by 1, USB2.0)
<b>Power</b>	
<b>Power Input</b>	2-pin terminal block: 9~36V DC-in
<b>Reliability</b>	
<b>Mounting</b>	DIN-rail
<b>Operating Temperature</b>	-20°C ~ 50°C with air flow, 10% ~ 95%, non-condensing
<b>Storage Temperature</b>	-20°C ~ 70°C with air flow, 10% ~ 90%, non-condensing
<b>Operating Shock</b>	Half-sine wave shock 5G, 11ms, 100 shocks per axis, IEC68-2-27
<b>Operating Vibration</b>	MIL-STD-810G 514.6C-1
<b>Safety / EMC</b>	CE/FCC
<b>Watchdog Timer</b>	Programmable 1~255 sec/min
<b>OS</b>	
<b>Supported OS</b>	Win10/Linux Ubuntu 16.04 LTS

**Table 1-1: Technical Specifications**

## 1.4 Side Panel

The side panel of the ITG-100AI has the following features (**Figure 1-2**):

- 1 x 9~36V DC IN
- 1 x VGA connector

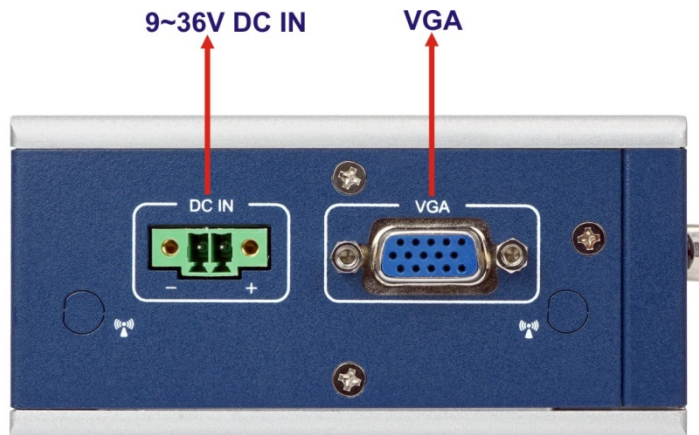


**Figure 1-2: ITG-100AI Side Panel**

## ITG-100AI Embedded System

### 1.5 Front Panel

The front panel of the ITG-100AI has the following features (**Figure 1-3**):

- 1 x AT/ATX Switch
- 1 x HDD LED
- 1 x Power button
- 1 x Power LED
- 1 x Reset button
- 2 x RJ-45 LAN connectors
- 2 x RS-232/422/485 serial port connectors (DB-9/RJ45)
- 2 x USB 3.1 GEN 1 connectors

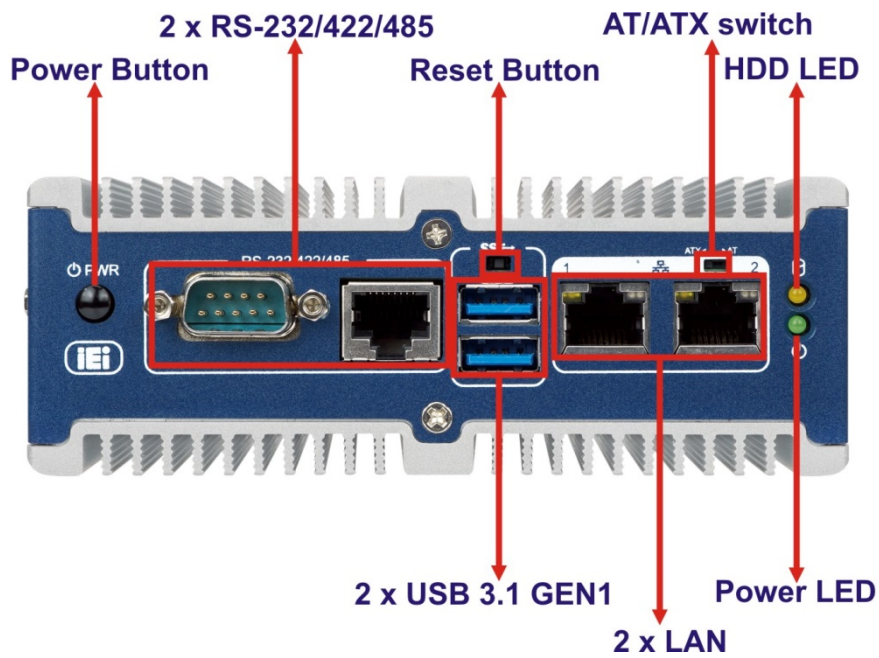

**Figure 1-3: ITG-100AI Front Panel**

## 1.6 Physical Dimensions

The physical dimensions of the ITG-100AI are shown below:

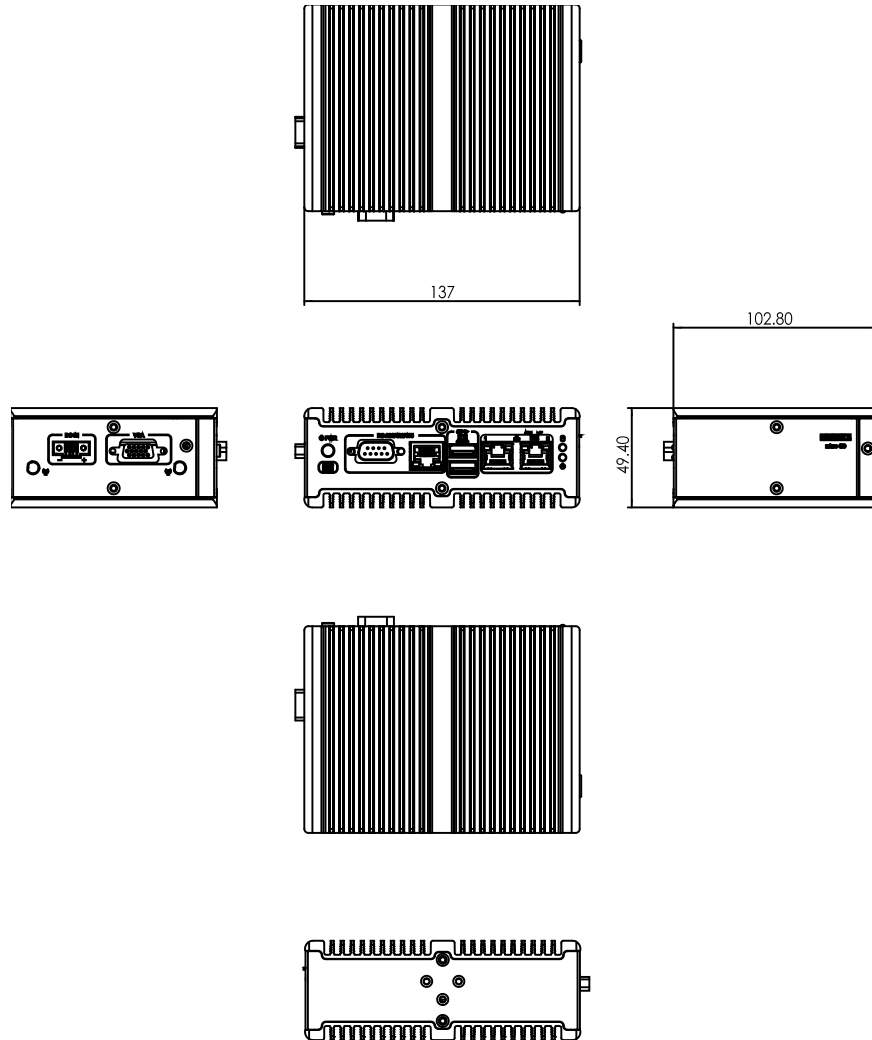


Figure 1-4: Physical Dimensions (mm)



Chapter

**2**

# Unpacking

---

## 2.1 Unpacking

To unpack the embedded system, follow the steps below:

- Step 1:** Use box cutters, a knife or a sharp pair of scissors that seals the top side of the external (second) box.
- Step 2:** Open the external (second) box.
- Step 3:** Use box cutters, a knife or a sharp pair of scissors that seals the top side of the internal (first) box.
- Step 4:** Lift the system out of the boxes.
- Step 5:** Remove both polystyrene ends, one from each side.
- Step 6:** Make sure all the components listed in the packing list are present.


## 2.2 Packing List









**NOTE:**

If some of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the ITG-100AI from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to [sales@iei.com.tw](mailto:sales@iei.com.tw).

The ITG-100AI is shipped with the following components:

Quantity	Item and Part Number	Image
1	ITG-100AI	

## ITG-100AI Embedded System

Quantity	Item and Part Number	Image
1	Adapter (P/N: 63040-010036-210-RS)	
1	Power cord	
1	Power cable (P/N: 32102-045700-100-RS)	
1	1 x RJ-45 to DB-9 COM port cable	
1	Mounting Bracket	
3	Screws (M3*6) for DIN mount	

**Table 2-1: Package List Contents**

Chapter

**3**

# Installation

---

## ITG-100AI Embedded System

### 3.1 Anti-static Precautions

---



#### **WARNING:**

Failure to take ESD precautions during the maintenance of the ITG-100AI may result in permanent damage to the ITG-100AI and severe injury to the user.

---

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the WAFER series motherboard and the power module. (Dry climates are especially susceptible to ESD.) It is therefore critical that whenever the ITG-100AI is opened and any electrical component handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the ITG-100AI, place it on an anti-static pad. This reduces the possibility of ESD damaging the ITG-100AI.

### 3.2 Installation Precautions

During installation, be aware of the precautions below:

- **Read the user manual:** The user manual provides a complete description of the ITG-100AI, installation instructions and configuration options.
- **DANGER! Disconnect Power:** Power to the ITG-100AI must be disconnected during the installation process, or before any attempt is made to access the rear panel. Electric shock and personal injury might occur if the rear panel of the ITG-100AI is opened while the power cord is still connected to an electrical outlet.

- **Qualified Personnel:** The ITG-100AI must be installed and operated only by trained and qualified personnel. Maintenance, upgrades, or repairs may only be carried out by qualified personnel who are familiar with the associated dangers.
- **Air Circulation:** Make sure there is sufficient air circulation when installing the ITG-100AI. The ITG-100AI's cooling vents must not be obstructed by any objects. Blocking the vents can cause overheating of the ITG-100AI. Leave at least 5 cm of clearance around the ITG-100AI to prevent overheating.
- **Grounding:** The ITG-100AI should be properly grounded. The voltage feeds must not be overloaded. Adjust the cabling and provide external overcharge protection per the electrical values indicated on the label attached to the back of the ITG-100AI.

### 3.3 Bottom Cover Removal and Re-installation

Before installing or maintaining the internal components, the bottom cover must be removed from the ITG-100AI. Follow the steps below to complete the task.

- Step 1:** Remove the bottom panel by removing the four retention screws from the bottom cover (**Figure 3-1**).



**Figure 3-1: Bottom Cover Retention Screws**

- Step 2:** Gently lift the cover to remove it.

## ITG-100AI Embedded System

- Step 3:** To re-install the bottom cover, orient the bottom cover to make the metal piece inside the cover position on the top of the PCIe accelerator card for heat dissipation (**Figure 3-2**).



**Figure 3-2: Bottom Cover Installation**

- Step 4:** Fasten the four retention screws previously remove to secure the bottom cover.

### 3.4 SO-DIMM Installation




#### **WARNING:**

Using incorrectly specified SO-DIMM may cause permanently damage the ITG-100AI. Please make sure the purchased SO-DIMM complies with the memory specifications of the ITG-100AI.

To install a SO-DIMM into a SO-DIMM socket, please follow the steps below.


- Step 1:** Remove the bottom cover from the ITG-100AI. Please follow the instruction described in **Section 3.3**.
- Step 2:** Locate the SO-DIMM socket on the motherboard (**Figure 3-3**).

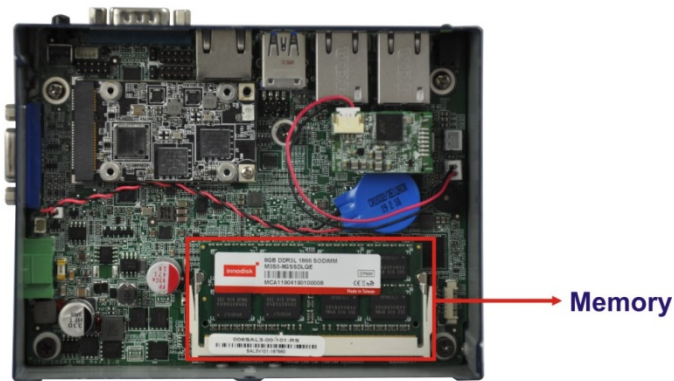

**Figure 3-3: SO-DIMM Socket**

**Step 3:** Align the SO-DIMM with the socket. The SO-DIMM must be oriented in such a way that the notch in the middle of the SO-DIMM must be aligned with the plastic bridge in the socket (**Figure 3-4**).

**Step 4:** Push the SO-DIMM into the socket at an angle (**Figure 3-4**).

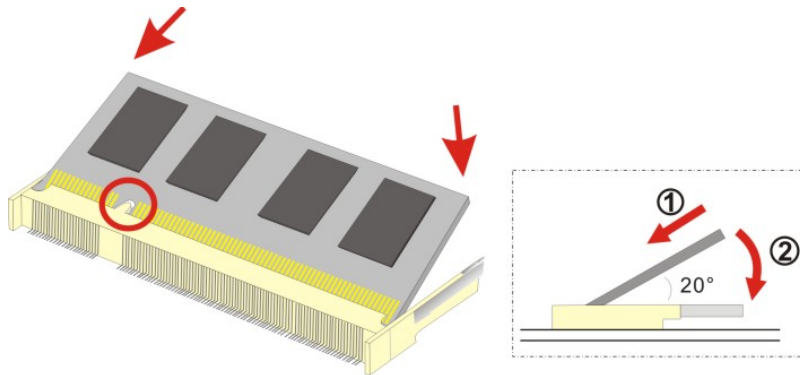

**Figure 3-4: SO-DIMM Installation**

**Step 5:** Gently pull the arms of the SO-DIMM socket out and push the rear of the SO-DIMM down (**Figure 3-4**).

**Step 6:** Release the arms on the SO-DIMM socket. They clip into place and secure the SO-DIMM in the socket.

**Step 7:** Install the bracket that was previously removed in the same position it was before.



## ITG-100AI Embedded System


**Step 8:** Reinstall the bottom panel to the ITG-100AI by following the instruction described in **Section 3.3**.

### 3.5 Wireless LAN Module Installation (Optional)

The ITG-100AI has an M.2 slot for WLAN card installation. The M.2 card slot is located under the accelerator card. To install the optional wireless LAN (WLAN) module, please follow the steps below.


**Step 1:** Remove the bottom cover from the ITG-100AI. Please follow the instruction described in **Section 3.3**.

**Step 2:** Remove the accelerator card by removing the two retention screws as shown below.

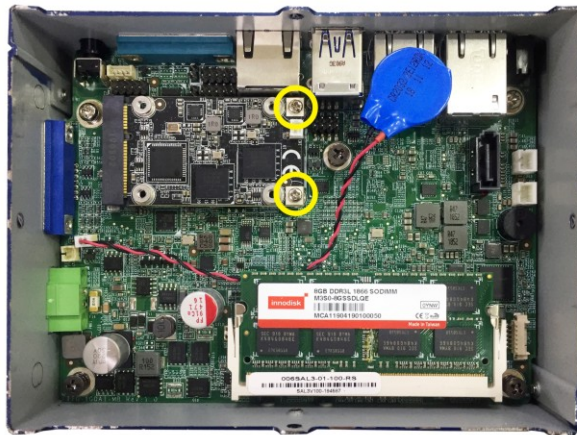


**Figure 3-5: Accelerator Card Retention Screws**

**Step 3:** Locate the M.2 card slot (**Figure 3-6**).

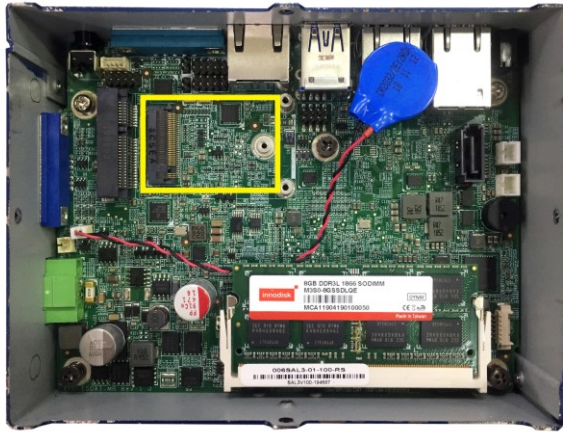

**Figure 3-6: WLAN M.2 Card Slot Location**

**Step 4:** Line up the notch on the module with the notch on the slot. Slide the WLAN card into the socket at an angle of about 20° (**Figure 3-7**).

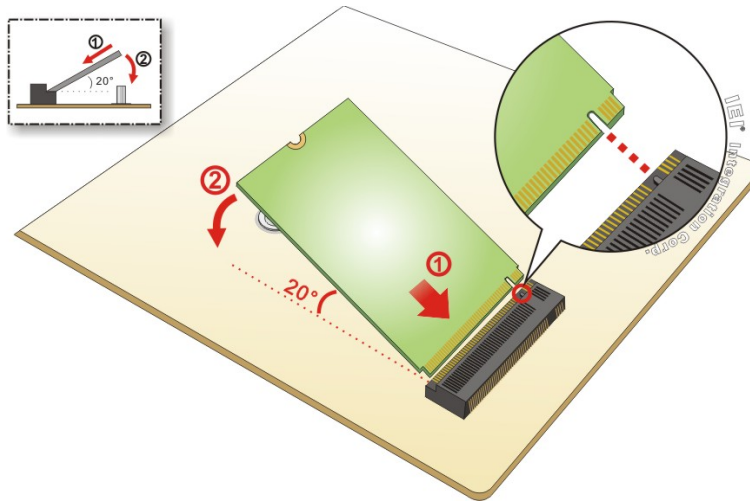

**Figure 3-7: Inserting the WLAN Card into the Slot at an Angle**

**Step 5:** Secure the WLAN card with an M2\*3 retention screw (**Figure 3-8**).

## ITG-100AI Embedded System

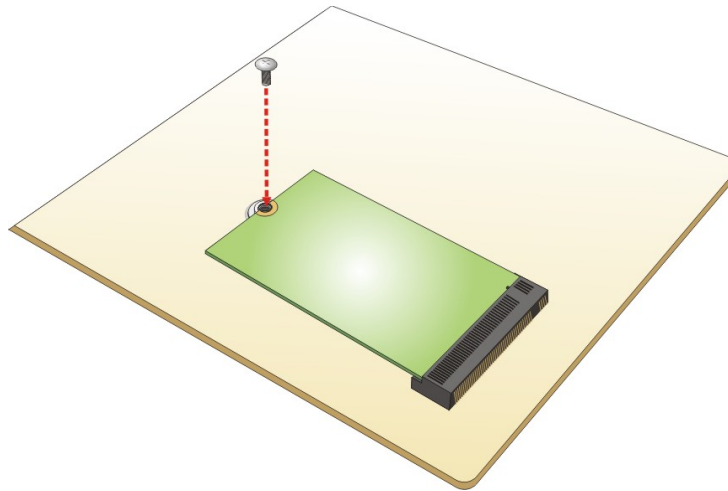


Figure 3-8: Securing the WLAN Card

### 3.6 RS-232/422/485 Serial Port Connection


The ITG-100AI has two RS-232/422/485 serial port connectors on the bottom panel. One is DB-9 connector and the other is RJ-45 connector.

#### 3.6.1 DB-9 RS-232/422/485 Serial Port Connection

DB-9 RS-232/422/485 serial port devices can be attached to the DB-9 port on the bottom panel.


**Step 1:** Locate the DB-9 connector. The locations of the DB-9 connector are shown in Figure 1-3.

**Step 2:** Insert the serial connector. Insert the DB-9 connector of a serial device into the DB-9 connector on the external peripheral interface. See Figure 3-9.

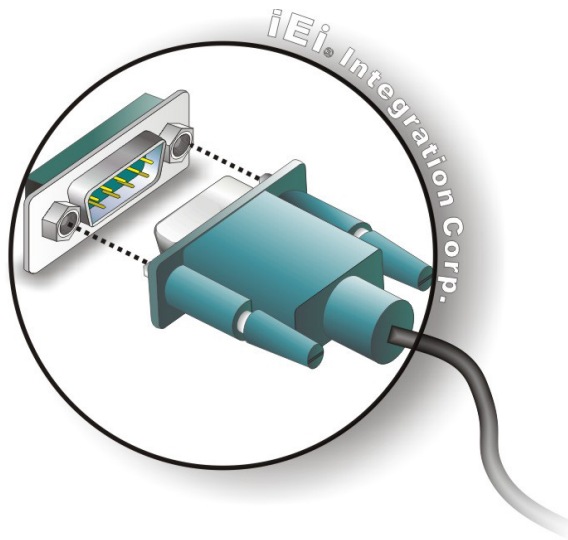

**Figure 3-9: Serial Device Connector**

**Step 3: Secure the connector.** Secure the serial device connector to the external interface by tightening the two retention screws on either side of the connector.

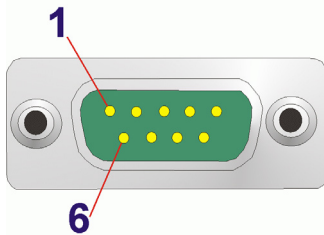

**Figure 3-10: DB-9 RS-232/422/485 Serial Port Connector**

### **3.6.2 RJ-45 RS-232/422/485 Serial Port Connection**


The RJ-45 RS-232/422/485 serial port connects to a cable with a standard DB-9 connector at the other end (cables included). Follow the steps below to connect a serial device to the ITG-100AI.

**Step 1: Locate the RJ-45 connector.** The location of the RJ-45 serial port connector is shown in **Chapter 2**. The RJ-45 connectors for the serial ports can be identified easily as the RJ-45 for the network has two LEDs on the port, while the connectors for the serial cables don't.

## ITG-100AI Embedded System


**Step 2:** Insert the RJ-45 to DB-9 cable.

**Step 3:** Insert the serial connector. Insert the DB-9 connector of a serial device into the DB-9 connector on the cable. See **Figure 3-11**.

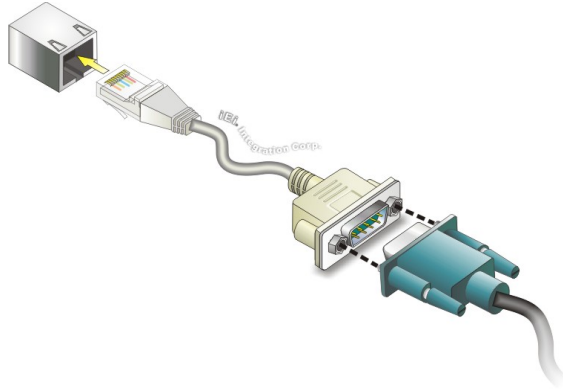

**Figure 3-11: Serial Device Connector**


**Step 4:** **Secure the connector.** Secure the serial device connector to the external interface by tightening the two retention screws on either side of the connector.

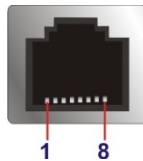

**Figure 3-12: RJ-45 RS-232/422/485 Serial Port Connector**

Pin	RS-232	RS-422	RS-485
1	NDCD1	TX-	DATA-
2	NDSR1		
3	NRX1	TX+	DATA+
4	NRTS1		
5	NTX1	RX+	
6	NCTS1		
7	NDTR1	RX-	
8	NRI1		

**Table 3-1: RJ-45 RS-232/422/485 Serial Port Pinouts**

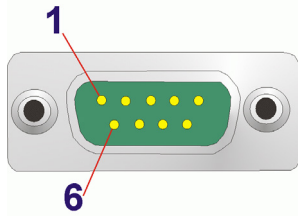

**Figure 3-13: DB-9 RS-232/422/485 Connector Pinout Location**

Pin	RS-232	RS-422	RS-485
1	ND CD	TX-	DATA-
2	NRX	TX+	DATA+
3	NTX	RX+	
4	NDTR	RX-	
5	GND		
6	NDSR		
7	NRTS		
8	NCTS		
9	NRI		

**Table 3-2: DB-9 RS-232/422/485 Connector Pinouts**



**NOTE:**

The communication protocol of the serial ports is set through the BIOS menu in “Advanced → F81866 Super IO Configuration → Serial Port 1/2 Configuration”. Use the **Device Mode** BIOS option to configure the correspondent serial ports (refer to **Sections 4.3.2.1.1** and **4.3.2.1.2** for detailed information).

## ITG-100AI Embedded System

### 3.7 AT/ATX Mode Selection

AT or ATX power mode can be used on the ITG-100AI. The selection is made through an AT/ATX switch located on the front panel (Figure 3-14). To select AT mode or ATX mode, follow the steps below.

**Step 1:** Locate the AT/ATX switch on the front panel (Figure 3-14).

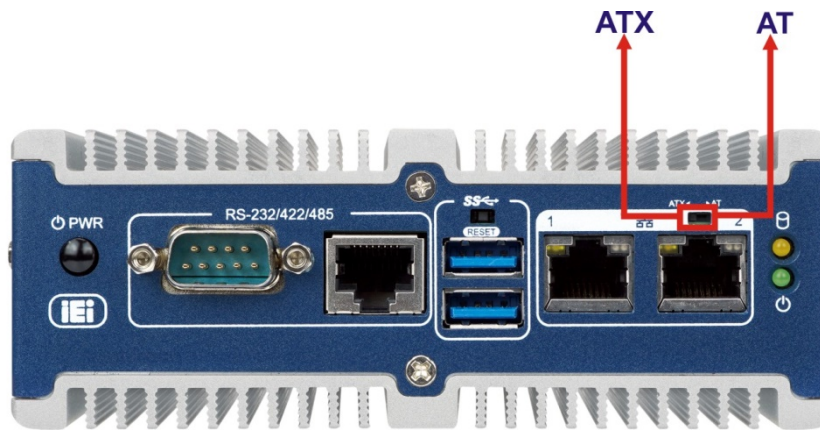


Figure 3-14: AT/ATX Switch Location

**Step 2:** Adjust the AT/ATX switch.

#### 3.7.1 AT Power Mode

With the AT mode selected, the power is controlled by a central power unit rather than a power switch. The ITG-100AI panel PC turns on automatically when the power is connected. The AT mode benefits a production line to control multiple panel PCs from a central management center and other applications including:

- ATM
- Self-service kiosk
- Plant environment monitoring system
- Factory automation platform
- Manufacturing shop flow

### 3.7.2 ATX Power Mode

With the ATX mode selected, the ITG-100AI panel PC goes in a standby mode when it is turned off. The panel PC can be easily turned on via network or a power switch in standby mode. Remote power control is perfect for advertising applications since the broadcasting time for each panel PC can be set individually and controlled remotely. Other possible application includes:

- Security surveillance
- Point-of-Sale (POS)
- Advertising terminal

## 3.8 Mounting the System

To mount the ITG-100AI embedded system onto a DIN rail, please follow the steps below.

**Step 1:** Attach the DIN mount bracket to the rear panel of the ITG-100AI. Secure the bracket to the ITG-100AI with three supplied retention screws (**Figure 3-15**).



#### **WARNING:**

When installing the DIN mount bracket onto the ITG-100AI, pay special attention to the direction of the DIN rail mount bracket. See **Figure 3-15**.

---



## ITG-100AI Embedded System

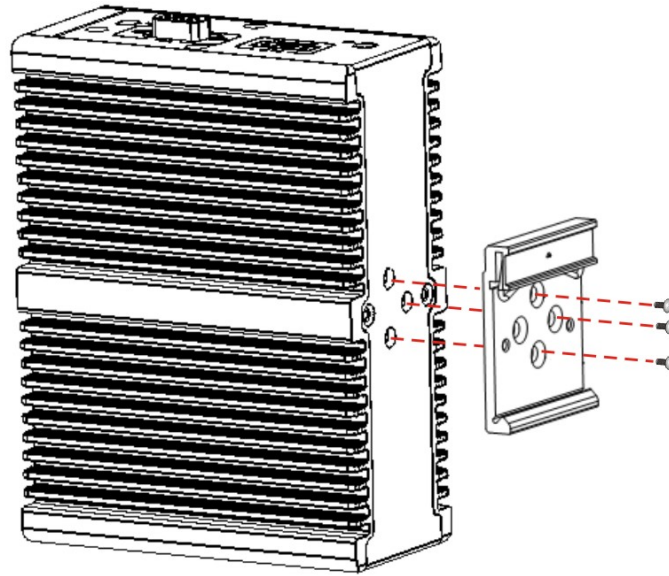


Figure 3-15: Mounting the DIN Rail

**Step 2:** Place the DIN rail against the back of the DIN mount bracket making sure the edges of the DIN rail are between the clamps of the DIN mount bracket (Figure 3-16).

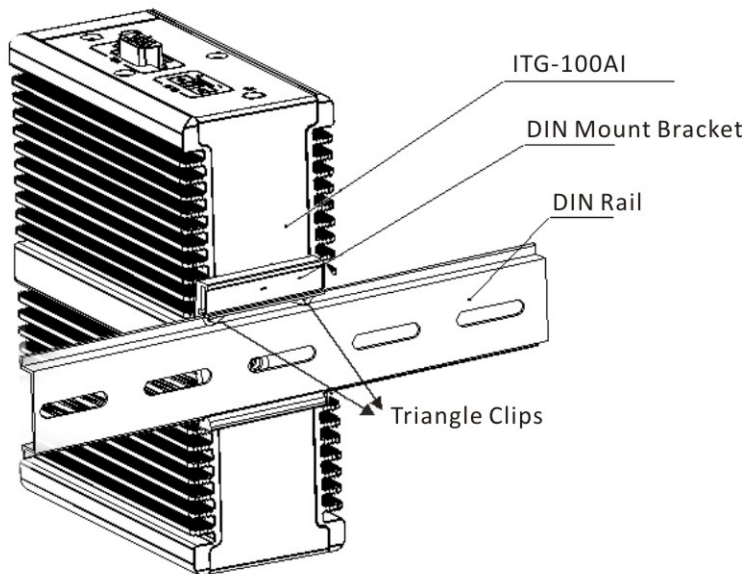


Figure 3-16: Mounting to DIN Rail

### 3.9 Powering On/Off the System

- **Power on** the system: press the power button for 3 seconds
- **Power off** the system: press the power button for 6 seconds

**Power button**




**Figure 3-17: Power Button Location**

### 3.10 Reset the System

The reset button enables user to reboot the system when the system is turned on. To reboot the system, follow the steps below.

**Step 3:** Locate the reset button on the front panel (**Figure 3-18**).

**Reset Button**

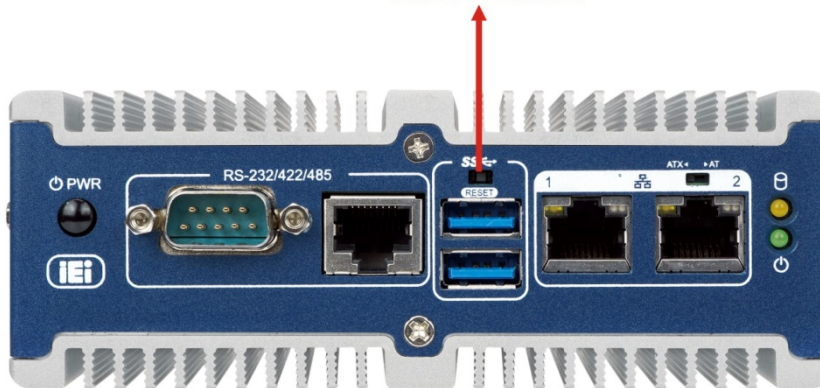

**Figure 3-18: Reset Button Location**

**Step 4:** Press the reset button.

Chapter

4

# BIOS

---

## 4.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



### NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

---

### 4.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DELETE** or **F2** key as soon as the system is turned on or
2. Press the **DELETE** or **F2** key when the “**Press Del to enter SETUP**” message appears on the screen.

If the message disappears before the **DELETE** or **F2** key is pressed, restart the computer and try again.

### 4.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **Esc** to quit. Navigation keys are shown in.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes

## ITG-100AI Embedded System

Key	Function
-	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Load previous values.
F3 key	Load optimized defaults
F4 key	Save changes and Exit BIOS
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu

Table 4-1: BIOS Navigation Keys

### 4.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

### 4.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in Chapter 3.

### 4.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

### 4.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered.

The **Main** menu gives an overview of the basic system information.

```

Aptio Setup Utility - Copyright (C) 2019 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit

BIOS Information
BIOS Vendor                American Megatrends
Core Version                5.12
Compliancy                 UEFI 2.5; PI 1.4
Project Version            SJ45AR10.BIN
Build Date and Time        08/16/2019 08:36:12

iWDD Vendor                iEi
iWDD Version                SAL3ER01.bin

Platform firmware Information
BXT SOC                    F1
MRC Version                0.56
PUNIT FW                   1A
PMC FW                     03.20
TXE FW                     3.1.65.2288
GOP                        0.0.0036
CPU Flavor                 BXT Notebook/Desktop (1)
Board ID                   Oxbow Hill CRB (06)
Fab ID                     FAB A

Memory Information
Total Memory                8192 MB
Memory Speed                1866 MHz

System Date                 [Fri 08/23/2019]
System Time                 [15:43:27]

Access Level                Administrator

Set the Date. Use Tab
to switch between
Data elements.
Default Ranges:
Year: 2005-2099
Months: 1-12
Days: dependent on
month

-----
<->: Select Screen
↑↓: Select Item
EnterSelect
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized
Defaults
F4: Save & Exit
ESC: Exit

Version 2.18.1263. Copyright (C) 2019 American Megatrends, Inc.
  
```

#### BIOS Menu 1: Main

The System Overview field also has two user configurable fields:

## ITG-100AI Embedded System

### → System Date [xx/xx/xx]

Use the **System Date** option to set the system date. Manually enter the day, month and year.

### → System Time [xx:xx:xx]

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

## 4.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



### WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit
-----
> ACPI Settings
> F81866 Super IO Configuration
> Hardware Monitor
> RTC Wake Settings
> Serial Port Console Redirection
> CPU Configuration
> USB Configuration
> iEi Feature
> SATA Configuration


System ACPI Parameters.
-----
<=>: Select Screen
↑ ↓: Select Item
Enter>Select
F1  General Help
F2  Previous Values
F3  Optimized Defaults
F4  Save
ESC Exit

Version 2.18.1263. Copyright (C) 2018 American Megatrends, Inc.
    
```

**BIOS Menu 2: Advanced**

### 4.3.1 ACPI Settings

The **ACPI Settings** menu (**BIOS Menu 3**) configures the Advanced Configuration and Power Interface (ACPI) options.

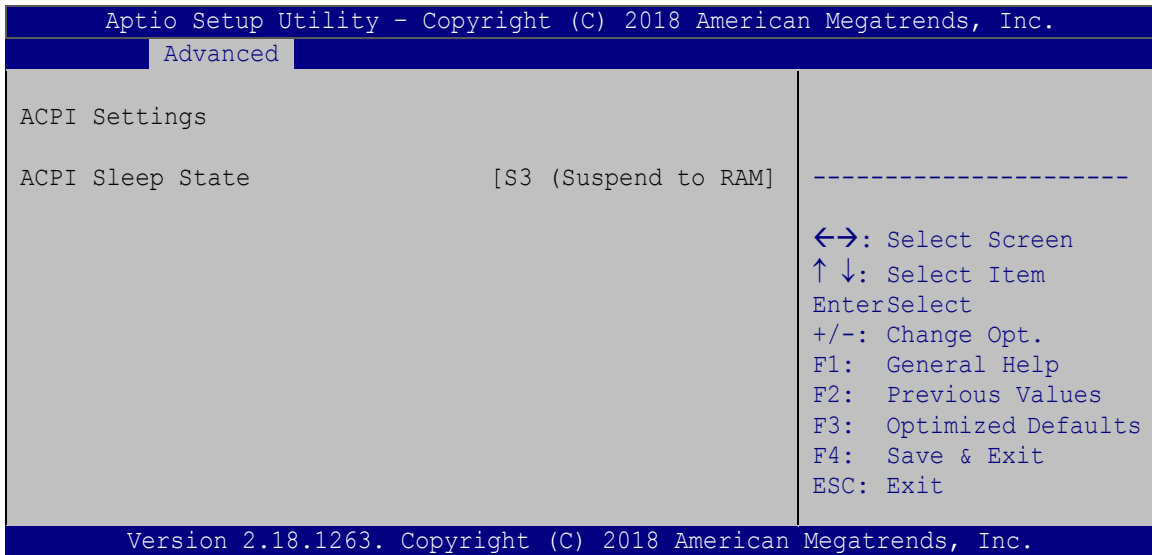

#### BIOS Menu 3: ACPI Configuration

##### → ACPI Sleep State [S3 only (Suspend to RAM)]

The fields in **ACPI Sleep State** option cannot be changed.

- **S3 (Suspend to DEFAULT RAM)** The caches are flushed and the CPU is powered off. Power to the RAM is maintained. The computer returns slower to a working state, but more power is saved.



## ITG-100AI Embedded System

### 4.3.2 F81866 Super IO Configuration

Use the **F81866 Super IO Configuration** menu (**BIOS Menu 10**) to set or change the configurations for the serial ports.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
  Advanced
F81866 Super IO Configuration
Super IO Chip                F81866
> Serial Port 1 Configuration
> Serial Port 2 Configuration
> Serial Port 3 Configuration
> Serial Port 4 Configuration

Set Parameters of Serial
Port 1 (COMA)
-----
<=>: Select Screen
↑ ↓: Select Item
EnterSelect
F1  General Help
F2  Previous Values
F3  Optimized
Defaults
F4  Save
ESC Exit

Version 2.18.1263. Copyright (C) 2018 American Megatrends, Inc.

```

#### BIOS Menu 4: Super IO Configuration

#### 4.3.2.1 Serial Port n Configuration

Use the **Serial Port n Configuration** menu (**BIOS Menu 5**) to configure the serial port n.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
  Advanced
Serial Port 1 Configuration
Serial Port                [Enabled]
Device Settings            IO=3F8h; IRQ=4
Device Mode                [RS232]

Enable or Disable Serial
Port (COM)
-----
<=>: Select Screen
↑ ↓: Select Item
EnterSelect
F1  General Help
F2  Previous Values
F3  Optimized
Defaults
F4  Save
ESC Exit

Version 2.18.1263. Copyright (C) 2018 American Megatrends, Inc.

```

#### BIOS Menu 5: Serial Port 1 Configuration Menu



## ITG-100AI Embedded System

### 4.3.2.1.3 Serial Port 3 Configuration

#### → Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled**                      Disable the serial port
- **Enabled**      **DEFAULT**      Enable the serial port

### 4.3.2.1.4 Serial Port 4 Configuration

#### → Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled**                      Disable the serial port
- **Enabled**      **DEFAULT**      Enable the serial port

## 4.3.3 Hardware Monitor

The Hardware Monitor menu (**BIOS Menu 6**) contains the fan configuration submenus and displays operating temperature, fan speeds and system voltages.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Advanced
PC Health Status
CPU temperature           :+39 °C
SYS temperature          :+41 °C
VSCC_SVID                :+0.832 V
V5_S                     :+5.003 V
V12_S                   :+12.056 V
V3P3_S                   :+3.296 V
-----
<->: Select Screen
↑↓: Select Item
Enter>Select
+ - Change Opt.
F1  General Help
F2  Previous Values
F3  Optimized Defaults
F4  Save & Exit
ESC Exit
Version 2.18.1263. Copyright (C) 2018 American Megatrends, Inc.

```

### BIOS Menu 6: Hardware Monitor

#### → PC Health Status


The following system parameters and values are shown. The system parameters that are monitored are:

- Temperatures:
  - CPU Temperature
  - System temperature
- Voltages:
  - VSCC\_SVID
  - V5\_S
  - V12\_S
  - V3P3\_S

### 4.3.4 RTC Wake Settings

The **RTC Wake Settings** menu (**BIOS Menu 8**) configures RTC wake event.

## ITG-100AI Embedded System

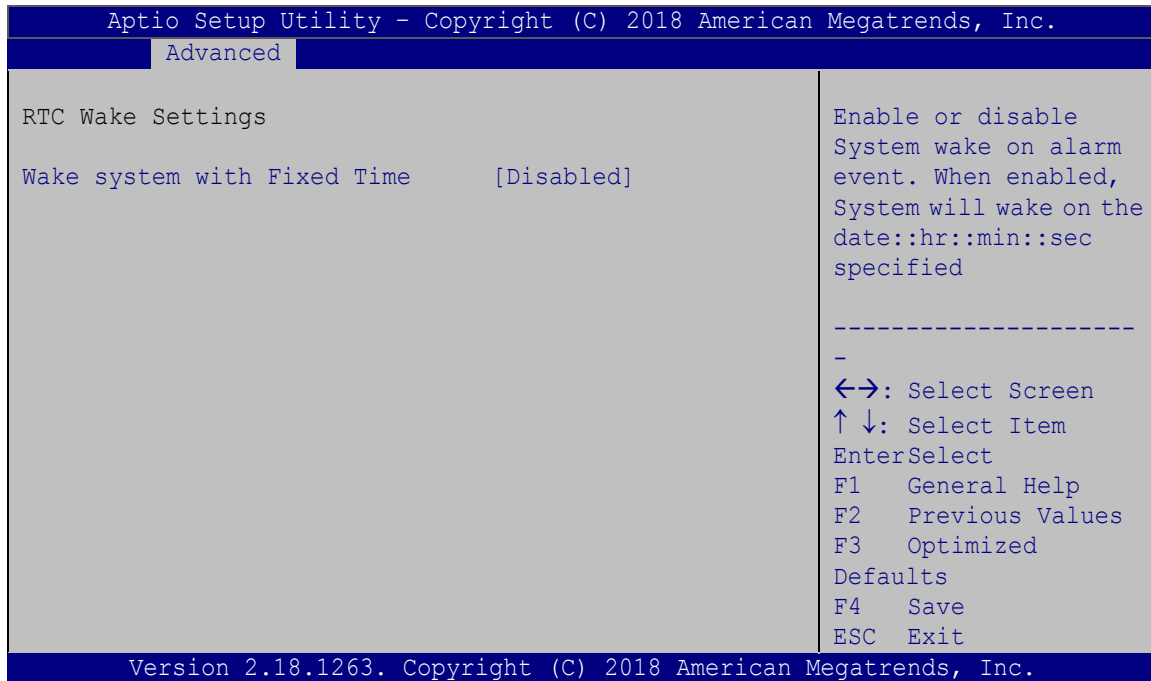

### BIOS Menu 7: RTC Wake Settings

#### → Wake system with Fixed Time [Disabled]

Use the **Wake system with Fixed Time** option to enable or disable the system wake on alarm event.

→ **Disabled**      **DEFAULT**      The real time clock (RTC) cannot generate a wake event

→ **Enabled**      If selected, the **Wake up every day** option appears allowing you to enable to disable the system to wake every day at the specified time. Besides, the following options appear with values that can be selected:

Wake up date

Wake up hour


Wake up minute

Wake up second

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

### 4.3.5 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 8**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

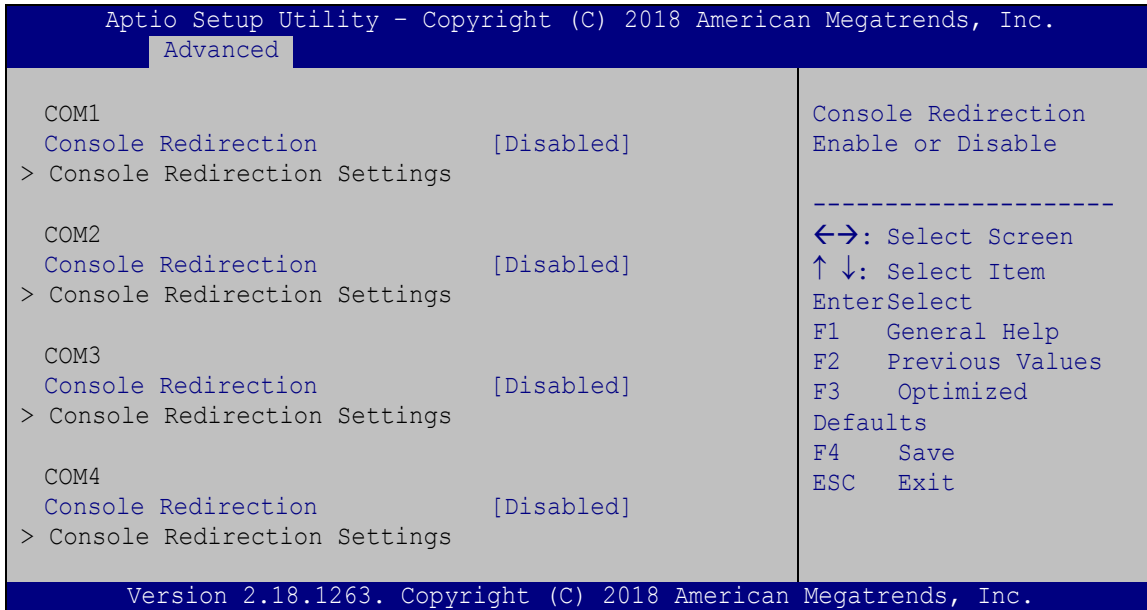

#### BIOS Menu 8: Serial Port Console Redirection

##### ➔ Console Redirection [Disabled]


Use **Console Redirection** option to enable or disable the console redirection function.

- ➔ **Disabled**    **DEFAULT**    Disabled the console redirection function
- ➔ **Enabled**                    Enabled the console redirection function

#### 4.3.5.1 Console Redirection Settings

The **Console Redirection Settings** menu (**BIOS Menu 9**) allows the console redirection options to be configured. The option is active when Console Redirection option is enabled.

## ITG-100AI Embedded System

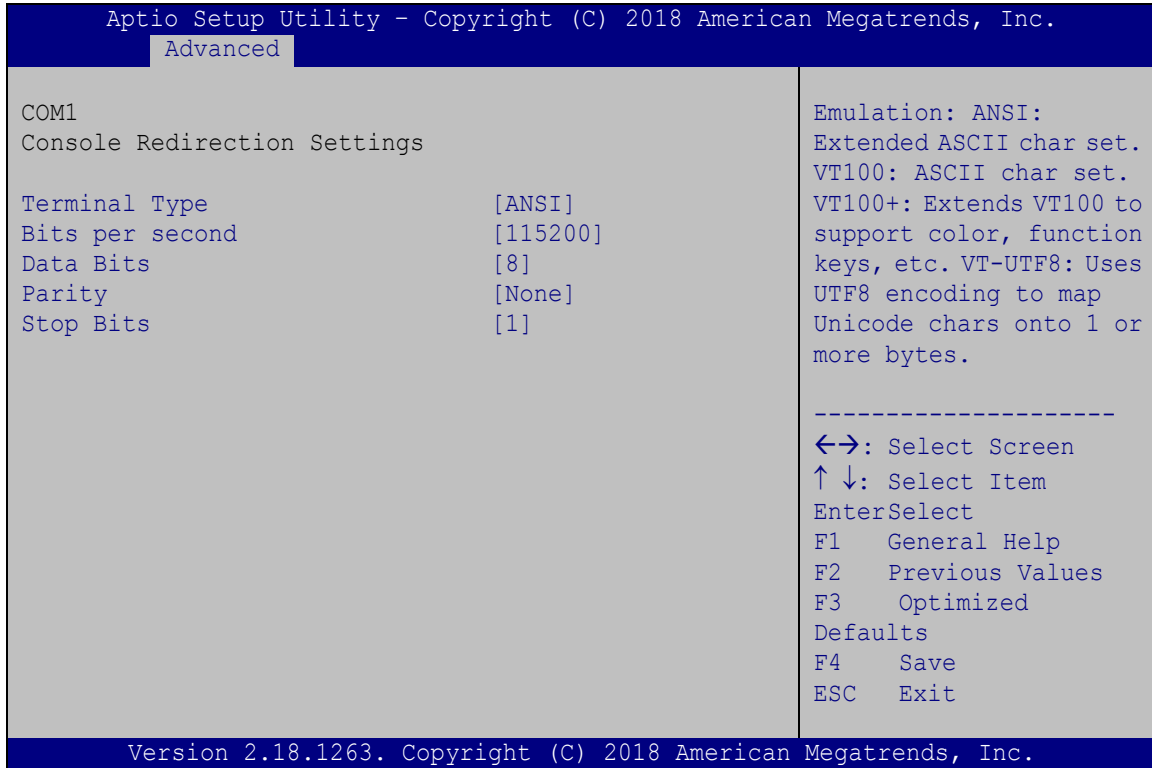

### BIOS Menu 9: Console Redirection Settings

#### → Terminal Type [ANSI]

Use the **Terminal Type** option to specify the remote terminal type.

- **VT100**                      The target terminal type is VT100
- **VT100+**                    The target terminal type is VT100+
- **VT-UTF8**                    The target terminal type is VT-UTF8
- **ANSI**                      **DEFAULT**                    The target terminal type is ANSI

#### → Bits per second [115200]

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match the other side. Long or noisy lines may require lower speeds.

- **9600**                        Sets the serial port transmission speed at 9600.
- **19200**                      Sets the serial port transmission speed at 19200.

- **38400** Sets the serial port transmission speed at 38400.
- **57600** Sets the serial port transmission speed at 57600.
- **115200**      **DEFAULT** Sets the serial port transmission speed at 115200.

### → Data Bits [8]

Use the **Data Bits** option to specify the number of data bits.

- **7** Sets the data bits at 7.
- **8**      **DEFAULT** Sets the data bits at 8.

### → Parity [None]

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

- **None**      **DEFAULT** No parity bit is sent with the data bits.
- **Even** The parity bit is 0 if the number of ones in the data bits is even.
- **Odd** The parity bit is 0 if the number of ones in the data bits is odd.
- **Mark** The parity bit is always 1. This option does not provide error detection.
- **Space** The parity bit is always 0. This option does not provide error detection.

### → Stop Bits [1]

Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

- **1**      **DEFAULT** Sets the number of stop bits at 1.
- **2** Sets the number of stop bits at 2.



## ITG-100AI Embedded System

### 4.3.6 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 10**) to view detailed CPU specifications and configure the CPU.

```

Aprio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
  Advanced
CPU Configuration
Intel(R) Atom(TM) Processor E3930 @ 1.30GHz
CPU Signature          506C9
Microcode Patch       2E
Max CPU Speed         1300 MHz
Min CPU Speed         800 MHz
Processor Cores       2
Intel HT Technology   Not Supported
Intel VT-x Technology Supported
Intel SMX Technology  Not Supported

L1 Data Cache        24 KB x 2
L1 Code Cache        32 KB x 2
L2 Cache             1024 KB x 2
L3 Cache             Not Present
Speed                1300 MHz
64-bit               Supported

Intel Virtualization Technology [Disabled]
EIST                  [Enabled]
C-States              [Disabled]

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

-----
<->: Select Screen
↑ ↓: Select Item
Enter>Select
F1   General Help
F2   Previous Values
F3   Optimized
Defaults
F4   Save
ESC  Exit

Version 2.18.1263. Copyright (C) 2018 American Megatrends, Inc.
  
```

#### BIOS Menu 10: CPU Configuration

##### → Intel® Virtualization Technology [Disabled]

Use the **Intel® Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel Virtualization technology allows several OSs to run on the same system at the same time.

→ **Disabled**      **DEFAULT**      Disables Intel Virtualization Technology.

→ **Enabled**                      Enables Intel Virtualization Technology.

##### → EIST [Enabled]

Use the **EIST** option to enable or disable the Intel Speed Step Technology.

- ➔ **Disabled**                      Disables the Intel Speed Step Technology.
- ➔ **Enabled**      **DEFAULT**      Enables the Intel Speed Step Technology.


### ➔ **C-States [Disabled]**

Use the **C-States** option to enable or disable the CPU C state.

- ➔ **Disabled**      **DEFAULT**      Disables the CPU C state.
- ➔ **Enabled**                              Enables the CPU C state.

### 4.3.7 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 11**) to read USB configuration information and configure the USB settings.

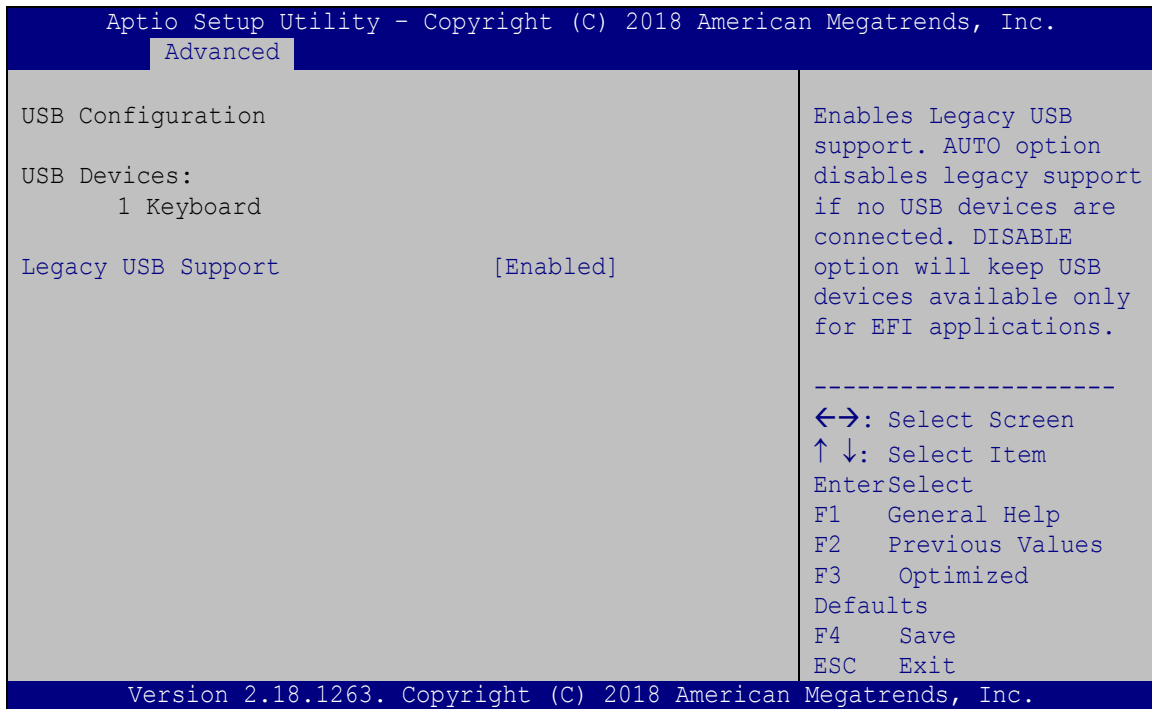

#### **BIOS Menu 11: USB Configuration**

### ➔ **USB Devices**

The **USB Devices Enabled** field lists the USB devices that are enabled on the system



- ➔ **Disabled**      **DEFAULT**      Disabled the auto recovery function
- ➔ **Enabled**                      Enabled the auto recovery function

### 4.3.9 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 13**) to change and/or set the configuration of the SATA devices installed in the system.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
  Advanced
SATA Configuration
SATA Mode Selection          [ACHI]
                               Determines how SATA
                               controller(s) operate.

SATA Port0
Hot Plug                     SATADOM-SH 3ME (32.0GB)
                               [Disabled]
                               -----

mSATA Port
Hot Plug                     Not Present
                               [Disabled]
                               <->: Select Screen
                               ↑ ↓: Select Item
                               EnterSelect
                               F1   General Help
                               F2   Previous Values
                               F3   Optimized
                               Defaults
                               F4   Save
                               ESC  Exit

Version 2.18.1263. Copyright (C) 2018 American Megatrends, Inc.
    
```

#### BIOS Menu 13: IDE Configuration

##### ➔ **SATA Mode Selection [AHCI]**

Use the **SATA Mode Selection** option to configure SATA devices as normal IDE devices.

- ➔ **AHCI**      **DEFAULT**      Configures SATA devices as AHCI device.

##### ➔ **Hot Plug [Disabled]**

Use the **Hot Plug** option to configure the port as Hot Pluggable.

- ➔ **Disabled**      **DEFAULT**      Disables the port as Hot Pluggable.
- ➔ **Enabled**                      Enables the port as Hot Pluggable.

## ITG-100AI Embedded System

### 4.4 Chipset

Use the **Chipset** menu (**BIOS Menu 14**) to access the Northbridge and Southbridge configuration menus



#### **WARNING!**

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Main   Advanced  Chipset  Security  Boot   Save & Exit
-----
> North Bridge
> South Bridge


North Bridge Parameters
-----
<->: Select Screen
↑ ↓: Select Item
Enter>Select
+/-: Change Opt.
F1   General Help
F2   Previous Values
F3   Optimized Defaults
F4   Save & Exit
ESC  Exit

Version 2.18.1263. Copyright (C) 2018 American Megatrends, Inc.
    
```

**BIOS Menu 14: Chipset**

### 4.4.1 North Bridge Configuration

Use the **North Bridge Configuration** menu (**BIOS Menu 15**) to configure the Intel IGD settings.

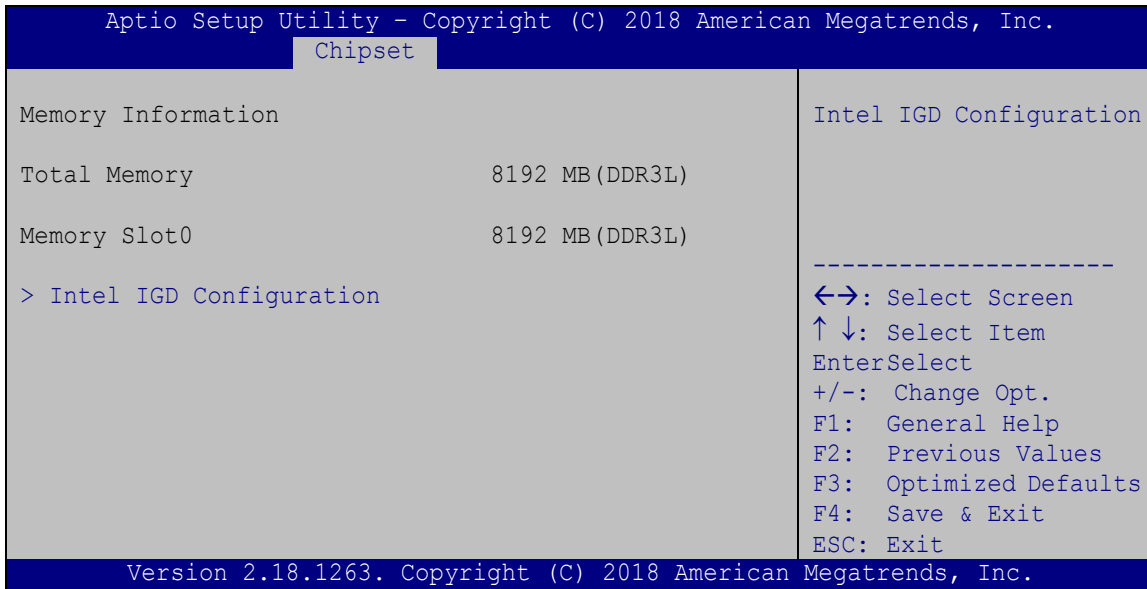

#### BIOS Menu 15: Northbridge Chipset Configuration


##### → Memory Information

The **Memory Information** lists a brief summary of the on-board memory. The fields in **Memory Information** cannot be changed.

#### 4.4.1.1 Intel IGD Configuration

Use the **Intel IGD Configuration** menu (**BIOS Menu 16**) to configure the video device connected to the system.

## ITG-100AI Embedded System

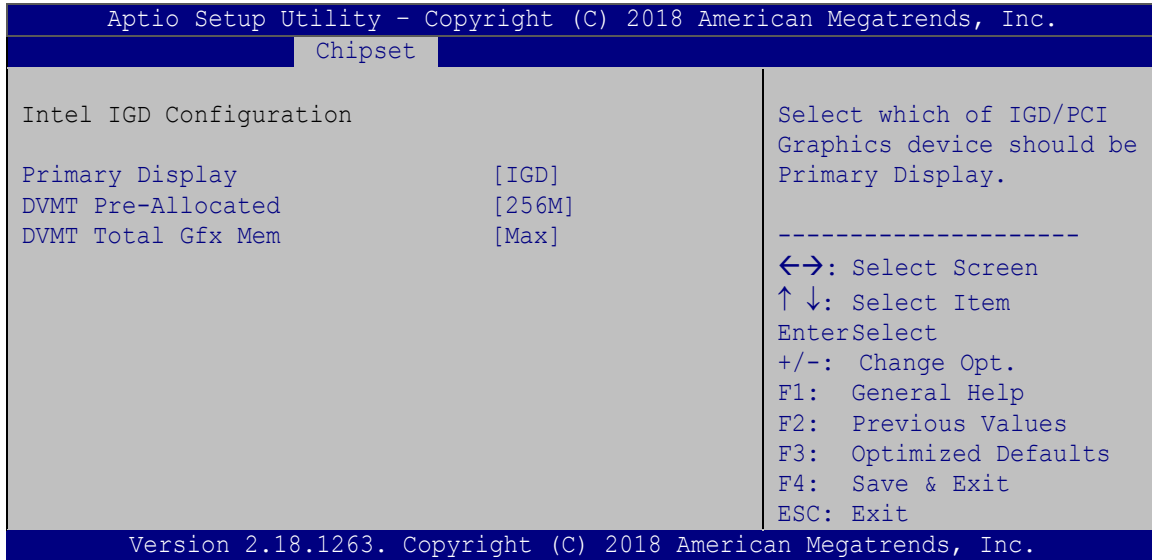

### BIOS Menu 16: Integrated Graphics

#### → Primary Display [IGD]

Use the **Primary Display** option to select the primary graphics controller the system uses.

The following options are available:

- IGD                      **Default**
- PCIe

#### → DVMT Pre-Allocated [256MB]

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

- 64M
- 128M
- 256M                      **Default**
- 512M


### → DVMT Total Gfx Mem [Max]

Use the **DVMT Total Gfx Mem** option to select DVMT5.0 total graphic memory size used by the internal graphic device. The following options are available:

- 128M
- 256M
- Max                      **Default**

## 4.4.2 Southbridge Configuration

Use the **Southbridge Configuration** menu (**BIOS Menu 17**) to configure the Southbridge chipset.

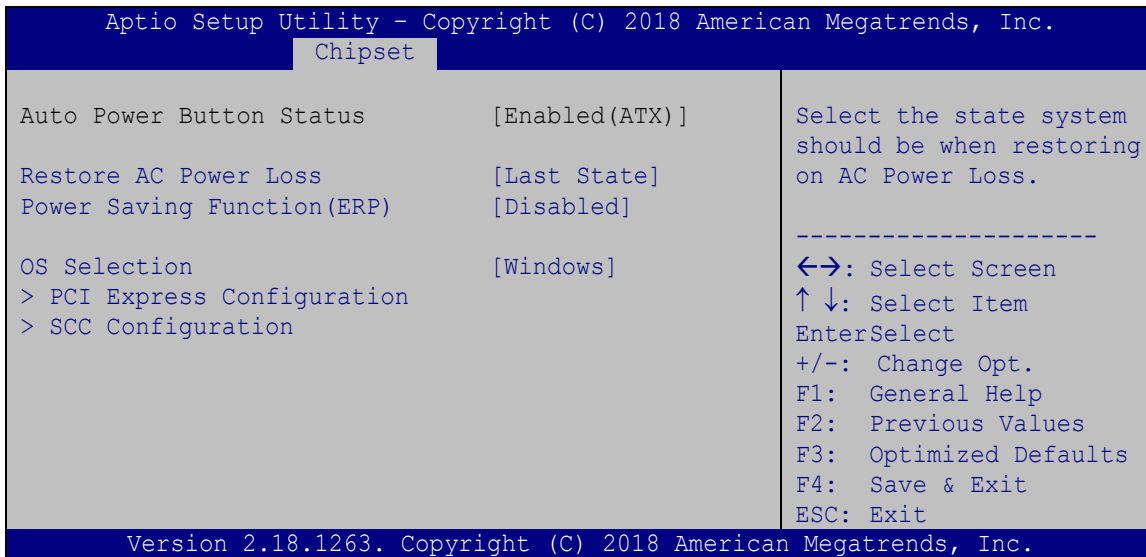

### BIOS Menu 17: Southbridge Chipset Configuration

### → Restore AC Power Loss [Last State]

Use the **Restore on AC Power Loss** option to specify what state the system returns to if there is a sudden loss of power to the system.

- **Power Off**                      The system remains turned off
- **Power On**                      The system turns on
- **Last State    DEFAULT**      The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.



## ITG-100AI Embedded System

### → Power Saving Function (EUP) [Disabled]

Use the **Power Saving Function (EUP)** option to enable or disable the power saving function.

- **Disabled**      **DEFAULT**      Power saving function is disabled.
- **Enabled**                      Power saving function is enabled. It will reduce power consumption when the system is off.


### → OS Selection [Windows]

Use the **OS Selection** BIOS option to select the OS. Configuration options are listed below.

- Windows                      **DEFAULT**
- Android

#### 4.4.2.1 PCI Express Configuration

Use the **PCI Express Configuration** menu (**BIOS Menu 18**) to select the support type of the PCIe Mini slot.

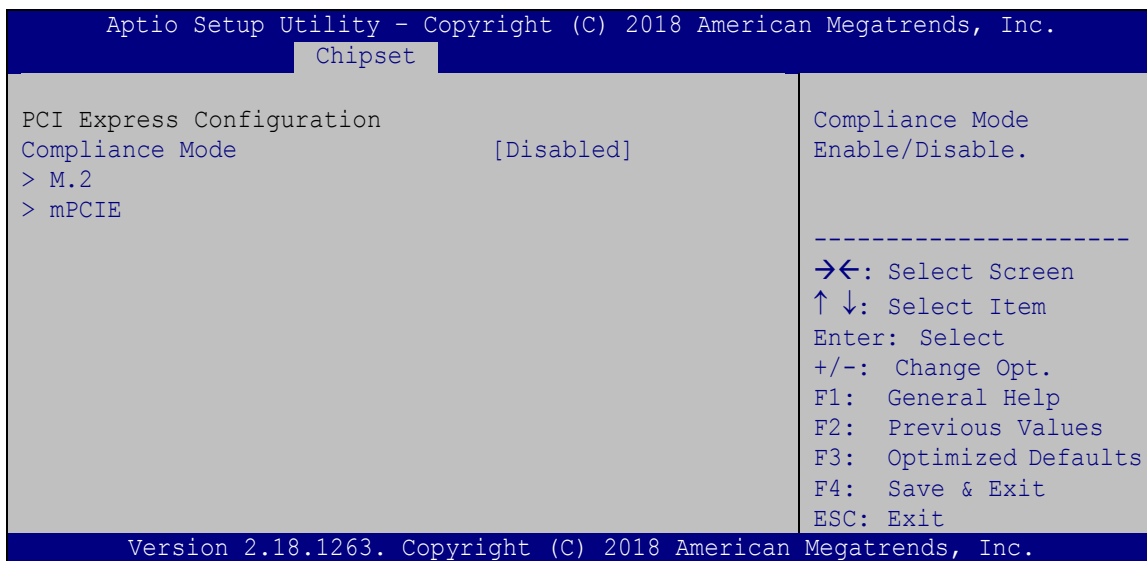

#### BIOS Menu 18: PCI Express Configuration

### → Compliance Mode [Disabled]

Use the **Compliance Mode** option to enable or disable the compliance mode.

- ➔ **Disabled**      **DEFAULT**      Disables the compliance mode.
- ➔ **Enabled**                      Enables the compliance mode.

The **M.2** and **mPCIe** submenus all contain the following options:


### ➔ **PCIe Speed [Auto]**

Use PCIe Speed option to select the speed type of the PCIe Mini slot. The following options are available:

- Auto                      **Default**
- Gen1
- Gen2

### 4.4.2.2 SCC Configuration

Use the **SCC Configuration** menu (**BIOS Menu 19**) to configure the SCC settings.

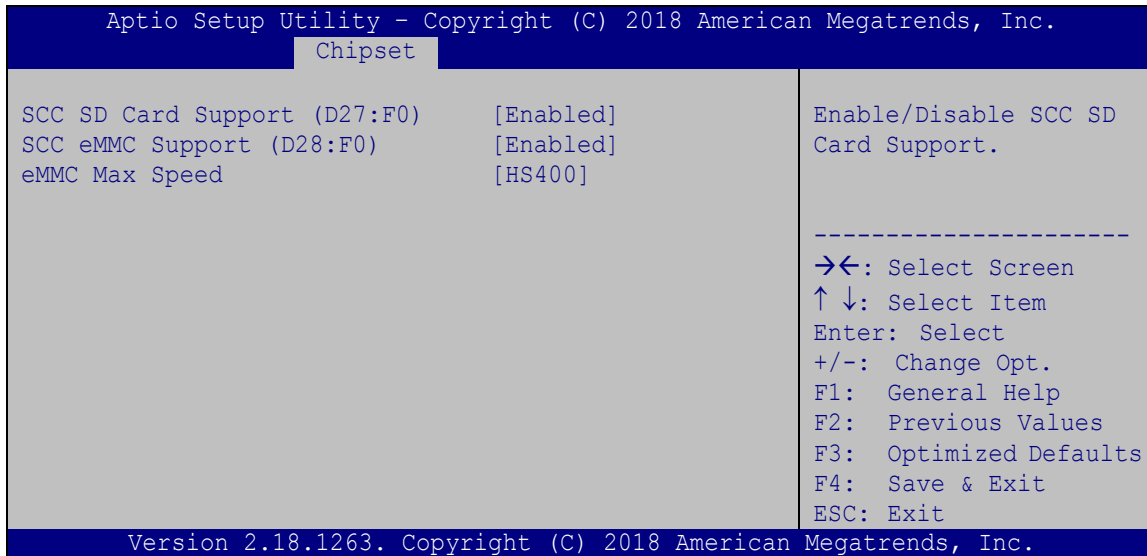

### BIOS Menu 19: PCI Express Configuration

### ➔ **SCC SD Card Support [Enabled]**

Use the **SCC SD Card Support** option to enable or disable the SCC SD card support.

- ➔ **Disabled**                      Disables the SCC SD card support.



### → Administrator Password

Use the **Administrator Password** to set or change a administrator password.

### → User Password

Use the **User Password** to set or change a user password.

## 4.6 Boot

Use the **Boot** menu (**BIOS Menu 19**) to configure system boot options.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Main      Advanced  Chipset  Security  Boot      Save & Exit

Boot Configuration
Bootup NumLock State          [On]
Quiet Boot                    [Enabled]
Launch PXE OpROM              [Disabled]
Option ROM Messages          [Force BIOS]
UEFI Boot                    [Disabled]

Boot Option Priorities
Boot Option #1                [P0: SATADOM-SH SME 4]

Hard Drive BBS Priorities

Select the keyboard
NumLock state

-----
←→: Select Screen
↑ ↓: Select Item
Enter>Select
F1  General Help
F2  Previous Values
F3  Optimized
Defaults
F4  Save
ESC Exit

Version 2.18.1263. Copyright (C) 2018 American Megatrends, Inc.
    
```

### BIOS Menu 21: Boot

### → Bootup NumLock State [On]

Use the **Bootup NumLock State** BIOS option to specify if the number lock setting must be modified during boot up.

- **On**                      **DEFAULT**                      Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

## ITG-100AI Embedded System

- ➔ **Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

### ➔ **Quiet Boot [Enabled]**

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- ➔ **Disabled** Normal POST messages displayed
- ➔ **Enabled** **DEFAULT** OEM Logo displayed instead of POST messages

### ➔ **Launch PXE OpROM [Disabled]**

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

- ➔ **Disabled** **DEFAULT** Ignore all PXE Option ROMs
- ➔ **Enabled** Load PXE Option ROMs.

### ➔ **Option ROM Messages [Force BIOS]**

Use the **Option ROM Messages** option to set the Option ROM display mode.

- ➔ **Force BIOS** **DEFAULT** Sets display mode to force BIOS.
- ➔ **Keep Current** Sets display mode to current.

### ➔ **UEFI Boot [Disabled]**

Use the **UEFI Boot** option to enable or disable to boot from the UEFI devices.

- ➔ **Enabled** Boot from UEFI devices is enabled.

➔ **Disabled**    **DEFAULT**    Boot from UEFI devices is disabled.

### ➔ **Boot Option Priority**

Use the **Boot Option Priority** function to set the system boot sequence from the available devices. The drive sequence also depends on the boot sequence in the individual device section.

### ➔ **Hard Drive BBS Priorities**

Use the **Hard Drive BBS Priorities** option to set the order of the legacy devices in this group.

## 4.7 Exit

Use the **Exit** menu (**BIOS Menu 22**) to load default BIOS values, optimal failsafe values and to save configuration changes.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Main   Advanced  Chipset  Security  Boot   Save & Exit
-----
Save Changes and Reset
Discard Changes and Reset

Restore Defaults
Save as User Defaults
Restore User Defaults

-----
<->: Select Screen
↑ ↓: Select Item
Enter>Select
F1   General Help
F2   Previous Values
F3   Optimized
Defaults
F4   Save
ESC  Exit

Version 2.18.1263. Copyright (C) 2018 American Megatrends, Inc.
    
```

**BIOS Menu 22:Exit**

## ITG-100AI Embedded System

### → **Save Changes and Reset**

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

### → **Discard Changes and Reset**

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

### → **Restore Defaults**

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

### → **Save as User Defaults**

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

### → **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Chapter

**5**

# Software Installation

---



## ITG-100AI Embedded System

### 5.1 Available Drivers

All the drivers for the ITG-100AI are available on IEI Resource Download Center (<https://download.ieiworld.com>). Type ITG-100AI and press Enter to find all the relevant software, utilities, and documentation.


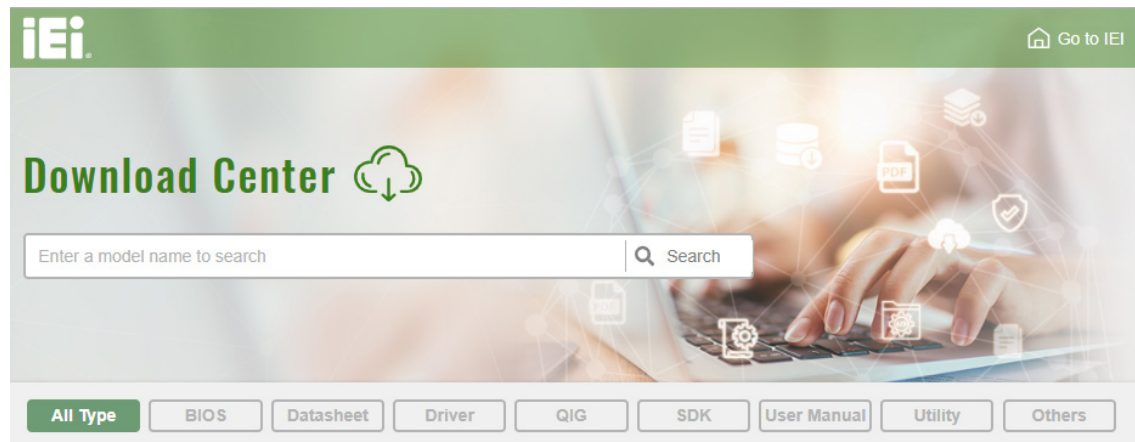


Figure 5-1: IEI Resource Download Center

#### 5.1.1 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

**Step 1:** Go to <https://download.ieiworld.com>. Type ITG-100AI and press Enter.

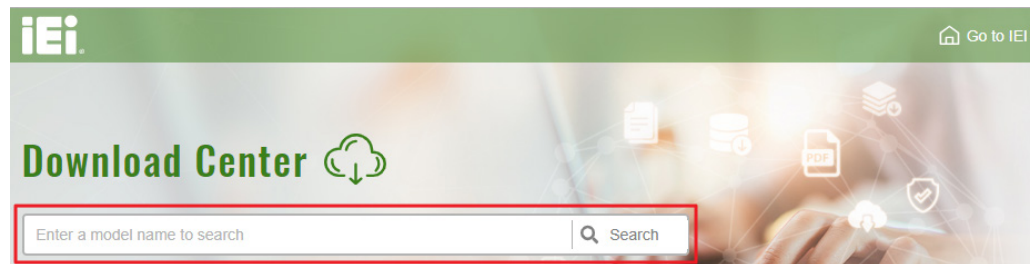

**Step 2:** All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.

[All Type](#)
[BIOS](#)
[Datasheet](#)
[Driver](#)
[QIG](#)
[SDK](#)
[User Manual](#)
[Utility](#)
[Others](#)

**WAFER-BT-i1** [Product Info](#)

[Embedded Computer](#) ▶ [Single Board Computer](#) ▶ [Embedded Board](#)  
 3.5" SBC with Intel® 22nm Atom™/Celeron® on-board SoC

**Driver**

File Name	Published	Version	File Checksum
<a href="#">7B000-001033-RS V2.3.iso (2.23 GB)</a>	2017/10/03	2.30	3B2DB1F792779A93A8F50DDBC3943E30

**Step 3:** Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (❶), or click the small arrow to find an individual driver and click the file name to download (❷).




**NOTE:**

To install software from the downloaded ISO image file in Windows 8, 8.1 or 10, double-click the ISO file to mount it as a virtual drive to view its content. On Windows 7 system, an additional tool (such as Virtual CD-ROM Control Panel from Microsoft) is needed to mount the file.


## 5.2 OpenVINO™ Toolkit Installation

To install OpenVINO™ Toolkit via website, follow the steps below.

**Step 1:** Go to <https://software.intel.com/en-us/openvino-toolkit>.

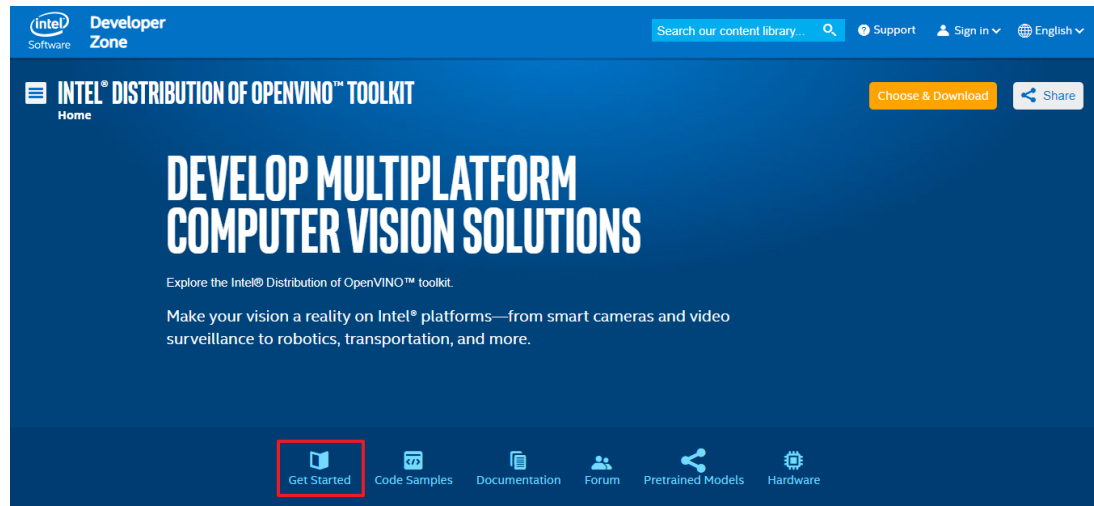

**Step 2:** Click "Get Started" then choose your configuration from "Development Environment Installation Guides".

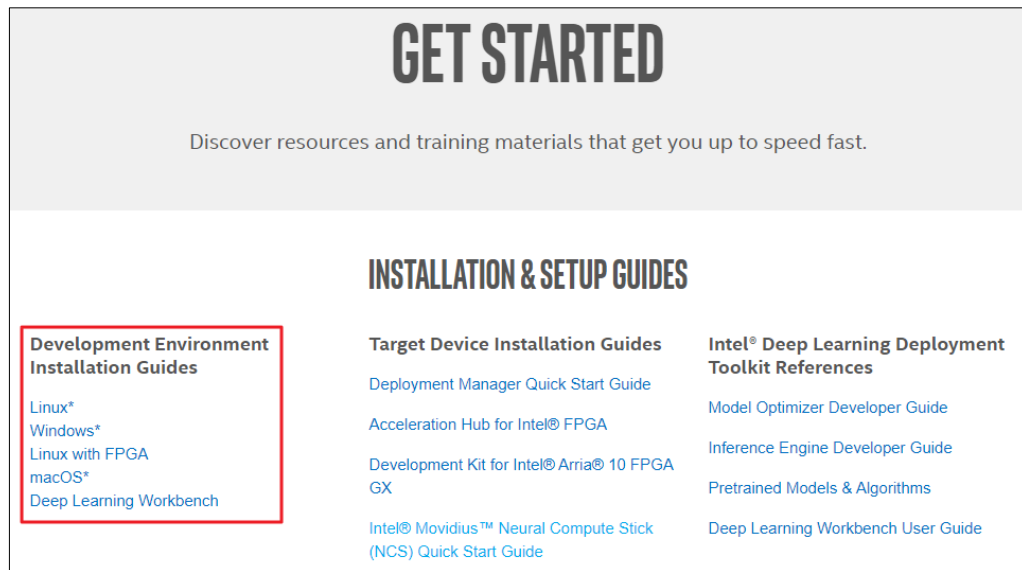

**Step 3:** Follow the instruction to complete the installation procedure.

Appendix

**A**

# Regulatory Compliance

---

**DECLARATION OF CONFORMITY**

This equipment is in conformity with the following EU directives:

- EMC Directive (2014/30/EU)
- Low-Voltage Directive (2014/35/EU)
- RoHS II Directive (2011/65/EU, 2015/863/EU)

If the user modifies and/or install other devices in the equipment, the CE conformity declaration may no longer apply.

If this equipment has telecommunications functionality, it also complies with the requirements of the Radio Equipment Directive 2014/53/EU.

---

English

IEI Integration Corp declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

---

Български [Bulgarian]

IEI Integration Corp. декларира, че този оборудване е в съответствие със съществените изисквания и другите приложими правила на Директива 2014/53/EU

---

Česky [Czech]

IEI Integration Corp tímto prohlašuje, že tento zařizení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.

---

Dansk [Danish]

IEI Integration Corp erklærer herved, at følgende udstyr overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.

---

Deutsch [German]

IEI Integration Corp, erklärt dieses Gerät entspricht den grundlegenden Anforderungen und den weiteren entsprechenden Vorgaben der Richtlinie 2014/53/EU.

---

---

**Eesti [Estonian]**

IEI Integration Corp deklareerib seadme seadme vastavust direktiivi 2014/53/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

---

**Español [Spanish]**

IEI Integration Corp declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/EU.

---

**Ελληνική [Greek]**

IEI Integration Corp ΔΗΛΩΝΕΙ ΟΤΙ ΕΞΟΠΛΙΣΜΟΣ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU.

---

**Français [French]**

IEI Integration Corp déclare que l'appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU.

---

**Italiano [Italian]**

IEI Integration Corp dichiara che questo apparecchio è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/EU.

---

**Latviski [Latvian]**

IEI Integration Corp deklarē, ka iekārta atbilst būtiskajām prasībām un citiem ar to saistītajiem noteikumiem Direktīvas 2014/53/EU.

---

**Lietuvių [Lithuanian]**

IEI Integration Corp deklaruoja, kad šis įranga atitinka esminius reikalavimus ir kitas 2014/53/EU Direktyvos nuostatas.

---

**Nederlands [Dutch]**

IEI Integration Corp dat het toestel toestel in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU.

---

**Malti [Maltese]**

IEI Integration Corp jiddikjara li dan prodott jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 2014/53/EU.

---

## ITG-100AI Embedded System

---

Magyar [Hungarian]

IEI Integration Corp nyilatkozom, hogy a berendezés megfelel a vonatkozó alapvető követelményeknek és az 2014/53/EU irányelv egyéb előírásainak.

---

Polski [Polish]

IEI Integration Corp oświadcza, że wyrobu jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/53/EU.

---

Português [Portuguese]

IEI Integration Corp declara que este equipamento está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/EU.

---

Româna [Romanian]

IEI Integration Corp declară că acest echipament este în conformitate cu cerințele esențiale și cu celelalte prevederi relevante ale Directivei 2014/53/EU.

---

Slovensko [Slovenian]

IEI Integration Corp izjavlja, da je ta opreme v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 2014/53/EU.

---

Slovensky [Slovak]

IEI Integration Corp týmto vyhlasuje, že zariadenia spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53/EU.

---

Suomi [Finnish]

IEI Integration Corp vakuuttaa täten että laitteet on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

---

Svenska [Swedish]

IEI Integration Corp förklarar att denna utrustningstyp står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU.

---

**FCC WARNING**

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**Federal Communication Commission Interference Statement**

This equipment has been assembled with components that comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Appendix

**B**

# Safety Precautions

---

**WARNING:**

The precautions outlined in this chapter should be strictly followed. Failure to follow these precautions may result in permanent damage to the ITG-100AI.

## B.1 Safety Precautions

Please follow the safety precautions outlined in the sections that follow:

### B.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- **Follow the electrostatic precautions** outlined below whenever the device is opened.
- **Make sure the power is turned off and the power cord is disconnected** whenever the ITG-100AI is being installed, moved or modified.
- **To prevent the risk of electric shock, make sure power cord is unplugged from wall socket.** To fully disengage the power to the unit, please disconnect the power cord from the AC outlet. Refer servicing to qualified service personnel. The AC outlet shall be readily available and accessible.
- **Do not apply voltage levels that exceed the specified voltage range.** Doing so may cause fire and/or an electrical shock. Use a power cord that matches the voltage of the power outlet, which has been approved and complies with the safety standard of your particular country.
- **Electric shocks can occur** if the ITG-100AI chassis is opened when it is running. To avoid risk of electric shock, this device must only be connected to a supply mains with protective earth.
- **Do not drop or insert any objects** into the ventilation openings of the ITG-100AI.

## ITG-100AI Embedded System

- ***If considerable amounts of dust, water, or fluids enter the device***, turn off the power supply immediately, unplug the power cord, and contact the ITG-100AI vendor.
- **DO NOT:**
  - Drop the device against a hard surface.
  - Strike or exert excessive force onto the LCD panel.
  - Touch any of the LCD panels with a sharp object
  - In a site where the ambient temperature exceeds the rated temperature

### B.1.2 Anti-static Precautions

---



#### **WARNING:**

Failure to take ESD precautions during the installation of the ITG-100AI may result in permanent damage to the ITG-100AI and severe injury to the user.

---

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the ITG-100AI. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the ITG-100AI is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- ***Self-grounding:*** Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** When configuring or working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- ***Only handle the edges of the electrical component:*** When handling the electrical component, hold the electrical component by its edges.

### B.1.3 Product Disposal

---


**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

---

- Outside the European Union – If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union – The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

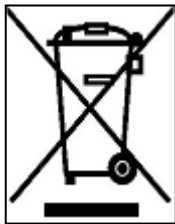

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

## ITG-100AI Embedded System

### B.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the ITG-100AI, please follow the guidelines below.



#### **WARNING:**

- For safety reasons, turn-off the power and unplug the panel PC before cleaning.
  - If you dropped any material or liquid such as water onto the panel PC when cleaning, unplug the power cable immediately and contact your dealer or the nearest service center. Always make sure your hands are dry when unplugging the power cable.
- 

#### B.2.1 Maintenance and Cleaning

Prior to cleaning any part or component of the ITG-100AI, please read the details below.

- Except for the LCD panel, never spray or squirt liquids directly onto any other components. To clean the LCD panel, gently wipe it with a piece of soft dry cloth or a slightly moistened cloth.
- The interior of the device does not require cleaning. Keep fluids away from the device interior.
- Be cautious of all small removable components when vacuuming the device.
- Never drop any objects or liquids through the openings of the device.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the device.
- Avoid eating, drinking and smoking within vicinity of the device.

#### B.2.2 Cleaning Tools

Some components in the ITG-100AI may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the ITG-100AI.

- **Cloth** – Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the device.
- **Water or rubbing alcohol** – A cloth moistened with water or rubbing alcohol

can be used to clean the device.

- **Using solvents** – The use of solvents is not recommended when cleaning the device as they may damage the plastic parts.
- **Vacuum cleaner** – Using a vacuum specifically designed for computers is one of the best methods of cleaning the device. Dust and dirt can restrict the airflow in the device and cause its circuitry to corrode.
- **Cotton swabs** – Cotton swabs moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- **Foam swabs** – Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Appendix

**C**

# BIOS Menu Options

---

Below is a list of BIOS configuration options in the BIOS chapter.

<input type="checkbox"/>	<b>System Date [xx/xx/xx]</b> .....	<b>29</b>
<input type="checkbox"/>	<b>System Time [xx:xx:xx]</b> .....	<b>29</b>
<input type="checkbox"/>	<b>ACPI Sleep State [S3 only (Suspend to RAM)]</b> .....	<b>30</b>
<input type="checkbox"/>	<b>Serial Port [Enabled]</b> .....	<b>32</b>
<input type="checkbox"/>	<b>Device Mode [RS232]</b> .....	<b>32</b>
<input type="checkbox"/>	<b>Serial Port [Enabled]</b> .....	<b>32</b>
<input type="checkbox"/>	<b>Device Mode [RS232]</b> .....	<b>32</b>
<input type="checkbox"/>	<b>Serial Port [Enabled]</b> .....	<b>33</b>
<input type="checkbox"/>	<b>Serial Port [Enabled]</b> .....	<b>33</b>
<input type="checkbox"/>	<b>PC Health Status</b> .....	<b>34</b>
<input type="checkbox"/>	<b>Wake system with Fixed Time [Disabled]</b> .....	<b>35</b>
<input type="checkbox"/>	<b>Console Redirection [Disabled]</b> .....	<b>36</b>
<input type="checkbox"/>	<b>Terminal Type [ANSI]</b> .....	<b>37</b>
<input type="checkbox"/>	<b>Bits per second [115200]</b> .....	<b>37</b>
<input type="checkbox"/>	<b>Data Bits [8]</b> .....	<b>38</b>
<input type="checkbox"/>	<b>Parity [None]</b> .....	<b>38</b>
<input type="checkbox"/>	<b>Stop Bits [1]</b> .....	<b>38</b>
<input type="checkbox"/>	<b>Intel® Virtualization Technology [Disabled]</b> .....	<b>39</b>
<input type="checkbox"/>	<b>EIST [Enabled]</b> .....	<b>39</b>
<input type="checkbox"/>	<b>C-States [Disabled]</b> .....	<b>40</b>
<input type="checkbox"/>	<b>USB Devices</b> .....	<b>40</b>
<input type="checkbox"/>	<b>Legacy USB Support [Enabled]</b> .....	<b>41</b>
<input type="checkbox"/>	<b>Auto Recovery Function [Disabled]</b> .....	<b>41</b>
<input type="checkbox"/>	<b>SATA Mode Selection [AHCI]</b> .....	<b>42</b>
<input type="checkbox"/>	<b>Hot Plug [Disabled]</b> .....	<b>42</b>
<input type="checkbox"/>	<b>Memory Information</b> .....	<b>44</b>
<input type="checkbox"/>	<b>Primary Display [IGD]</b> .....	<b>45</b>
<input type="checkbox"/>	<b>DVMT Pre-Allocated [256MB]</b> .....	<b>45</b>
<input type="checkbox"/>	<b>DVMT Total Gfx Mem [Max]</b> .....	<b>46</b>
<input type="checkbox"/>	<b>Restore AC Power Loss [Last State]</b> .....	<b>46</b>
<input type="checkbox"/>	<b>Power Saving Function (EUP) [Disabled]</b> .....	<b>47</b>
<input type="checkbox"/>	<b>OS Selection [Windows]</b> .....	<b>47</b>
<input type="checkbox"/>	<b>Compliance Mode [Disabled]</b> .....	<b>47</b>



## ITG-100AI Embedded System

<input type="checkbox"/>	PCIe Speed [Auto].....	48
<input type="checkbox"/>	SCC SD Card Support [Enabled].....	48
<input type="checkbox"/>	SCC eMMC Support [Enabled].....	49
<input type="checkbox"/>	eMMC Max Speed [HS400].....	49
<input type="checkbox"/>	Administrator Password .....	50
<input type="checkbox"/>	User Password .....	50
<input type="checkbox"/>	Bootup NumLock State [On].....	50
<input type="checkbox"/>	Quiet Boot [Enabled] .....	51
<input type="checkbox"/>	Launch PXE OpROM [Disabled].....	51
<input type="checkbox"/>	Option ROM Messages [Force BIOS].....	51
<input type="checkbox"/>	UEFI Boot [Disabled] .....	51
<input type="checkbox"/>	Boot Option Priority.....	52
<input type="checkbox"/>	Hard Drive BBS Priorities.....	52
<input type="checkbox"/>	Save Changes and Reset .....	53
<input type="checkbox"/>	Discard Changes and Reset .....	53
<input type="checkbox"/>	Restore Defaults .....	53
<input type="checkbox"/>	Save as User Defaults .....	53
<input type="checkbox"/>	Restore User Defaults .....	53

Appendix

**D**

# Terminology

---

## ITG-100AI Embedded System

<b>AC '97</b>	Audio Codec 97 (AC'97) refers to a codec standard developed by Intel® in 1997.
<b>ACPI</b>	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.
<b>AHCI</b>	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.
<b>ATA</b>	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.
<b>ARMD</b>	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.
<b>ASKIR</b>	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude (“volume”) of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.
<b>BIOS</b>	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user
<b>CODEC</b>	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.
<b>CompactFlash®</b>	CompactFlash® is a solid-state storage device. CompactFlash® devices use flash memory in a standard size enclosure. Type II is thicker than Type I, but a Type II slot can support both types.
<b>CMOS</b>	Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors.
<b>COM</b>	COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male D-sub 9 connector.
<b>DAC</b>	The Digital-to-Analog Converter (DAC) converts digital signals to analog signals.
<b>DDR</b>	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.

<b>DMA</b>	Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory.
<b>DIMM</b>	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module.
<b>DIO</b>	The digital inputs and digital outputs are general control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.
<b>EHCI</b>	The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers.
<b>EIDE</b>	Enhanced IDE (EIDE) is a newer IDE interface standard that has data transfer rates between 4.0 MBps and 16.6 MBps.
<b>EIST</b>	Enhanced Intel® SpeedStep Technology (EIST) allows users to modify the power consumption levels and processor performance through application software. The application software changes the bus-to-core frequency ratio and the processor core voltage.
<b>FSB</b>	The Front Side Bus (FSB) is the bi-directional communication channel between the processor and the Northbridge chipset.
<b>GbE</b>	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gbps and complies with the IEEE 802.3-2005 standard.
<b>GPIO</b>	General purpose input
<b>HDD</b>	Hard disk drive (HDD) is a type of magnetic, non-volatile computer storage device that stores digitally encoded data.
<b>ICH</b>	The Input/Output Control Hub (ICH) is an Intel® Southbridge chipset.
<b>IrDA</b>	Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other.
<b>L1 Cache</b>	The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor.
<b>L2 Cache</b>	The Level 2 Cache (L2 Cache) is an external processor memory cache.

## ITG-100AI Embedded System

<b>LCD</b>	Liquid crystal display (LCD) is a flat, low-power display device that consists of two polarizing plates with a liquid crystal panel in between.
<b>LVDS</b>	Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer.
<b>POST</b>	The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.
<b>RAM</b>	Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
<b>SATA</b>	Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA II bus has data transfer speeds of up to 3.0 Gbps.
<b>S.M.A.R.T</b>	Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
<b>UART</b>	Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
<b>UHCI</b>	The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
<b>USB</b>	The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates and USB 2.0 supports 480Mbps data transfer rates.
<b>VGA</b>	The Video Graphics Array (VGA) is a graphics display system developed by IBM.

Appendix

**E**

# Hazardous Materials Disclosure

---

## ITG-100AI Embedded System

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	O	O	O	O	O	O
Display	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O
Battery	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯 醚 (PBDE)
壳体	○	○	○	○	○	○
显示	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求。