



MODEL:  
**TANK-760**

High Performance Fanless Embedded System with Intel® Core i5-4400E/  
Celeron 2000E processor, VGA, HDMI, DisplayPort,  
9-36V DC input and RoHS Compliant

# User Manual

# Revision

---

Date	Version	Changes
22 August, 2014	1.00	Initial release

# Copyright

---

## COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

## TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

# Table of Contents

<b>1 INTRODUCTION.....</b>	<b>1</b>
1.1 OVERVIEW.....	2
1.2 MODEL VARIATIONS.....	2
1.3 FEATURES.....	2
1.4 TECHNICAL SPECIFICATIONS.....	3
1.5 CONNECTOR PANEL.....	5
1.5.1 Front Panel.....	5
1.5.2 Rear Panel.....	6
1.6 LED INDICATORS.....	8
1.7 DIMENSIONS.....	9
<b>2 UNPACKING.....</b>	<b>10</b>
2.1 ANTI-STATIC PRECAUTIONS.....	11
2.2 UNPACKING PRECAUTIONS.....	11
2.3 UNPACKING CHECKLIST.....	12
<b>3 INSTALLATION.....</b>	<b>14</b>
3.1 INSTALLATION PRECAUTIONS.....	15
3.2 HARD DISK DRIVE (HDD) INSTALLATION.....	15
3.3 SO-DIMM INSTALLATION.....	18
3.4 PLUGGABLE DC-IN TERMINAL BLOCK INSTALLATION.....	19
3.5 FOOT PAD INSTALLATION.....	20
3.6 MOUNTING THE SYSTEM WITH MOUNTING BRACKETS.....	21
3.7 EXTERNAL PERIPHERAL INTERFACE CONNECTORS.....	22
3.7.1 ACC Mode Switch.....	23
3.7.2 AT/ATX Power Mode Switch.....	23
3.7.3 Audio Connector.....	24
3.7.4 CAN-bus Terminal Block.....	24
3.7.5 Digital I/O Connector.....	24
3.7.6 HDMI Connector.....	25
3.7.7 LAN Connectors.....	26

## TANK-760 Embedded System

3.7.8	<i>Power Input, 4-pin Terminal Block</i> .....	28
3.7.1	<i>Power Input, 4-pin DIN Connector</i> .....	28
3.7.2	<i>RS-232 Serial Port Connectors</i> .....	29
3.7.3	<i>RS-232/422/485 Serial Port Connectors</i> .....	31
3.7.4	<i>USB Connectors</i> .....	32
3.7.5	<i>VGA Connector</i> .....	33
3.8	<b>POWERING ON/OFF THE SYSTEM</b> .....	35
<b>4</b>	<b>BIOS</b> .....	<b>36</b>
4.1	<b>INTRODUCTION</b> .....	37
4.1.1	<i>Starting Setup</i> .....	37
4.1.2	<i>Using Setup</i> .....	37
4.1.3	<i>Getting Help</i> .....	38
4.1.4	<i>Unable to Reboot after Configuration Changes</i> .....	38
4.1.5	<i>BIOS Menu Bar</i> .....	38
4.2	<b>MAIN</b> .....	40
4.3	<b>ADVANCED</b> .....	41
4.3.1	<i>ACPI Settings</i> .....	42
4.3.2	<i>RTC Wake Settings</i> .....	43
4.3.3	<i>CPU Configuration</i> .....	45
4.3.4	<i>SATA Configuration</i> .....	47
4.3.5	<i>Intel(R) Rapid Start Technology</i> .....	48
4.3.6	<i>USB Configuration</i> .....	49
4.3.7	<i>F81866 Super IO Configuration</i> .....	50
4.3.7.1	<i>Serial Port n Configuration</i> .....	51
4.3.8	<i>F81866 H/W Monitor</i> .....	56
4.3.9	<i>Serial Port Console Redirection</i> .....	56
4.3.10	<i>iEi Feature</i> .....	60
4.4	<b>CHIPSET</b> .....	61
4.4.1	<i>PCH-IO Configuration</i> .....	62
4.4.1.1	<i>PCH Azalia Configuration</i> .....	63
4.4.2	<i>System Agent (SA) Configuration</i> .....	64
4.4.2.1	<i>Graphics Configuration</i> .....	64
4.4.2.2	<i>Memory Configuration</i> .....	67
4.5	<b>BOOT</b> .....	68

4.6 SECURITY .....	70
4.7 SAVE & EXIT .....	71
<b>A SAFETY PRECAUTIONS .....</b>	<b>72</b>
A.1 SAFETY PRECAUTIONS .....	73
<i>A.1.1 General Safety Precautions</i> .....	73
<i>A.1.2 Anti-static Precautions</i> .....	73
<i>A.1.3 Product Disposal</i> .....	74
A.2 MAINTENANCE AND CLEANING PRECAUTIONS .....	75
<i>A.2.1 Maintenance and Cleaning</i> .....	75
<i>A.2.2 Cleaning Tools</i> .....	75
<b>B HAZARDOUS MATERIALS DISCLOSURE .....</b>	<b>77</b>
B.1 HAZARDOUS MATERIALS DISCLOSURE TABLE FOR IPB PRODUCTS CERTIFIED AS ROHS COMPLIANT UNDER 2002/95/EC WITHOUT MERCURY .....	78

# List of Figures

Figure 1-1: TANK-760 .....	2
Figure 1-2: TANK-760 Front Panel .....	6
Figure 1-3: TANK-760 Rear Panel .....	7
Figure 1-4: TANK-760 LED Indicators.....	8
Figure 1-5: Physical Dimensions (mm) .....	9
Figure 3-1: Bottom Panel Retention Screws.....	16
Figure 3-2: HDD Bracket Retention Screws.....	16
Figure 3-3: HDD Installation .....	17
Figure 3-4: HDD Retention Screws .....	17
Figure 3-5: SO-DIMM Socket .....	18
Figure 3-6: SO-DIMM Installation .....	19
Figure 3-7: Pluggable DC-in Terminal Block Installation .....	20
Figure 3-8: Foot Pad Installation.....	21
Figure 3-9: Mounting Bracket Retention Screws .....	21
Figure 3-10: ACC Mode Switch .....	23
Figure 3-11: AT/ATX Power Mode Switch .....	23
Figure 3-12: Audio Connector .....	24
Figure 3-13: CAN-bus Terminal Block Pinouts.....	24
Figure 3-14: Digital I/O Connector Pinout Location .....	25
Figure 3-15: LAN Connection .....	27
Figure 3-16: RJ-45 Ethernet Connector.....	27
Figure 3-17: 4-pin Terminal Block Pinout Location .....	28
Figure 3-18: Power Input Connector.....	29
Figure 3-19: Serial Device Connector.....	30
Figure 3-20: Serial Port Pinout Location .....	30
Figure 3-21: Serial Device Connector.....	31
Figure 3-22: Serial Port Pinout Location .....	32
Figure 3-23: USB Device Connection .....	33
Figure 3-24: VGA Connector .....	34
Figure 3-25: VGA Connector .....	34

**Figure 3-26: Power Button.....35**



# List of Tables

---

<b>Table 1-1: Technical Specifications</b> .....	<b>5</b>
<b>Table 3-1: Digital I/O Connector Pinouts</b> .....	<b>25</b>
<b>Table 3-2: HDMI Connector Pinouts</b> .....	<b>26</b>
<b>Table 3-3: LAN Pinouts</b> .....	<b>27</b>
<b>Table 3-4: RJ-45 Ethernet Connector LEDs</b> .....	<b>28</b>
<b>Table 3-5: Power Input Pinouts</b> .....	<b>29</b>
<b>Table 3-6: Serial Port Pinouts</b> .....	<b>30</b>
<b>Table 3-7: DB-9 Connector Pinouts</b> .....	<b>32</b>
<b>Table 3-8: USB Port Pinouts</b> .....	<b>33</b>
<b>Table 3-9: VGA Connector Pinouts</b> .....	<b>35</b>
<b>Table 4-1: BIOS Navigation Keys</b> .....	<b>38</b>

Chapter

1

# Introduction

---

## 1.1 Overview



**Figure 1-1: TANK-760**

The TANK-760 is a platform based on the 4th generation Intel® Core™ i5 or Celeron® processor and the Intel® HM86 chipset.

The TANK-760 contains VGA, DisplayPort and HDMI video outputs, which can be applied to multi-display application and support high Full HD video quality. The TANK-760 is equipped with an abundant of I/O ports and supports a wide range of operating temperature. Four USB 3.0 and two USB 2.0 ports provide flexible expansion options. Serial device connectivity is provided by four RS-232 and two RS-232/422/485 ports.

The TANK-760 can be used as a control center for in-vehicle application, such as buses or trucks. With dual CAN-bus port, more peripheral devices can be connected for vehicle applications.

## 1.2 Model Variations

The model variations of the TANK-760 Series are listed below.

Model No.	Processor
TANK-760-HM86i-i5/4G-R10	Intel® Core™ i5 dual-core i5-4400E 2.7 GHz,
TANK-760-HM86i-C/4G-R10	Intel® Celeron® dual-core 2000E 2.2 GHz

## 1.3 Features

The TANK-760 features are listed below:

- Intel® Core™ i5-4400E 2.7 GHz dual-core processor

## TANK-760 Embedded System

Intel® Celeron® 2000E 2.2 GHz dual-core processor

- One CFast socket
- Support three independent video outputs
- Built-in two 2.5" SATA 6Gb/s HDD bays
- 9 V~36 V DC input
- Support IEI iRIS-2400 (IPMI 2.0 compliant)

### 1.4 Technical Specifications

The TANK-760 technical specifications are listed in **Table 1-1**.

Specifications	
Chassis	
Color	Black C + Silver
Dimensions (WxDxH)	310 x 200 x 69.8mm
System Fan	Fanless
Chassis Construction	Extruded aluminum alloy Heavy duty steel sheet
<b>Motherboard</b>	
CPU	Intel® Core i5-4400E/ Celeron 2000E
Chipset	Intel® HM86
Memory	2 x 204-pin DDR3 SDRAM SO-DIMM
<b>iRIS Module</b>	
iRIS Solution	iRIS-2400
<b>Storage</b>	
Hard Drive	2 x 2.5" SATA HDD Bay
CFast	1 x CFast
SD card	N/A
<b>I/O Interfaces</b>	
USB	4 x USB 3.0 ports 2 x USB 2.0 ports

Specifications	
Ethernet	2 x RJ-45 1 x PCIe GbE by Intel® I210 1 x PCIe GbE by Intel® I217LM
RS-232	4 x DB-9 with isolation
RS-232/422/485	2 x DB-9 RS-232/422/485 with isolation
Digital I/O	8-bit digital I/O, 4-bit input/4-bit output
CAN-bus	2 x Phoenix terminal block with isolation
Display	1 x VGA, 1 x HDMI, 1 x DisplayPort
Resolution	VGA: Up to 1920 x 1200@60Hz HDMI: Up to 2500 x 1600@60Hz DisplayPort: Up to 2500 x 1600@60Hz
Audio	1 x Line-out, 1 x Mic-in
Other	Optional 4-channel audio/video input PCIe Mini Card
Wireless	1 x 802.11 a/b/g/n ( optional)
Expansions	
PCIe Mini	3 x Full Size (one support mSATA)
Power	
Power Input	Terminal Block: 9 (+/- 0.3v) V~36 V DC DC Jack: 9 (+/- 0.3v) V~36 V DC
Power Consumption	19 V@3.2 A (Intel® Core™ i5 i5-4400E with 4 GB memory)
Reliability	
Mounting	Wall mount
Operating Temperature	-20°C ~ 70°C with air flow (SSD)
Storage Temperature	-30°C ~ 80°C
Humidity	5% ~ 95%, non-condensing
Operating Shock	Half-sine wave shock 5G, 11ms, 3 shocks per axis

## TANK-760 Embedded System

Specifications	
Operating Vibration	MIL-STD-810F 514.5C-2 (with SSD)
Weight (Net/Gross)	3.8Kg/6.5Kg
Safety & EMC	CE/FCC E-mark
OS	
Supported OS	Microsoft® Windows 8E Microsoft® WES7E

**Table 1-1: Technical Specifications**

## 1.5 Connector Panel

### 1.5.1 Front Panel

The TANK-760 front panel contains:

- 2 x CAN-bus terminal blocks with isolation
- 1 x CFast
- 1 x DisplayPort
- 1 x OLED indicators
- 1 x Power button
- 2 x RS-232/422/485 serial ports with isolation
- 2 x USB 2.0 ports
- 2 x Wi-Fi antenna connectors

An overview of the front panel is shown in **Figure 1-2**.

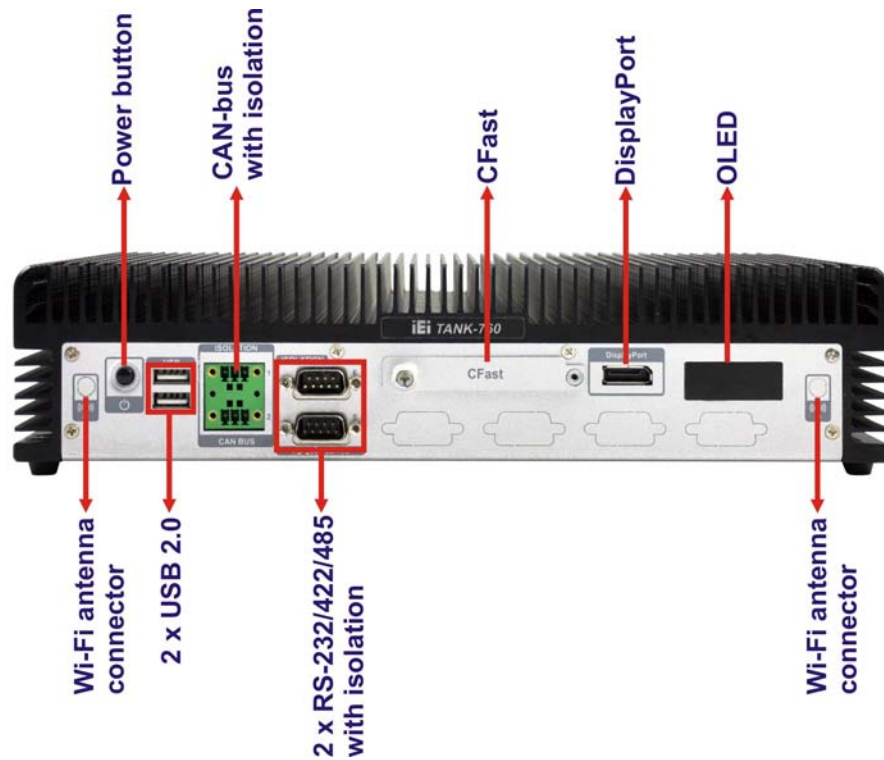


Figure 1-2: TANK-760 Front Panel

### 1.5.2 Rear Panel

The TANK-760 rear panel contains:

- 1 x ACC switch
- 1 x AT/ATX switch
- 1 x DIO port
- 1 x HDMI port
- 1 x Line-out port (green)
- 1 x Mic-in port (pink)
- 1 x 4-pin power jack for 9 (+/- 0.3v) V ~ 36V power input
- 1 x 4-pin terminal block for 9 (+/- 0.3v) V ~ 36V power input
- 1 x Reset button
- 2 x RJ-45 LAN ports
- 4 x RS-232 serial ports with isolation
- 4 x USB 3.0 ports
- 1 x VGA port

## TANK-760 Embedded System

An overview of the rear panel is shown in **Figure 1-3** below.


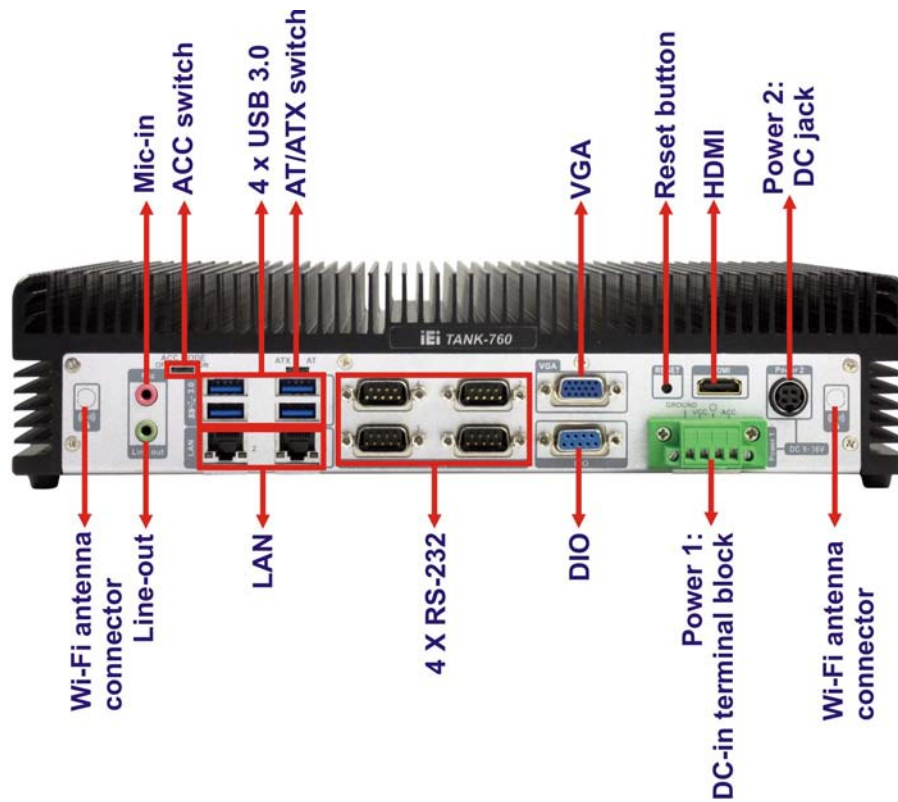


Figure 1-3: TANK-760 Rear Panel



### 1.6 LED Indicators

There are several indicators on the front panel of the TANK-760 as shown in **Figure 1-4**.

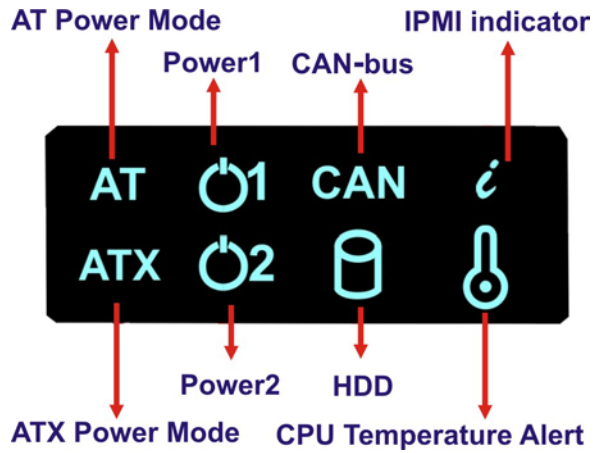

**Figure 1-4: TANK-760 LED Indicators**



**WARNING:**

The CPU Temperature Alert LED turns red when the CPU temperature is too high. If this situation occurs, lower the environment temperature or close some running applications to cool down the CPU.

TANK-760 Embedded System

1.7 Dimensions

The physical dimensions are shown below:

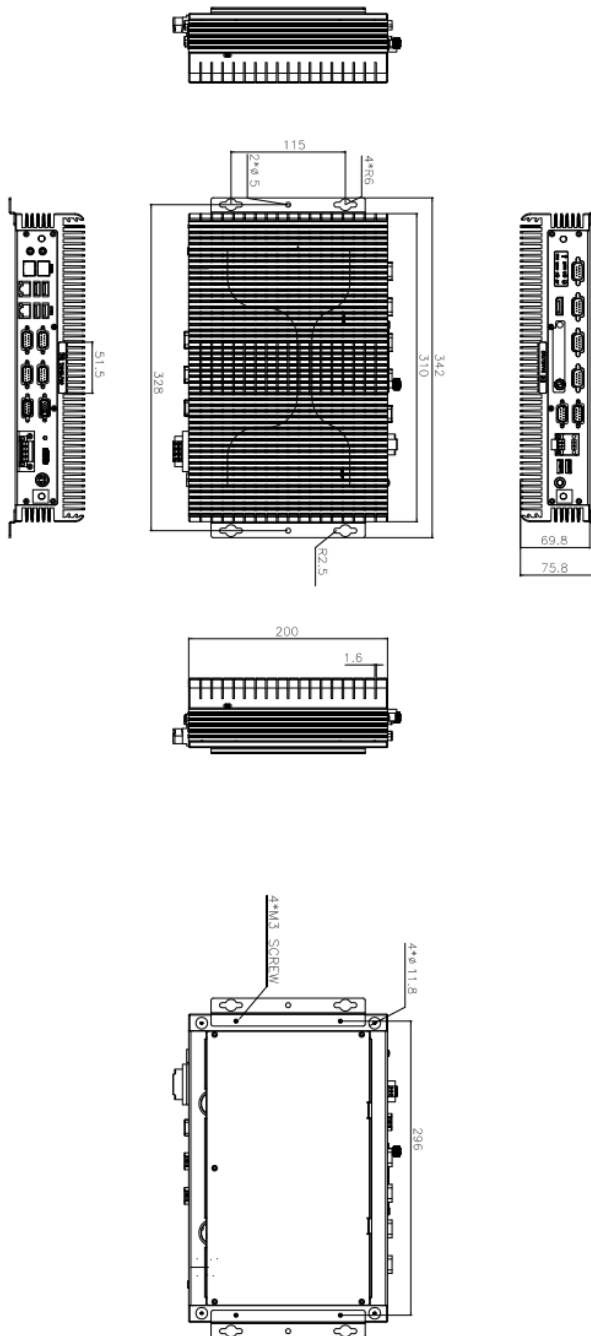


Figure 1-5: Physical Dimensions (mm)

Chapter

2

# Unpacking

---

## 2.1 Anti-static Precautions

---



### WARNING:

Failure to take ESD precautions during installation may result in permanent damage to the TANK-760 and severe injury to the user.

---

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the TANK-760. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the TANK-760 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** Touch any grounded conducting material before handling the board. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the TANK-760, place it on an anti-static pad. This reduces the possibility of ESD damaging the TANK-760.

## 2.2 Unpacking Precautions

When the TANK-760 is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 2.1**.
- Make sure the packing box is facing upwards so the TANK-760 does not fall out of the box.
- Make sure all the components shown in **Section 2.3** are present.

### 2.3 Unpacking Checklist





**NOTE:**

If some of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the TANK-760 from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to [sales@iei.com.tw](mailto:sales@iei.com.tw).

The TANK-760 is shipped with the following components:

Quantity	Item and Part Number	Image
Standard		
1	TANK-760 Series	
1	Power adapter (P/N: 63040-010090-050-RS)	
1	Power cord (P/N: 32702-000401-100-RS)	
2	Mounting brackets (P/N: 41020-0163J4-00-RS)	
8	Screw kits (P/N: 19600-000259-00-RS)	
1	Pluggable DC-in terminal block (P/N: 33001-000435-RS)	

TANK-760 Embedded System

Quantity	Item and Part Number	Image
Standard		
1	Utility CD	
1	One Key Recovery CD	

Chapter

3

# Installation

---

### 3.1 Installation Precautions

During installation, be aware of the precautions below:


- **Read the user manual:** The user manual provides a complete description of the TANK-760, installation instructions and configuration options.
- **DANGER! Disconnect Power:** Power to the TANK-760 must be disconnected during the installation process, or before any attempt is made to access the rear panel. Electric shock and personal injury might occur if the rear panel of the TANK-760 is opened while the power cord is still connected to an electrical outlet.
- **Qualified Personnel:** The TANK-760 must be installed and operated only by trained and qualified personnel. Maintenance, upgrades, or repairs may only be carried out by qualified personnel who are familiar with the associated dangers.
- **Air Circulation:** Make sure there is sufficient air circulation when installing the TANK-760. The TANK-760's cooling vents must not be obstructed by any objects. Blocking the vents can cause overheating of the TANK-760. Leave at least 5 cm of clearance around the TANK-760 to prevent overheating.
- **Grounding:** The TANK-760 should be properly grounded. The voltage feeds must not be overloaded. Adjust the cabling and provide external overcharge protection per the electrical values indicated on the label attached to the back of the TANK-760.

### 3.2 Hard Disk Drive (HDD) Installation

To install the hard drive, please follow the steps below:

- Step 1:** Remove the bottom panel by removing the five retention screws from the bottom panel.



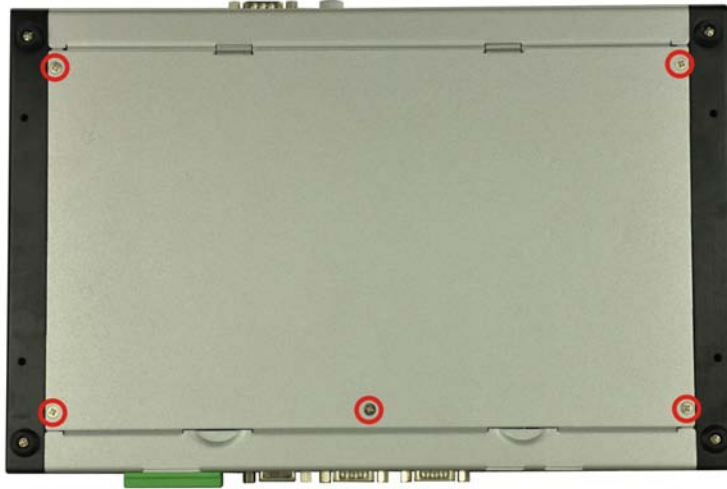

**Figure 3-1: Bottom Panel Retention Screws**


**Step 2:** Remove the four HDD bracket retention screws and unplug the SATA signal and power cables connected to the TANK-760. And then lift the HDD bracket out of the TANK-760 and put it on a flat surface.



**Figure 3-2: HDD Bracket Retention Screws**


## TANK-760 Embedded System

**Step 3:** Attach each HDD to the HDD bracket, and then slide each HDD to connect the SATA connectors.

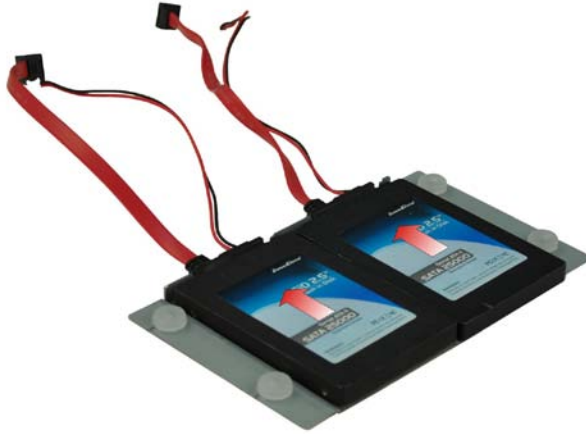

**Figure 3-3: HDD Installation**

**Step 4:** Secure each HDD with the HDD bracket by four retention screws (eight in all).

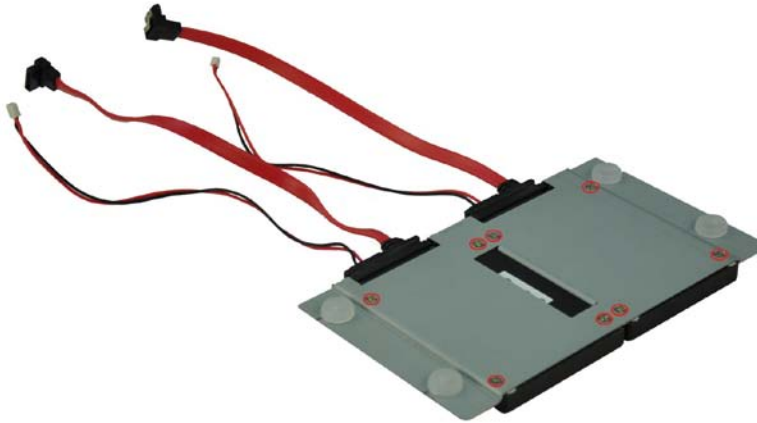

**Figure 3-4: HDD Retention Screws**

**Step 5:** Secure the HDD bracket with TANK-760 by the four retention screws that were previously removed.

**Step 6:** Reconnect the SATA signal and power cables to the TANK-760.

**Step 7:** Reinstall the bottom panel to the TANK-760.

### 3.3 SO-DIMM Installation

**WARNING:**

Using incorrectly specified SO-DIMM may cause permanently damage the TANK-760. Please make sure the purchased SO-DIMM complies with the memory specifications of the TANK-760.

To install a SO-DIMM into a SO-DIMM socket, please follow the steps below.

- Step 1:** Remove the bottom panel by removing the five retention screws from the bottom panel (**Figure 3-1**).
- Step 2:** Unplug the SATA signal and power cables connected to the TANK-760, and then place the bottom panel on a flat surface.
- Step 3:** Locate the SO-DIMM socket on the motherboard (**Figure 3-5**).




**Figure 3-5: SO-DIMM Socket**

## TANK-760 Embedded System

**Step 4:** Align the SO-DIMM with the socket. The SO-DIMM must be oriented in such a way that the notch in the middle of the SO-DIMM must be aligned with the plastic bridge in the socket (**Figure 3-6**).

**Step 5:** Push the SO-DIMM into the socket at an angle (**Figure 3-6**).

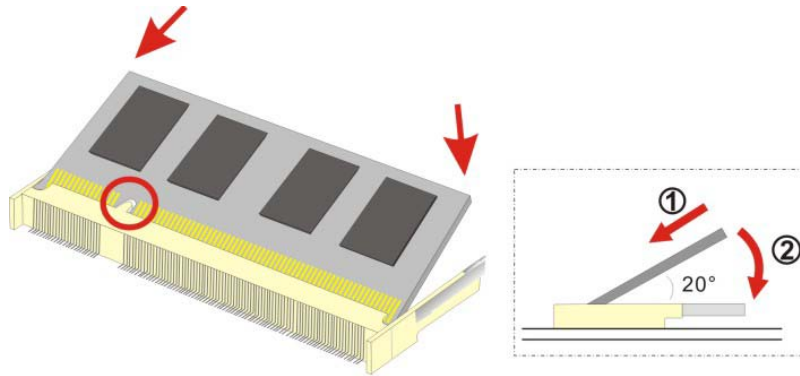

**Figure 3-6: SO-DIMM Installation**

**Step 6:** Gently pull the arms of the SO-DIMM socket out and push the rear of the SO-DIMM down (**Figure 3-6**).

**Step 7:** Release the arms on the SO-DIMM socket. They clip into place and secure the SO-DIMM in the socket.

**Step 8:** Install the bracket that was previously removed in the same position it was before.

**Step 9:** Reinstall the bottom panel to the TANK-760.

### 3.4 Pluggable DC-In Terminal Block Installation

To install the pluggable DC-in terminal block, please follow the steps below:

**Step 1:** Locate the DC-in terminal block connector. The location of the connector is shown in **Figure 1-3**.

**Step 2:** Align the pluggable DC-in terminal block with the DC-in terminal block connector on the TANK-760.

- Step 3:** Once aligned, insert the pluggable DC-in terminal block into the DC-in terminal block connector.
- Step 4:** Secure the pluggable DC-in terminal block to the external interface by tightening the two retention screws on either side of the terminal block (**Figure 3-7**).



**Figure 3-7: Pluggable DC-in Terminal Block Installation**

### 3.5 Foot Pad Installation

To install the foot pads, follow the instructions below.

- Step 1:** Turn the TANK-760 to the bottom panel.
- Step 2:** Locate the four retention screw holes for the foot pad in the bottom surface.
- Step 3:** Align the hole of the foot pad with the retention screw holes on the bottom surface.
- Step 4:** Secure the foot pad to the chassis by four retention screw.

## TANK-760 Embedded System



**Figure 3-8: Foot Pad Installation**

### 3.6 Mounting the System with Mounting Brackets

To mount the embedded system onto a wall or some other surface using the two mounting brackets, please follow the steps below.

**Step 1:** Turn the embedded system over.

**Step 2:** Align the two retention screw holes in each bracket with the corresponding retention screw holes on the sides of the bottom surface (**Figure 3-9**).



**Figure 3-9: Mounting Bracket Retention Screws**

- Step 3:** Secure the brackets to the system by tightening two retention screws into each bracket (**Figure 3-9**).
- Step 4:** Drill holes in the intended installation surface.
- Step 5:** Align the mounting holes in the sides of the mounting brackets with the predrilled holes in the mounting surface.
- Step 6:** Insert four retention screws, two in each bracket, to secure the system to the wall.

### 3.7 External Peripheral Interface Connectors

The TANK-760 has the following connectors. Detailed descriptions of the connectors can be found in the subsections below.

- ACC mode switch
- AT/ATX power mode switch
- Audio connector
- CAN-bus terminal blocks
- Digital I/O connector
- HDMI connector
- LAN connectors
- Power input terminal block
- Power input DC jack
- RS-232 serial port connectors
- RS-232/422/485 serial port connectors
- USB connectors
- VGA connectors

## TANK-760 Embedded System

### 3.7.1 ACC Mode Switch

The TANK-760 allows turning the ACC mode on or off. The setting can be made through the ACC mode switch on the rear panel as shown below.



Figure 3-10: ACC Mode Switch

### 3.7.2 AT/ATX Power Mode Switch

The TANK-760 supports AT and ATX power modes. The setting can be made through the AT/ATX power mode switch on the rear panel as shown below.

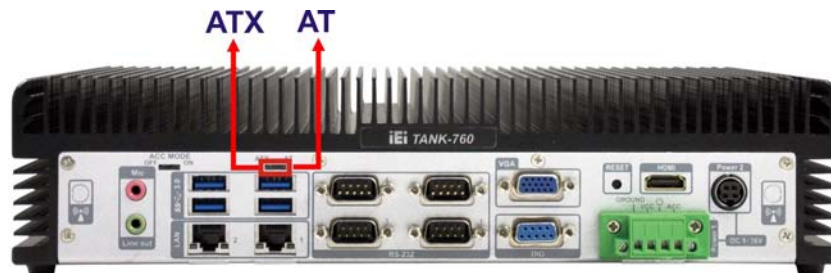


Figure 3-11: AT/ATX Power Mode Switch



### 3.7.3 Audio Connector

CN Label: Line out and Mic  
 CN Type: Audio jack  
 CN Location: See **Figure 3-12**

The audio jacks connect to external audio devices.


- **Microphone (Pink):** Connects a microphone.
- **Line Out port (Green):** Connects to a headphone or a speaker. With multi-channel configurations, this port can also connect to front speakers.



**Figure 3-12: Audio Connector**

### 3.7.4 CAN-bus Terminal Blocks

There are two 3-pin CAN-bus terminal blocks. The pinouts are shown in **Figure 3-13**

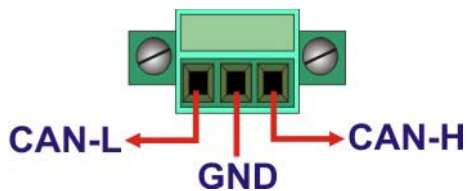

**Figure 3-13: CAN-bus Terminal Block Pinouts**

### 3.7.5 Digital I/O Connector

CN Label: **DIO**  
 CN Type: DB-9 male connector  
 CN Location: See **Figure 1-3**


## TANK-760 Embedded System

CN Pinouts: See **Table 3-1** and **Figure 3-14**

The digital I/O connector provides programmable input and output for external devices. The pinouts for the digital I/O connector are listed in the table below.

Pin	Description	Pin	Description
1	DIN1	6	DOUT3
2	DOUT1	7	DIN4
3	DIN2	8	DOUT4
4	DOUT2	9	VCC
5	DIN3		

**Table 3-1: Digital I/O Connector Pinouts**

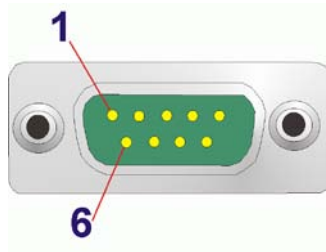

**Figure 3-14: Digital I/O Connector Pinout Location**

### 3.7.6 HDMI Connector

CN Label: **HDMI**  
 CN Type: HDMI type A connector  
 CN Location: See **Figure 1-3**  
 CN Pinouts: See **Table 3-2**

The HDMI (High-Definition Multimedia Interface) connector connects to digital audio or video sources.

Pin	Description	Pin	Description
1	HDMI_DATA2-1_L	2	GND
3	HDMI_DATA2#-1_L	4	HDMI_DATA1-1_L
5	GND	6	HDMI_DATA1#-1_L

Pin	Description	Pin	Description
7	HDMI_DATA0-1_L	8	GND
9	HDMI_DATA0#-1_L	10	HDMI_CLK-1_L
11	GND	12	HDMI_CLK#-1_L
13	NC	14	NC
15	HDMI_SCL-1	16	HDMI_SDA-1
17	GND	18	+V5S
19	HDMI_HPD-1		

**Table 3-2: HDMI Connector Pinouts**

### 3.7.7 LAN Connectors

- CN Label: **LAN1, LAN2**
- CN Type: **RJ-45**
- CN Location: **See Figure 1-3**
- CN Pinouts: **See Table 3-3**

The LAN connectors allow connection to an external network.

**Step 1: Locate the RJ-45 connectors.** The locations of the RJ-45 connectors are shown in **Figure 1-3**.

**Step 2: Align the connectors.** Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the TANK-760. See **Figure 3-15**.

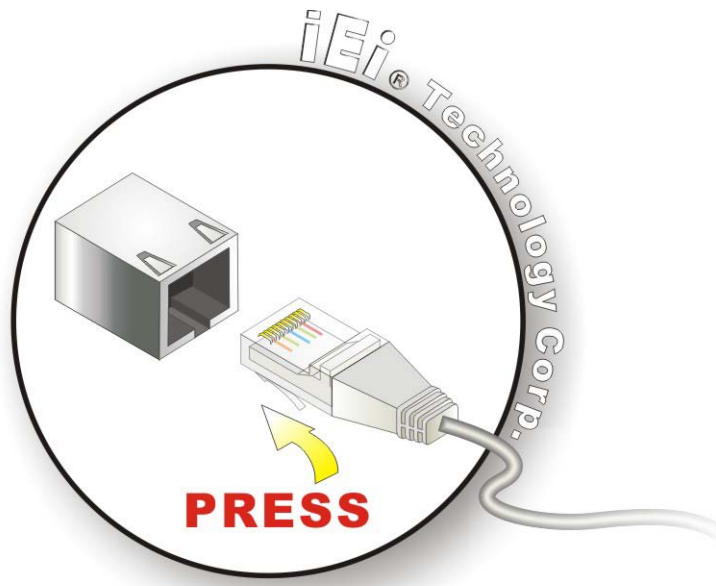


Figure 3-15: LAN Connection

**Step 3:** Insert the LAN cable RJ-45 connector. Once aligned, gently insert the LAN cable RJ-45 connector into the system RJ-45 connector.

Pin	Description	Pin	Description
1	MD10+	5	MD12+
2	MD10-	6	MD12-
3	MD11+	7	MD13+
4	MD11-	8	MD13-

Table 3-3: LAN Pinouts



Figure 3-16: RJ-45 Ethernet Connector

The RJ-45 Ethernet connector has two status LEDs, one green and one yellow. The green LED indicates activity on the port and the yellow LED indicates the port is linked. See **Table 3-4**.


Activity/Link LED		Speed LED	
STATUS	DESCRIPTION	STATUS	DESCRIPTION
Off	No link	Off	10 Mbps connection
Yellow	Linked	Green	100 Mbps connection
Blinking	TX/RX activity	Orange	1 Gbps connection

**Table 3-4: RJ-45 Ethernet Connector LEDs**

### 3.7.8 Power Input, 4-pin Terminal Block

- CN Label: **POWER 1**
- CN Type: 4-pin terminal block
- CN Location: See **Figure 1-3**
- CN Pinouts: See **Figure 3-17**

Connect the leads of a 9V~36V DC power supply into the terminal block. Make sure that the power and ground wires are attached to the correct sockets of the connector.

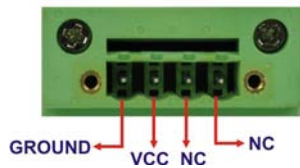

**Figure 3-17: 4-pin Terminal Block Pinout Location**

### 3.7.1 Power Input, 4-pin DIN Connector

- CN Label: **POWER 2**
- CN Type: 4-pin DIN connector
- CN Location: See **Figure 1-3**
- CN Pinouts: See **Table 3-5** and **Figure 3-18**

The power connector connects to the 9V~36V DC power adapter.



**Figure 3-18: Power Input Connector**

Pin	Description	Pin	Description
1	+12V	3	+12V
2	GND	4	GND

**Table 3-5: Power Input Pinouts**


### 3.7.2 RS-232 Serial Port Connectors

- CN Label: **COM1, COM2, COM3, COM4**
- CN Type: DB-9 connectors
- CN Location: See **Figure 1-3**
- CN Pinouts: See **Table 3-6** and **Figure 3-20**

RS-232 serial port devices can be attached to the RS-232 serial ports on the rear panel.

**Step 1:** **Locate the DB-9 connector.** The locations of the DB-9 connectors are shown in **Figure 1-3**.

**Step 2:** **Insert the serial connector.** Insert the DB-9 connector of a serial device into the DB-9 connector on the external peripheral interface. See **Figure 3-19**.

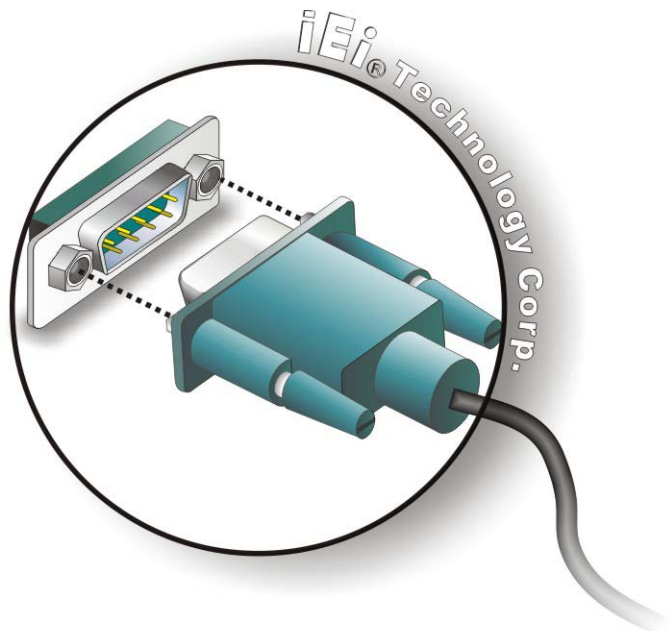


**Figure 3-19: Serial Device Connector**

**Step 3: Secure the connector.** Secure the serial device connector to the external interface by tightening the two retention screws on either side of the connector.

Pin	Description	Pin	Description
1	DCD	6	DSR
2	RX	7	RTS
3	TX	8	CTS
4	DTR	9	RI
5	GND		

**Table 3-6: Serial Port Pinouts**

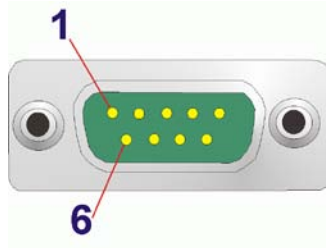

**Figure 3-20: Serial Port Pinout Location**

## TANK-760 Embedded System


## 3.7.3 RS-232/422/485 Serial Port Connectors

CN Label:	<b>COM5, COM6</b>
CN Type:	DB-9 connectors
CN Location:	See <b>Figure 1-3</b>
CN Pinouts:	See <b>Table 3-7</b> and <b>Figure 3-22</b>

RS-232/422/485 serial port devices can be attached to the RS-232/422/485 serial ports on the front panel.

**Step 1:** **Locate the DB-9 connector.** The locations of the DB-9 connectors are shown in **Figure 1-3**.

**Step 2:** **Insert the serial connector.** Insert the DB-9 connector of a serial device into the DB-9 connector on the external peripheral interface. See **Figure 3-21**.

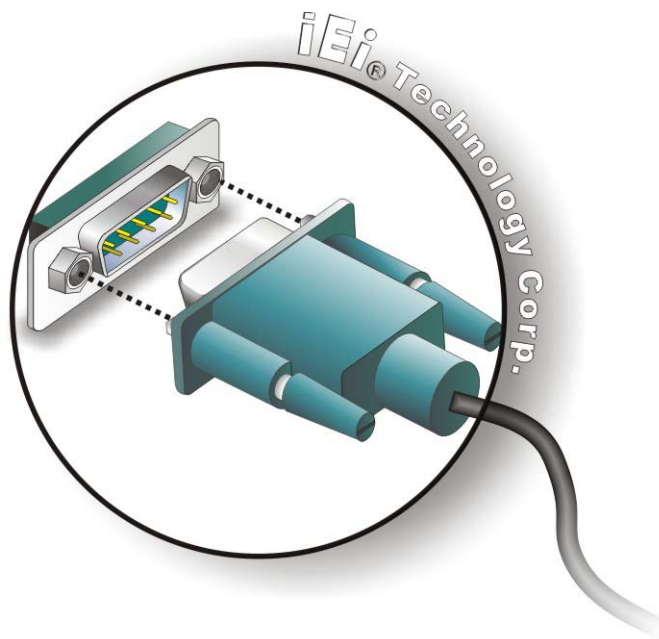


**Figure 3-21: Serial Device Connector**

**Step 3:** **Secure the connector.** Secure the serial device connector to the external interface by tightening the two retention screws on either side of the connector.



Pin	Description (RS-232)	Description (RS-422)	Description (RS-485)
1	DCD#	TXD422#	TXD485#
2	RXD	TXD422+	TXD485+
3	TXD	RXD422+	N/A
4	DTR#	RXD422#	N/A
5	GND	GND	GND
6	DSR#	N/A	N/A
7	RTS#	N/A	N/A
8	CTS#	N/A	N/A
9	RI#	N/A	N/A

**Table 3-7: DB-9 Connector Pinouts**

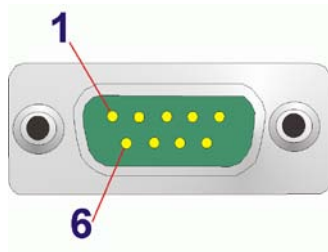

**Figure 3-22: Serial Port Pinout Location**


### 3.7.4 USB Connectors

- CN Label: USB
- CN Type: USB port
- CN Location: See **Figure 1-3**
- CN Pinouts: See **Table 3-8**

The USB ports are for connecting USB peripheral devices to the system.

**Step 1: Locate the USB connectors.** The locations of the USB connectors are shown in **Figure 1-3**.

**Step 2: Align the connectors.** Align the USB device connector with one of the connectors. See **Figure 3-23**.

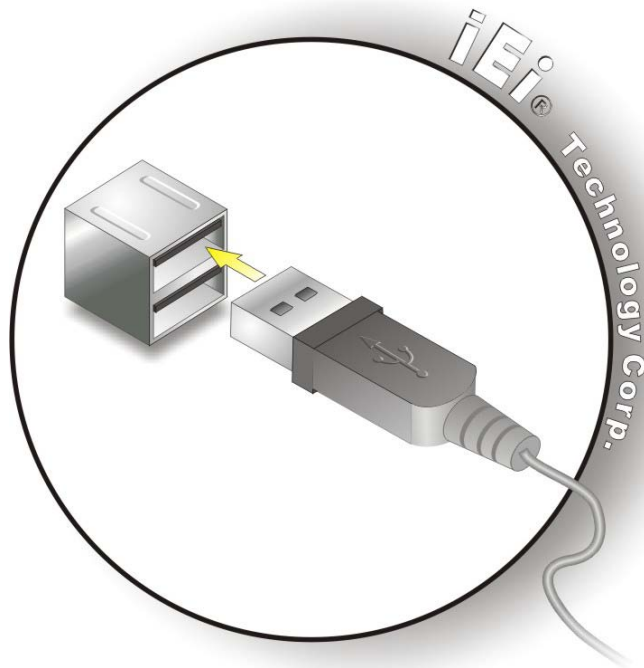

**Figure 3-23: USB Device Connection**

**Step 3: Insert the device connector.** Once aligned, gently insert the USB device connector into the USB connector on the TANK-760.

Pin	Description	Pin	Description
1	VCC	5	VCC
2	DATA-	6	DATA-
3	DATA+	7	DATA+
4	GROUND	8	GROUND


**Table 3-8: USB Port Pinouts**

### 3.7.5 VGA Connector

- CN Label: VGA
- CN Type: 15-pin Female
- CN Location: See **Figure 1-3**
- CN Pinouts: See **Figure 3-25** and **Table 3-9**


The VGA connector connects to a monitor that accepts VGA video input.

- Step 1:** **Locate the female DB-15 connector.** The location of the female DB-15 connector is shown in **Figure 1-3**.
- Step 2:** **Align the VGA connector.** Align the male DB-15 connector on the VGA screen cable with the female DB-15 connector on the external peripheral interface.
- Step 3:** **Insert the VGA connector.** Once the connectors are properly aligned with, insert the male connector from the VGA screen cable into the female connector on the TANK-760. See **Figure 3-24**.

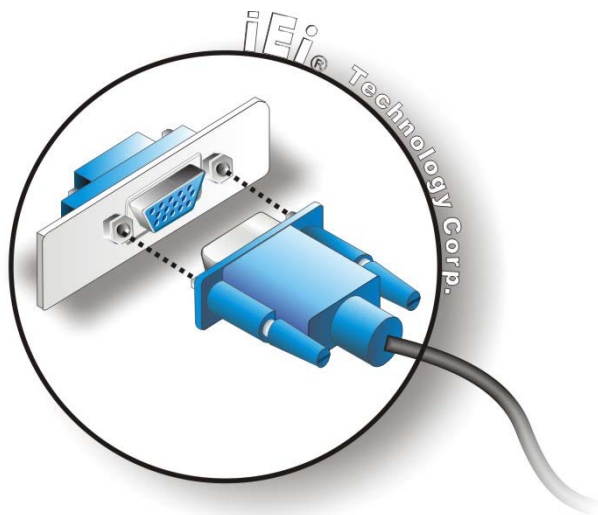

**Figure 3-24: VGA Connector**

- Step 4:** **Secure the connector.** Secure the DB-15 VGA connector from the VGA monitor to the external interface by tightening the two retention screws on either side of the connector.

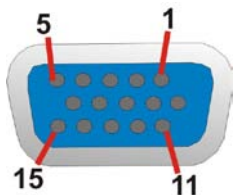

**Figure 3-25: VGA Connector**

TANK-760 Embedded System

Pin	Description	Pin	Description
1	RED	2	GREEN
3	BLUE	4	NC
5	GND	6	GND
7	GND	8	GND
9	CRT_VCC	10	Display_GND
11	NC	12	5VDDCDA
13	HSY	14	VSY
15	5VDDCLK		

**Table 3-9: VGA Connector Pinouts**

### 3.8 Powering On/Off the System



**WARNING:**

Make sure a power supply with the correct input voltage is being fed into the system. Incorrect voltages applied to the system may cause damage to the internal electronic components and may also cause injury to the user.

- **Power on** the system: press the power button for 3 seconds
- **Power off** the system: press the power button for 6 seconds

**Power button**



**Figure 3-26: Power Button**

Chapter

4

**BIOS**

---

## 4.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



### NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

### 4.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DEL** or **F2** key as soon as the system is turned on or
2. Press the **DEL** or **F2** key when the “**Press DEL or F2 to enter SETUP**” message appears on the screen.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again.

### 4.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **ESC** to quit. Navigation keys are shown in the following table.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes

Key	Function
-	Decrease the numeric value or make changes
Page Up key	Move to the next page
Page Dn key	Move to the previous page
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS

**Table 4-1: BIOS Navigation Keys**

#### 4.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

#### 4.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration are made, CMOS defaults. Use the jumper described in **Chapter 4**.

#### 4.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Boot – Changes the system boot configuration.

## TANK-760 Embedded System

- Security – Sets User and Supervisor Passwords.
- Save & Exit – Selects exit options and loads default settings.

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.



## 4.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered.

The **Main** menu gives an overview of the basic system information.

```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
Main  Advanced  Chipset  Boot  Security  Save & Exit
BIOS Information
BIOS Vendor                American Megatrends
Core Version                4.6.5.4
Compliance                 UEFI 2.3.1; PI 1.2
Project Version            SED3AR10.ROM
Build Date and Time        08/12/2014 16:05:00

iWDD Vendor                iEi
iWDD Version               SED3ER10.bin

IPMI Card Status           Not Present

Processor Information
Name                       Haswell
Brand String               Intel(R) Celeron(R) CPU
                           2000E @ 2.20GHz
Frequency                  2200 MHz
Processor ID               306c3
Stepping                   CO
Number of Processors       2Core(s) / 2Thread(s)
Microcode Revision         12
GT Info                    GT1 (800 MHz)

IGFX VBIOS Version         2164
Memory RC Version          1.6.1.12
Total Memory               4096 MB (DDR3)
Memory Frequency           1600 MHz

PCH Information
Name                       LynxPoint
PCH SKU                    HM86
Stepping                   05/C2
LAN PHY Revision           A3

ME FW Version              9.0.13.1402
ME Firmware SKU            1.5MB

SPI Clock Frequency
DOFR Support               Supported
Read Status Clock Frequency 50 MHz
Write Status Clock Frequency 50 MHz
Fast Read Status Clock Frequency 50 MHz

System Date                 [Tue 08/12/2014]
System Time                 [15:10:27]

Access Level                Administrator

Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.
    
```

Set the Date. Use Tab to switch between Date elements.

-----

→←: Select Screen  
↑↓: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F2: Previous Values  
F3: Optimized Defaults  
F4: Save & Exit  
ESC: Exit

## TANK-760 Embedded System

### BIOS Menu 1: Main

- System Overview

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- BIOS Information
- Processor Information
- Memory Information
- PCH Information
- SPI Clock Frequency

The System Overview field also has two user configurable fields:

- System Date [xx/xx/xx]

Use the **System Date** option to set the system date. Manually enter the day, month and year.

- System Time [xx:xx:xx]

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

## 4.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



### **WARNING:**

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

---

```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
Main  Advanced  Chipset  Boot  Security  Save & Exit

> ACPI Settings
> RTC Wake Settings
> CPU Configuration
> SATA Configuration
> Intel(R) Rapid Start Technology
> USB Configuration
> F81866 Super IO Configuration
> F81866 H/W Monitor
> Serial Port Console Redirection
> iEi Feature

System ACPI Parameters
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.
  
```

**BIOS Menu 2: Advanced**

4.3.1 ACPI Settings

The **ACPI Settings** menu (**BIOS Menu 3**) configures the Advanced Configuration and Power Interface (ACPI) options.

```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
Advanced

ACPI Settings
ACPI Sleep State          [S1 only(CPU Stop Clock)]

Select ACPI sleep state
the system will enter
when the SUSPEND button
is pressed.
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.
  
```

**BIOS Menu 3: ACPI Settings**

## TANK-760 Embedded System

- ACPI Sleep State [S1 only (CPU Stop Clock)]

Use the **ACPI Sleep State** option to specify the sleep state the system enters when it is not being used.

- ➔ **S1 only (CPU Stop Clock)** **DEFAULT** The system enters S1 (POS) sleep state. The system appears off. The CPU is stopped; RAM is refreshed; the system is running in a low power mode.
- ➔ **S3 only (Suspend to RAM)** The caches are flushed and the CPU is powered off. Power to the RAM is maintained. The computer returns slower to a working state, but more power is saved.

### 4.3.2 RTC Wake Settings

The **RTC Wake Settings** menu (**BIOS Menu 4**) enables the system to wake at the specified time.

```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
  Advanced
Wake system with Fixed Time      [Disabled]
                                     Enable or disable System
                                     wake on alarm event. When
                                     enabled, System will
                                     wake on the
                                     date::hr::min::sec
                                     specified
-----
➔←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.

```

**BIOS Menu 4: RTC Wake Settings**

- Wake system with Fixed Time [Disabled]

Use the **Wake system with Fixed Time** option to enable or disable the system wake on alarm event.

→ **Disabled**      **DEFAULT**      The real time clock (RTC) cannot generate a wake event

→ **Enabled**      If selected, the **Wake up every day** option appears allowing you to enable to disable the system to wake every day at the specified time. Besides, the following options appear with values that can be selected:

Wake up every day

Wake up date

Wake up hour

Wake up minute

Wake up second

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

## TANK-760 Embedded System

### 4.3.3 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 5**) to view detailed CPU specifications and configure the CPU.

```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
  Advanced
CPU Configuration
Intel(R) Celeron(R) CPU 2000E @ 2.20GHz
CPU Signature          306c3
Microcode Patch       12
Max CPU Speed         2200 MHz
Min CPU Speed         800 MHz
CPU Speed             2200 MHz
Processor Cores       2
Intel HT Technology   Not Supported
Intel VT-x Technology Supported
Intel SMX Technology Not Supported
64-bit               Supported
EIST Technology       Supported

L1 Data Cache        32 kB x 2
L1 Code Cache        32 kB x 2
L2 Cache             256 kB x 2
L3 Cache             2048 kB

Active Processor Cores [All]
Intel Virtualization Technology [Disabled]
EIST                  [Enabled]

Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.

-----
-><: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.
  
```

#### BIOS Menu 5: CPU Configuration

The CPU Configuration menu (**BIOS Menu 5**) lists the following CPU details:

- Processor Type: Lists the brand name of the CPU being used
- CPU Signature: Lists the CPU signature value.
- Microcode Patch: Lists the microcode patch being used.
- Max CPU Speed: Lists the maximum CPU processing speed.
- Min CPU Speed: Lists the minimum CPU processing speed.
- CPU Speed: Lists the CPU processing speed
- Processor Cores: Lists the number of the processor core
- Intel HT Technology: Indicates if Intel HT Technology is supported by the CPU.

- Intel VT-x Technology: Indicates if Intel VT-x Technology is supported by the CPU.
  - Intel SMX Technology: Indicates if Intel SMX Technology is supported by the CPU.
  - EIST Technology: Indicates if the Enhanced Intel SpeedStep® Technology (EIST) is supported by the CPU.
  - 64-bit: Indicates if 64-bit is supported by the CPU.
  - L1 Data Cache: Lists the amount of data storage space on the L1 cache.
  - L1 Code Cache: Lists the amount of code storage space on the L1 cache.
  - L2 Cache: Lists the amount of storage space on the L2 cache.
  - L3 Cache: Lists the amount of storage space on the L3 cache.
- Active Processor Cores [All]

Use the **Active Processor Cores** option to configure the number of cores to enable in each processor package.

- ➔ **All**                    **DEFAULT**    All cores are enabled in the processor package.
- ➔ **1**    One of the cores is enabled in the processor package.

- Intel Virtualization Technology [Disabled]

Use the **Intel Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- ➔ **Disabled**            **DEFAULT**    Disables Intel Virtualization Technology.
- ➔ **Enabled**                                    Enables Intel Virtualization Technology.

- EIST [Enabled]


Use the **EIST BIOS** option to enable or disable the Intel SpeedStep® Technology.

- ➔ **Disabled**                                    Disables the Intel SpeedStep® Technology.
- ➔ **Enabled**            **DEFAULT**    Enables the Intel SpeedStep® Technology.

## TANK-760 Embedded System

### 4.3.4 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 6**) to change and/or set the configuration of the SATA devices installed in the system.

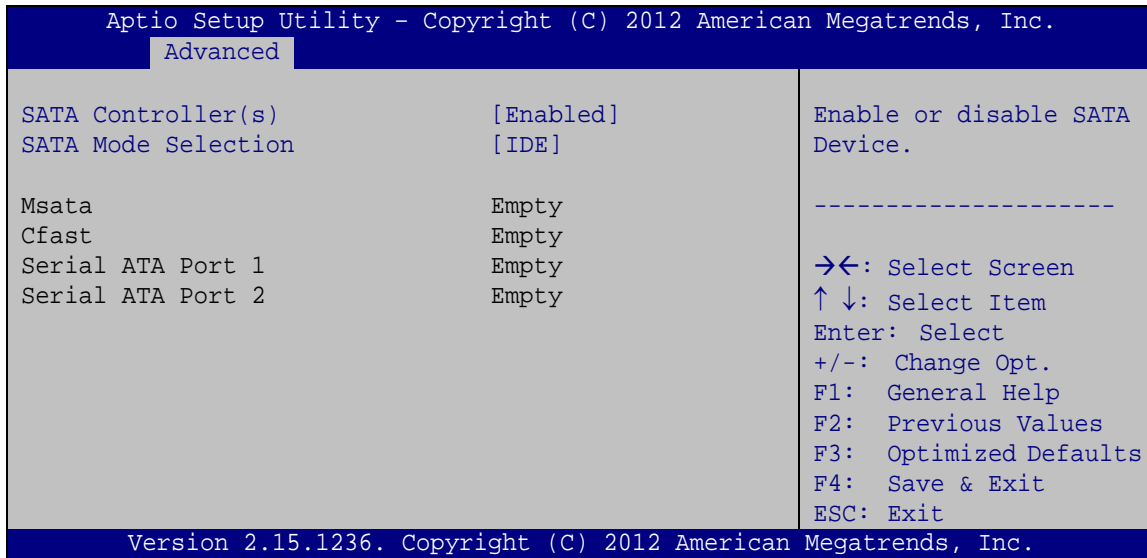

#### BIOS Menu 6: SATA Configuration

- SATA Controller(s) [Enabled]

Use the **SATA Controller(s)** option to configure the SATA controller.

- ➔ **Enabled**      **DEFAULT**      Enable SATA controller.
- ➔ **Disabled**                      Disable SATA controller.

- SATA Mode Selection [IDE]


Use the **SATA Mode Selection** option to configure SATA devices.

- ➔ **IDE**              **DEFAULT**      Configures SATA devices as normal IDE device.
- ➔ **AHCI**                      Configures SATA devices as AHCI device.



### 4.3.5 Intel(R) Rapid Start Technology

Use the **Intel(R) Rapid Start Technology (BIOS Menu 7)** menu to configure Intel® Rapid Start Technology support.

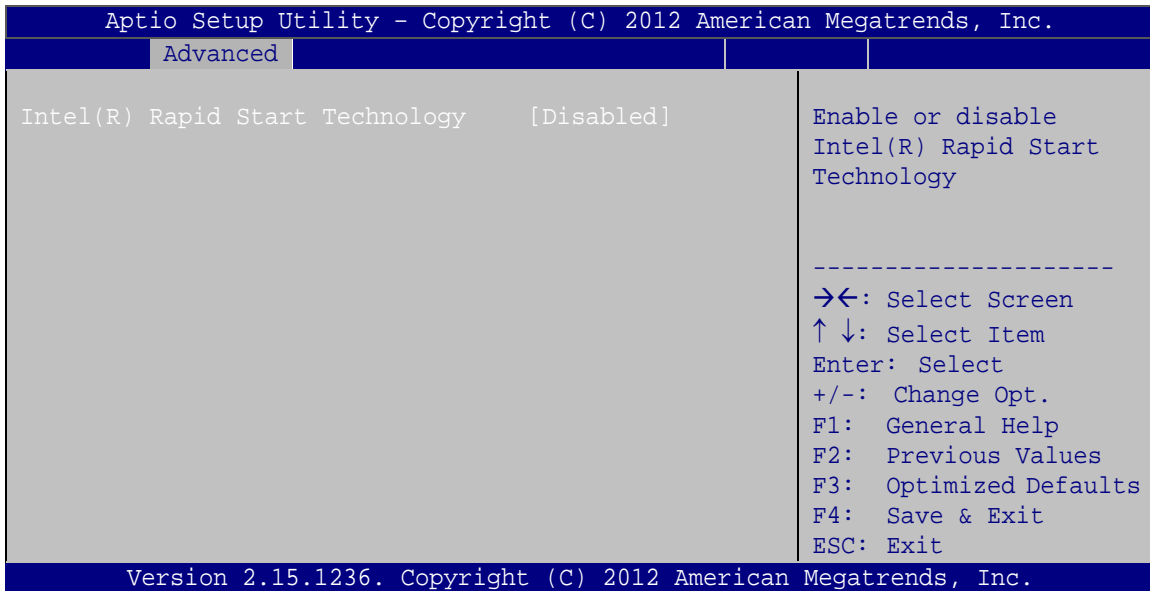

#### BIOS Menu 7: Intel(R) Rapid Start Technology

- Intel(R) Rapid Start Technology [Disabled]

Use **Intel(R) Rapid Start Technology** option to enable or disable the Intel® Rapid Start Technology function.

- ➔ **Disabled**      **DEFAULT**      Intel® Rapid Start Technology is disabled
- ➔ **Enabled**                      Intel® Rapid Start Technology is enabled

## TANK-760 Embedded System

## 4.3.6 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 8**) to read USB configuration information and configure the USB settings.

```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
  Advanced
USB Configuration
USB Devices:
  1 Keyboard, 2 Hubs
Legacy USB Support          [Enabled]
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.

```

**BIOS Menu 8: USB Configuration**

- USB Devices

The **USB Devices** field lists the USB devices that are enabled on the system

- Legacy USB Support [Enabled]


Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support.

Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

- ➔ **Enabled**      **DEFAULT**      Legacy USB support enabled
- ➔ **Disabled**                      Legacy USB support disabled
- ➔ **Auto**                              Legacy USB support disabled if no USB devices are connected

### 4.3.7 F81866 Super IO Configuration

Use the **F81866 Super IO Configuration** menu (**BIOS Menu 9**) to set or change the configurations for the serial ports.

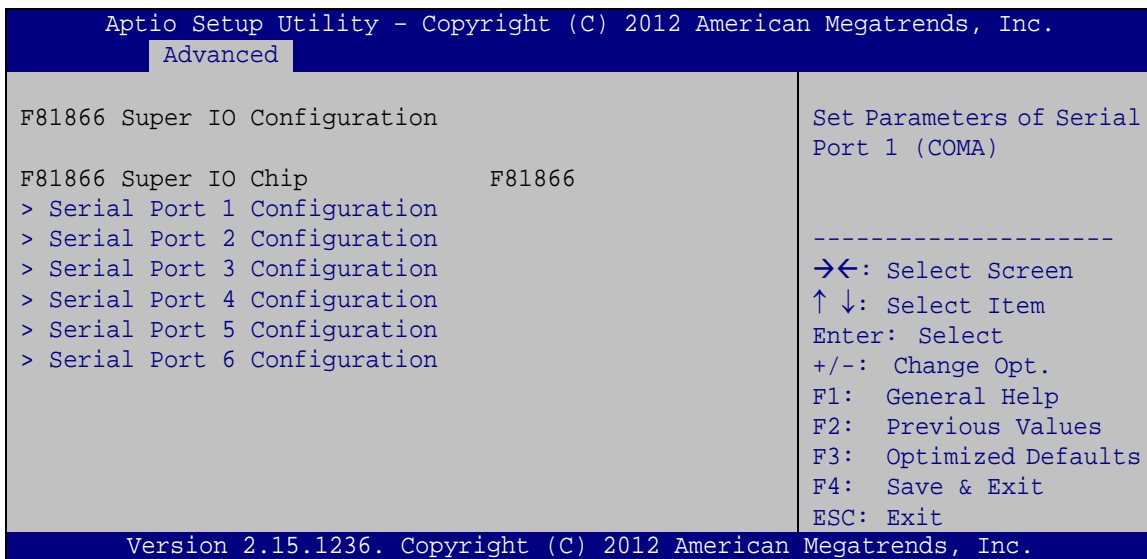


**BIOS Menu 9: F81866 Super IO Configuration**

## TANK-760 Embedded System

### 4.3.7.1 Serial Port n Configuration

Use the **Serial Port n Configuration** menu (**BIOS Menu 10**) to configure the serial port n.

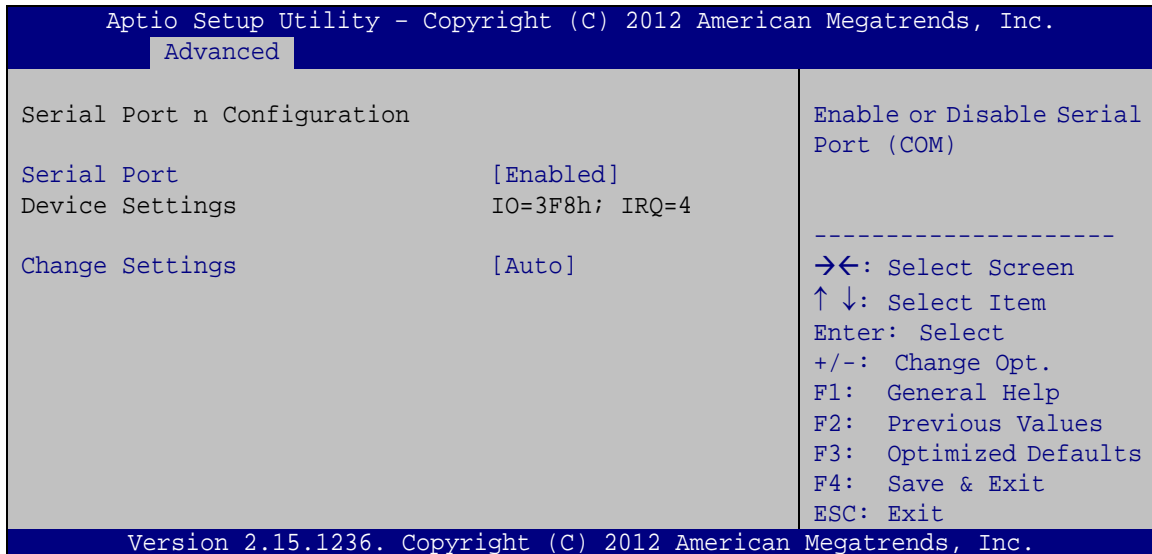

#### BIOS Menu 10: Serial Port n Configuration Menu

##### 4.3.7.1.1 Serial Port 1 Configuration

- Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled** **DEFAULT** Enable the serial port

- Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- ➔ **Auto** **DEFAULT** The serial port IO port address and interrupt address are automatically detected.
- ➔ **IO=3F8h;**  
**IRQ=4** Serial Port I/O port address is 3F8h and the interrupt address is IRQ4

- ➔ **IO=3F8h;**  
**IRQ=3, 4**                      Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4
- ➔ **IO=2F8h;**  
**IRQ=3, 4**                      Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4

#### 4.3.7.1.2 Serial Port 2 Configuration

- Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled**                      Disable the serial port
- ➔ **Enabled**                      **DEFAULT**                      Enable the serial port

- Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- ➔ **Auto**                      **DEFAULT**                      The serial port IO port address and interrupt address are automatically detected.
- ➔ **IO=2F8h;**  
**IRQ=3**                      Serial Port I/O port address is 2F8h and the interrupt address is IRQ3
- ➔ **IO=3F8h;**  
**IRQ=3, 4**                      Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4
- ➔ **IO=2F8h;**  
**IRQ=3, 4**                      Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4

#### 4.3.7.1.3 Serial Port 3 Configuration

- Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled**                      Disable the serial port

## TANK-760 Embedded System

➔ **Enabled**      **DEFAULT**      Enable the serial port

- Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

➔ **Auto**      **DEFAULT**      The serial port IO port address and interrupt address are automatically detected.

➔ **IO=3E8h;**  
**IRQ=10**      Serial Port I/O port address is 3E8h and the interrupt address is IRQ10

➔ **IO=3E8h;**  
**IRQ=10, 11**      Serial Port I/O port address is 3E8h and the interrupt address is IRQ10, 11

➔ **IO=2E8h;**  
**IRQ=10, 11**      Serial Port I/O port address is 2E8h and the interrupt address is IRQ10, 11

### 4.3.7.1.4 Serial Port 4 Configuration

- Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled**      Disable the serial port

➔ **Enabled**      **DEFAULT**      Enable the serial port

- Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

➔ **Auto**      **DEFAULT**      The serial port IO port address and interrupt address are automatically detected.

➔ **IO=2E8h;**  
**IRQ=10**      Serial Port I/O port address is 2E8h and the interrupt address is IRQ10

- ➔ **IO=3E8h;**  
**IRQ=10, 11**      Serial Port I/O port address is 3E8h and the interrupt address is IRQ10, 11
- ➔ **IO=2E8h;**  
**IRQ=10, 11**      Serial Port I/O port address is 2E8h and the interrupt address is IRQ10, 11

#### 4.3.7.1.5 Serial Port 5 Configuration

- Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled**      Disable the serial port
- ➔ **Enabled**      **DEFAULT**      Enable the serial port

- Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- ➔ **Auto**      **DEFAULT**      The serial port IO port address and interrupt address are automatically detected.
- ➔ **IO=2D0h;**  
**IRQ=10**      Serial Port I/O port address is 2D0h and the interrupt address is IRQ10
- ➔ **IO=2D0h;**  
**IRQ=10, 11**      Serial Port I/O port address is 2D0h and the interrupt address is IRQ10, 11
- ➔ **IO=2D8h;**  
**IRQ=10, 11**      Serial Port I/O port address is 2D8h and the interrupt address is IRQ10, 11

- ➔ Device Mode [RS232]

Use the **Device Mode** option to enable or disable the serial port.

- ➔ **RS232**      **DEFAULT**      Enables serial port RS-232 support.
- ➔ **RS422**      Enables serial port RS-422 support.

## TANK-760 Embedded System

- ➔ **RS485**                      Enables serial port RS-485 support.

### 4.3.7.1.6 Serial Port 6 Configuration

- Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled**                      Disable the serial port
- ➔ **Enabled**            **DEFAULT**            Enable the serial port

- Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- ➔ **Auto**            **DEFAULT**            The serial port IO port address and interrupt address are automatically detected.
- ➔ **IO=2D8h;**  
**IRQ=10**                      Serial Port I/O port address is 2D8h and the interrupt address is IRQ10
- ➔ **IO=2D0h;**  
**IRQ=10, 11**                      Serial Port I/O port address is 2D0h and the interrupt address is IRQ10, 11
- ➔ **IO=2D8h;**  
**IRQ=10, 11**                      Serial Port I/O port address is 2D8h and the interrupt address is IRQ10, 11

- ➔ Device Mode [RS232]

Use the **Device Mode** option to enable or disable the serial port.

- ➔ **RS232**            **DEFAULT**            Enables serial port RS-232 support.
- ➔ **RS422**                      Enables serial port RS-422 support.
- ➔ **RS485**                      Enables serial port RS-485 support.



#### 4.3.8 F81866 H/W Monitor

The **F81866 H/W Monitor** menu (**BIOS Menu 11**) displays the CPU temperature and system temperature.

```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
Advanced
PC Health Status
CPU temperature           : +59 C
System temperature       : +48 C
Smart Fan Mode Select
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.

```

#### BIOS Menu 11: iWDD H/W Monitor

- PC Health Status


The following system parameters and values are shown. The system parameters that are monitored are:

- CPU Temperature
- System Temperature

#### 4.3.9 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 12**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

## TANK-760 Embedded System

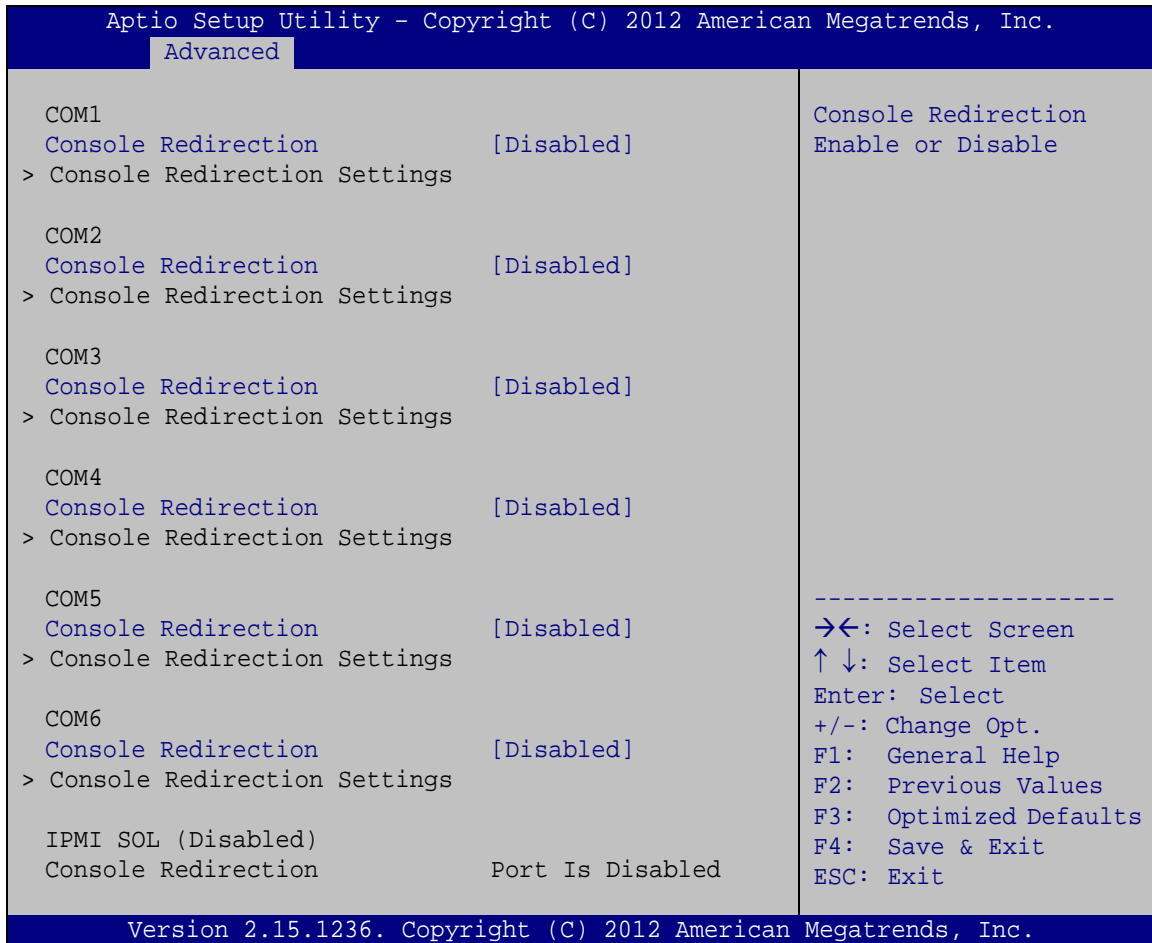

### BIOS Menu 12: Serial Port Console Redirection

- Console Redirection [Disabled]

Use **Console Redirection** option to enable or disable the console redirection function.

- ➔ **Disabled**    **DEFAULT**    Disabled the console redirection function
- ➔ **Enabled**                    Enabled the console redirection function



#### NOTE:

The following five options appear when the Console Redirection option is enabled.

- Terminal Type [ANSI]

Use the **Terminal Type** option to specify the remote terminal type.

- ➔ **VT100**                      The target terminal type is VT100
- ➔ **VT100+**                    The target terminal type is VT100+
- ➔ **VT-UTF8**                    The target terminal type is VT-UTF8
- ➔ **ANSI**                    **DEFAULT**                    The target terminal type is ANSI

- Bits per second [115200]

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match the other side. Long or noisy lines may require lower speeds.

- ➔ **9600**                      Sets the serial port transmission speed at 9600.
- ➔ **19200**                      Sets the serial port transmission speed at 19200.
- ➔ **38400**                      Sets the serial port transmission speed at 38400.
- ➔ **57600**                      Sets the serial port transmission speed at 57600.
- ➔ **115200**                    **DEFAULT**                    Sets the serial port transmission speed at 115200.

- Data Bits [8]

Use the **Data Bits** option to specify the number of data bits.

- ➔ **7**                              Sets the data bits at 7.
- ➔ **8**                              **DEFAULT**                      Sets the data bits at 8.

- Parity [None]

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

- ➔ **None**                    **DEFAULT**                    No parity bit is sent with the data bits.

## TANK-760 Embedded System

- ➔ **Even**                      The parity bit is 0 if the number of ones in the data bits is even.
- ➔ **Odd**                        The parity bit is 0 if the number of ones in the data bits is odd.
- ➔ **Mark**                      The parity bit is always 1. This option does not provide error detection.
- ➔ **Space**                     The parity bit is always 0. This option does not provide error detection.


- Stop Bits [1]

Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

- ➔ **1**                      **DEFAULT**                Sets the number of stop bits at 1.
- ➔ **2**                      Sets the number of stop bits at 2.

#### 4.3.10 iEi Feature

Use the **iEi Feature** menu (**BIOS Menu 13**) to configure One Key Recovery function.

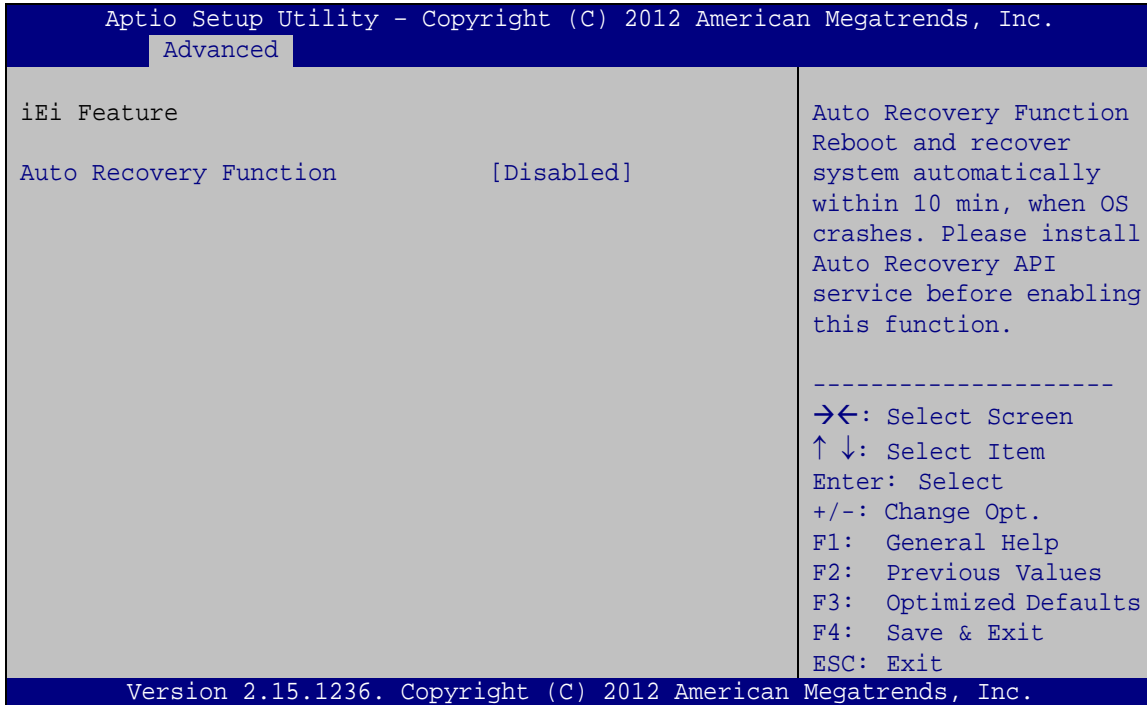

#### BIOS Menu 13: iEi Feature

- Auto Recovery Function [Disabled]

Use the **Auto Recovery Function** BIOS option to enable or disable the auto recovery function of the IEI One Key Recovery.

- ➔ **Disabled**     **DEFAULT**     Auto recovery function disabled
- ➔ **Enabled**     Auto recovery function enabled

## TANK-760 Embedded System

## 4.4 Chipset

Use the **Chipset** menu (**BIOS Menu 14**) to access the PCH IO and System Agent (SA) configuration menus.

**WARNING!**

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

```
Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
Main   Advanced  Chipset  Boot   Security  Save & Exit
-----
> PCH-IO Configuration
> System Agent (SA) Configuration


PCH Parameters
-----
-><: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.
```

**BIOS Menu 14: Chipset**

#### 4.4.1 PCH-IO Configuration

Use the **PCH-IO Configuration** menu (**BIOS Menu 15**) to configure the PCH parameters.

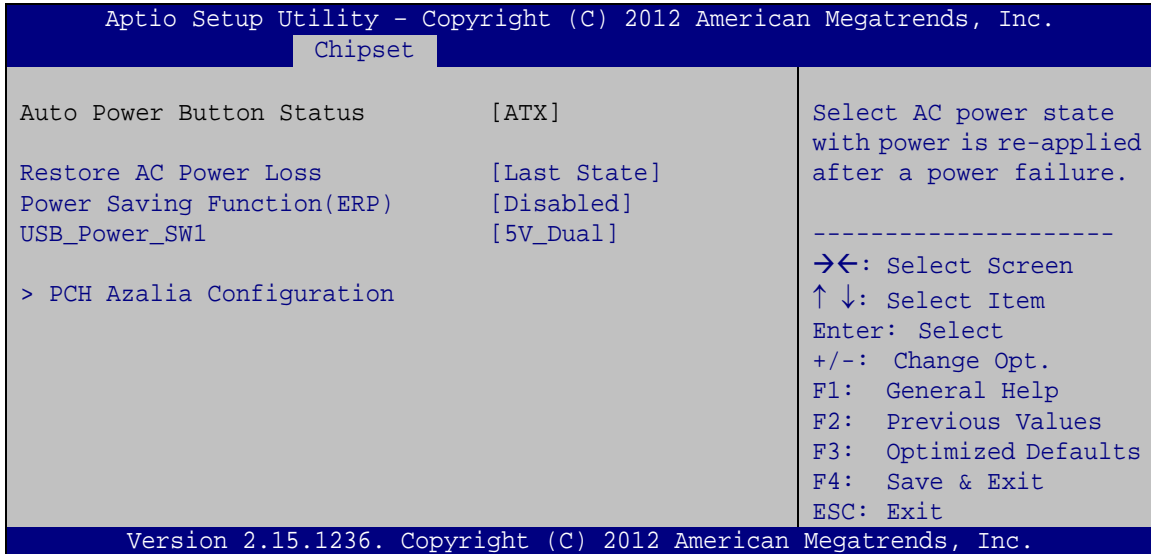

#### BIOS Menu 15: PCH-IO Configuration

- Restore AC Power Loss [Last State]

Use the **Restore AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- ➔ **Power Off**                      The system remains turned off
- ➔ **Power On**                        The system turns on
- ➔ **Last State**            **DEFAULT**    The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

- Power Saving Function [Disabled]

Use the **Power Saving Function** option to enable or disable power saving function.

- ➔ **Disabled**    **DEFAULT**    Power saving function is disabled
- ➔ **Enabled**                      Enable to reduce power consumption in system off state.

## TANK-760 Embedded System


- USB Power SW1 [5V\_DUAL]

Use the **USB Power SW1** BIOS option to configure the power of USB port by software.

- ➔ **5V\_DUAL**      **DEFAULT**      Sets to +5V DUAL
- ➔ **5V**                              Sets to +5V

### 4.4.1.1 PCH Azalia Configuration

Use the **PCH Azalia Configuration** menu (**BIOS Menu 16**) to configure the PCH Azalia settings.

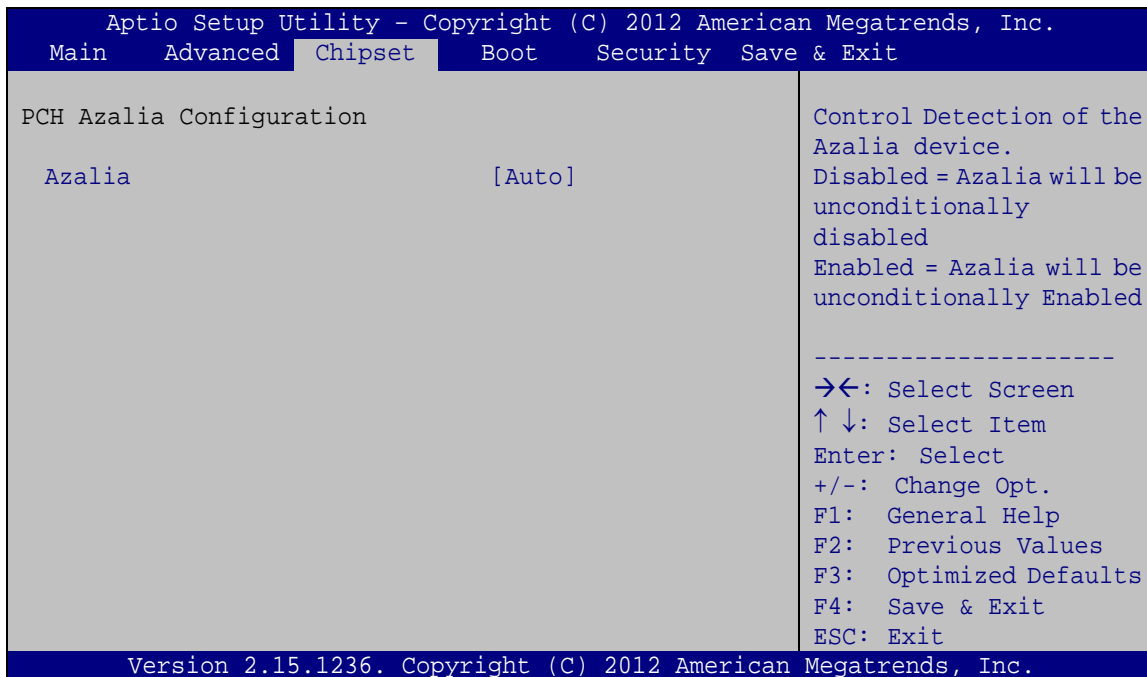

#### BIOS Menu 16: PCH Azalia Configuration Menu

- ➔ Azalia [Enabled]

Use the **Azalia** option to enable or disable the High Definition Audio controller.


- ➔ **Disabled**                      The onboard High Definition Audio controller is disabled
- ➔ **Enabled**      **DEFAULT**      The onboard High Definition Audio controller automatically detected and enabled



→ **Auto**    **DEFAULT**    The onboard High Definition Audio controller automatically detected and enabled

#### 4.4.2 System Agent (SA) Configuration

Use the **System Agent (SA) Configuration** menu (**BIOS Menu 17**) to configure the System Agent (SA) parameters.

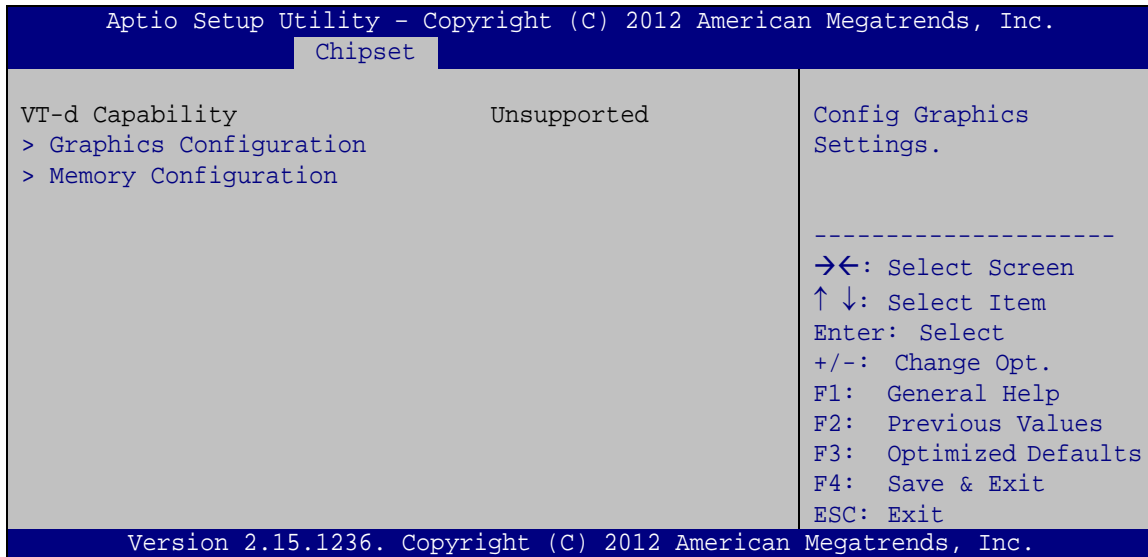


#### BIOS Menu 17: System Agent (SA) Configuration

##### 4.4.2.1 Graphics Configuration

Use the **Graphics Configuration** (**BIOS Menu 18**) menu to configure the video device connected to the system.

## TANK-760 Embedded System

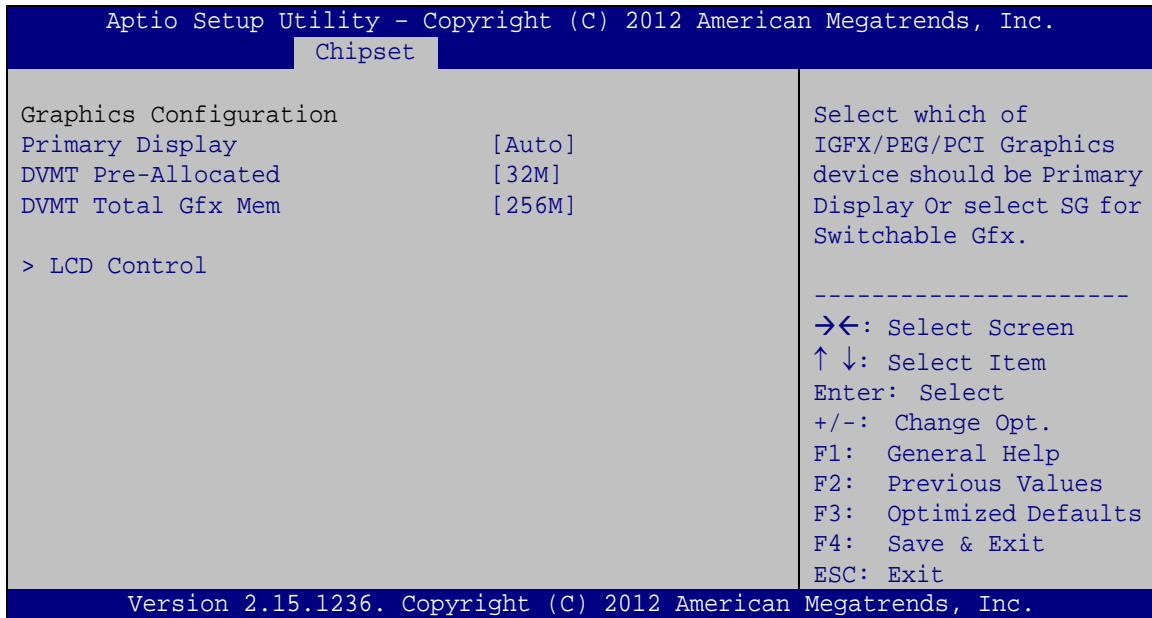

### BIOS Menu 18: Graphics Configuration

- Primary Display [Auto]

Use the **Primary Display** option to select the primary graphics controller the system uses.

The following options are available:

- Auto **Default**
- IGFX
- PEG
- PCIE
- SG

- DVMT Pre-Allocated [32M]

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:


- 32M **Default**
- 64M
- 128M
- 256M

- 512M
  
- DVMT Total Gfx Mem [256M]

Use the **DVMT Total Gfx Mem** option to select DVMT5.0 total graphic memory size used by the internal graphic device. The following options are available:

- 128M
- 256M                      **Default**
- MAX

#### 4.4.2.1.1 LCD Control

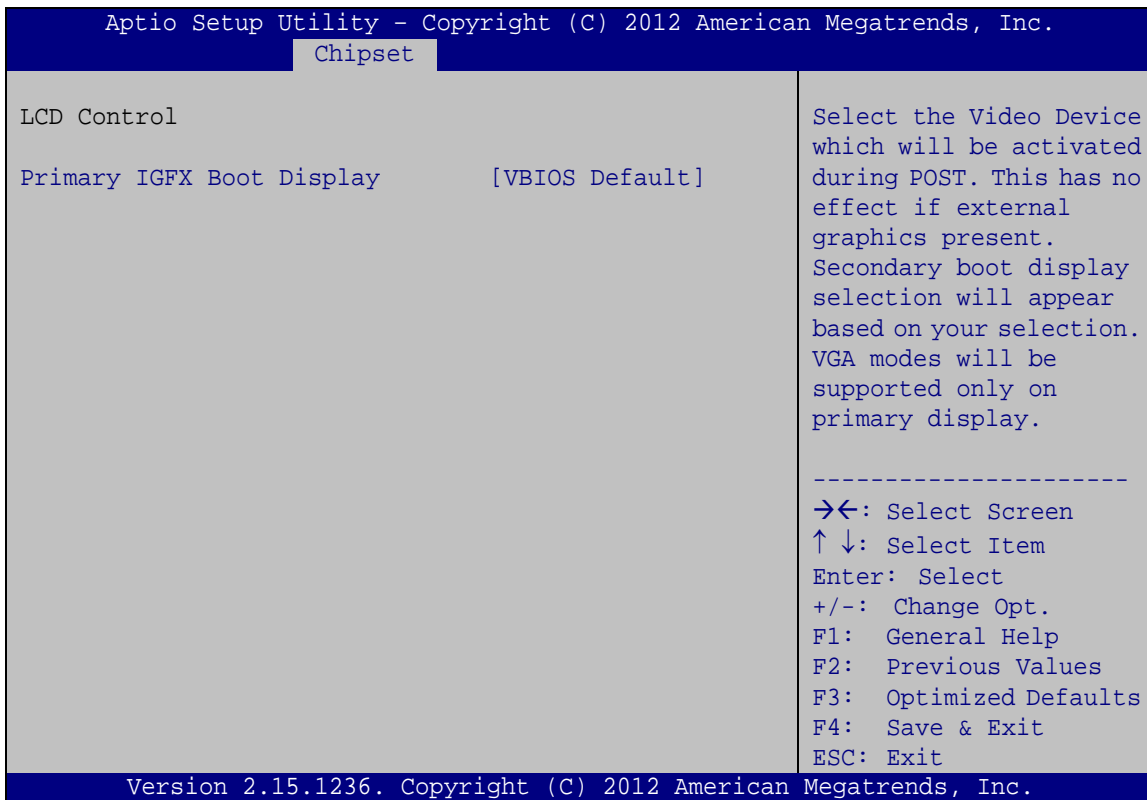

#### BIOS Menu 19: LCD Control

➔ Primary IGFX Boot Display [VBIOS Default]

Use the **Primary IGFX Boot Display** option to select the display device used by the system when it boots. Configuration options are listed below.

- VBIOS                      **DEFAULT**
- CRT

## TANK-760 Embedded System

- Display port 1
- HDMI

### 4.4.2.2 Memory Configuration

Use the **Memory Configuration** submenu (**BIOS Menu 20**) to view memory information.


```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
Chipset
Memory Information
Memory Frequency          1600 Mhz
Total Memory              4096 MB (DDR3)
DIMM#1                   4096 MB (DDR3)
DIMM#2                   Not Present
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1:  General Help
F2:  Previous Values
F3:  Optimized Defaults
F4:  Save & Exit
ESC: Exit
Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.
    
```

### BIOS Menu 20: Memory Configuration

## 4.5 Boot

Use the **Boot menu (BIOS Menu 21)** to configure system boot options.

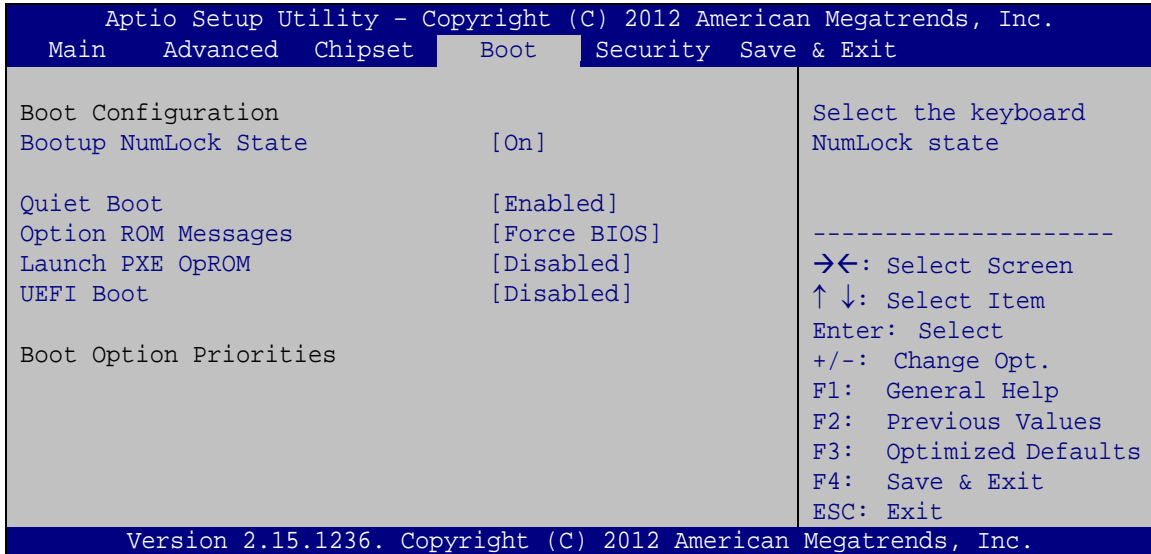

### BIOS Menu 21: Boot

- Bootup NumLock State [On]

Use the **Bootup NumLock State** BIOS option to specify if the number lock setting must be modified during boot up.

- ➔ **On**                      **DEFAULT**                      Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.
  
- ➔ **Off**                                      Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

## TANK-760 Embedded System

- Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- ➔ **Disabled** Normal POST messages displayed
- ➔ **Enabled** **DEFAULT** OEM Logo displayed instead of POST messages

- Option ROM Messages [Force BIOS]

Use the **Option ROM Messages** option to set the Option ROM display mode.

- ➔ **Force BIOS** **DEFAULT** Sets display mode to force BIOS.
- ➔ **Keep Current** Sets display mode to current.

- Launch PXE OpROM [Disabled]

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

- ➔ **Disabled** **DEFAULT** Ignore all PXE Option ROMs
- ➔ **Enabled** Load PXE Option ROMs.

- UEFI Boot [Disabled]

Use the **UEFI Boot** BIOS option to allow the system to boot from the UEFI devices.

- ➔ **Disabled** **DEFAULT** Disables to boot from the UEFI devices.
- ➔ **Enabled** Enables to boot from the UEFI devices.

## 4.6 Security

Use the **Security** menu (**BIOS Menu 22**) to set system and user passwords.

```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
Main    Advanced  Chipset    Boot    Security  Save & Exit
-----
Password Description
If ONLY the Administrator's password is set,
then this only limits access to Setup and is
only asked for when entering Setup.
If ONLY the User's password is set, then this
is a power on password and must be entered to
boot or enter Setup. In Setup the User will
have Administrator rights.
The password length must be
in the following range:
Minimum length           3
Maximum length          20

Administrator Password
User Password

Set Setup Administrator
Password

-----
-><-: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1:  General Help
F2:  Previous Values
F3:  Optimized Defaults
F4:  Save & Exit
ESC: Exit

Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.

```

### BIOS Menu 22: Security

- Administrator Password

Use the **Administrator Password** to set or change an administrator password.

- User Password

Use the **User Password** to set or change a user password.

## 4.7 Save & Exit

Use the **Save & Exit** menu (**BIOS Menu 23**) to load default BIOS values, optimal failsafe values and to save configuration changes.

```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
Main   Advanced  Chipset  Boot   Security  Save & Exit
-----
Save Changes and Exit
Discard Changes and Exit

Restore Defaults
Save as User Defaults
Restore User Defaults

Reset the system after
saving the changes.

-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1:  General Help
F2:  Previous Values
F3:  Optimized Defaults
F4:  Save & Exit
ESC: Exit

Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.

```

### BIOS Menu 23: Save & Exit

- Save Changes and Exit

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and exit the system.

- Discard Changes and Exit

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

- Restore Defaults

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

- Save as User Defaults

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

- Restore User Defaults

Use the Restore User Defaults option to restore the user defaults to all the setup options.



Appendix

A

# Safety Precautions

---

## TANK-760 Embedded System

A.1 Safety Precautions

---



## WARNING:

The precautions outlined in this appendix should be strictly followed. Failure to follow these precautions may result in permanent damage to the TANK-760.

---

Please follow the safety precautions outlined in the sections that follow:

## A.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- ***Make sure the power is turned off and the power cord is disconnected*** when moving, installing or modifying the system.
- ***Do not apply voltage levels that exceed the specified voltage range.*** Doing so may cause fire and/or an electrical shock.
- ***Electric shocks can occur*** if opened while still powered on.
- ***Do not drop or insert any objects*** into the ventilation openings.
- ***If considerable amounts of dust, water, or fluids enter the system***, turn off the power supply immediately, unplug the power cord, and contact the system vendor.
- **DO NOT:**
  - Drop the system against a hard surface.
  - In a site where the ambient temperature exceeds the rated temperature

A.1.2 Anti-static Precautions

---



## WARNING:

Failure to take ESD precautions during the installation of the TANK-760 may result in permanent damage to the TANK-760 and severe injury to the user.

---

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the TANK-760. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the TANK-760 is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- **Self-grounding:** Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring or working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- **Only handle the edges of the electrical component:** When handling the electrical component, hold the electrical component by its edges.

### A.1.3 Product Disposal




#### CAUTION:

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- 
- Outside the European Union - If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
  - Within the European Union:

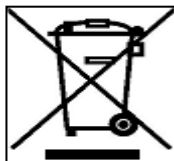

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes

## TANK-760 Embedded System

monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

### A.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the TANK-760, please follow the guidelines below.

#### A.2.1 Maintenance and Cleaning

Prior to cleaning any part or component of the TANK-760, please read the details below.

- The interior of the TANK-760 does not require cleaning. Keep fluids away from the TANK-760 interior.
- Be cautious of all small removable components when vacuuming the TANK-760.
- Turn the TANK-760 off before cleaning the TANK-760.
- Never drop any objects or liquids through the openings of the TANK-760.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the TANK-760.
- Avoid eating, drinking and smoking within vicinity of the TANK-760.

#### A.2.2 Cleaning Tools

Some components in the TANK-760 may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the TANK-760.

- **Cloth** – Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the TANK-760.
- **Water or rubbing alcohol** – A cloth moistened with water or rubbing alcohol can be used to clean the TANK-760.
- **Using solvents** – The use of solvents is not recommended when cleaning the TANK-760 as they may damage the plastic parts.

- **Vacuum cleaner** – Using a vacuum specifically designed for computers is one of the best methods of cleaning the TANK-760. Dust and dirt can restrict the airflow in the TANK-760 and cause its circuitry to corrode.
- **Cotton swabs** - Cotton swabs moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- **Foam swabs** - Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Appendix

B

# Hazardous Materials Disclosure

---

## B.1 Hazardous Materials Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.

## TANK-760 Embedded System

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	O	O	O	O	O	O
Display	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O
Battery	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006



此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯 醚 (PBDE)
壳体	O	O	O	O	O	O
显示	O	O	O	O	O	O
印刷电路板	O	O	O	O	O	O
金属螺帽	O	O	O	O	O	O
电缆组装	O	O	O	O	O	O
风扇组装	O	O	O	O	O	O
电力供应组装	O	O	O	O	O	O
电池	O	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。  
X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。