IEI Integration Corp.

MODEL:

FLEX-BX210

2U Modular Box PC with 10th Gen. Intel® Core™ i9/i7/i5/i3 Processor, DDR4, Accelerator Card, Wi-Fi, Triple GbE, M.2, PCIe 3.0, Four SSD Bays, HDMI, DP, RoHS Compliant

User Manual

Rev. 1.01 – September 15, 2022

RoHS Lead Free

Revision

Date	Version	Changes
September 14, 2022	1.01	Added BIOS Section Added SIM Moudle Installation in Section 3.7 Added System Jumper Configuration in Section 4.4 Updated PCIe Slots max length range in Section 1.6
June 18, 2021	1.00	Initial release

Safety Instructions

en Warning! Read the user manual before connecting the system to the power source.
de Vorsicht! Bitte lesen Sie die Bedienungsanleitung, bevor Sie das System an eine Stromquelle anschließen.
fr Attention! Avant de brancher le système à la source d'alimentation, consultez le mode d'emploi.
it Avvertenza! Consultare il manuale utente prima di collegare il sistema all'alimentatore.
es Atención! Lea atentamente este manual del usuario antes de operar la fuente de alimentación.
zh 警告！在將系統連接到電源之前，請仔細閱讀使用手冊。
cn 警告！在将系统连接到电源之前，请仔细阅读使用手册。

---

en Warning! To prevent the system from overheating, do not operate it in an area that exceeds the maximum operating temperature described in the user manual.
de Vorsicht! Um eine Überhitzung des Systems zu vermeiden, betreiben Sie es ausschließlich im zulässigen Betriebstemperaturbereich. Dieser ist in der Bedienungsanleitung vermerkt.
fr Attention! Pour éviter la surchauffe du système, ne l'utilisez pas dans une zone dont la température dépasse les limites décrits dans le mode d'emploi.
it Avvertenza! Per evitare che il sistema si surriscaldi, non utilizzarlo in aree che superino la temperatura massima d'esercizio descritta nel manuale utente.
es Atención! Para evitar el excesivo calentamiento del sistema, no opere en las condiciones de temperatura superior a lo recomendado en este manual del usuario.
zh 警告！為防止系統過熱，不要在使用手冊上記載的產品工作溫度範圍之外操作此系統。
cn 警告！为防止系统过热，不要在使用手册上记载的产品工作温度范围之外操作此系统。

---

en Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

de Vorsicht! Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

fr Attention! La mise au rebut ou le recyclage de ce produit sont généralement soumis aux lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

it Avvertenza! Lo smaltimento di questo prodotto deve essere eseguito secondo le leggi e i regolamenti locali.

es Atención! La disposición final de residuos de este producto se debe cumplir con las normativas y leyes del país.

zh 警告！本產品的廢棄處理應根據該國家的法律和規章進行。

cn 警告！本产品的废弃处理应根据该国家的法律和规章进行。

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions

WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.

CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.

NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.

Table of Content

1 INTRODUCTION 1

1.1 OVERVIEW 2
1.2 MODEL VARIATIONS 3
1.3 FEATURES 4
1.4 FRONT PANEL 4
1.5 REAR PANEL 5
1.6 TECHNICAL SPECIFICATIONS 6
1.7 DIMENSIONS 9

2 UNPACKING 10

2.1 UNPACKING 11
2.2 PACKING LIST 11
2.3 OPTIONAL ITEMS 12

3 INSTALLATION 13

3.1 ANTI-STATIC PRECAUTIONS 14
3.2 INSTALLATION PRECAUTIONS 14
3.3 INSTALLATION PROCEDURE 15
3.4 SOLID-STATE DRIVE INSTALLATION 16
3.5 REMOVING THE TOP COVER 18
3.6 M.2 MODULE INSTALLATION (OPTIONAL) 20
3.7 SIM MODULE INSTALLATION (OPTIONAL) 22
3.8 EXPANSION CARD INSTALLATION (OPTIONAL) 24
3.9 MOUNTING THE SYSTEM 25
3.9.1 Wall Mount 25
3.9.2 Rack Mount (Optional) 27
3.10 COM PORT CONNECTION 28
3.11 POWER-ON PROCEDURE 29
3.11.1 Installation Checklist 29
3.11.2 Power-on Procedure 29
3.12 SOFTWARE INSTALLATION 30

3.12.1 Driver Download *30*
3.13 RAID CONFIGURATION 32
3.14 TROUBLESHOOTING AND MAINTENANCE 35
3.14.1 FLEX-BX210 System Maintenance Overview *35*
3.14.2 System Troubleshooting *35*
3.14.2.1 The System Doesn't Turn On 35
3.14.2.2 The System Doesn't Boot Up 36
3.14.2.3 More Troubleshooting 36

4 INTERFACE CONNECTORS 37

4.1 PERIPHERAL INTERFACE CONNECTORS 38
4.1.1 Layout *38*
4.2 INTERNAL PERIPHERAL CONNECTORS 39
4.2.1 ATX Power Input Connector (ATX1) *40*
4.2.2 Audio Connector (AUDIO1) *40*
4.2.3 Battery Connector (BAT1) *41*
4.2.4 Chassis Intrusion Connector (CHASSIS1) *41*
4.2.5 CPU Power Connector (CPU12V1) *41*
4.2.6 DIO Connector (DIO1) *41*
4.2.7 Debug Connector (DBG_PORT1) *42*
4.2.8 EC Debug Connector (EC_FLASH1) *42*
4.2.9 Fan Connector, CPU (CPU_FAN1) *42*
4.2.10 Fan Connectors, System (SYS_FAN1, SYS_FAN2, SYS_FAN3) *42*
4.2.11 Mini SAS Connector (MINI_SAS1) *43*
4.2.12 I^2C Connector (I2C1) *43*
4.2.13 LED Connector, HDD (H_LED1) *44*
4.2.14 LED Connector, Power (P_LED1) *44*
4.2.15 Additional Power Connector (PWIN1) *44*
4.2.16 RS-422/485 Connector (COM3) *44*
4.2.17 Power Button Connector (P_BTN1) *45*
4.2.18 SMBus Connector (SMB1) *45*
4.2.19 Speaker Connector (SPK1) *45*
4.2.20 TPM Connector (TPM1) *45*
4.2.21 USB 2.0 Connectors, Dual (JUSB3, JUSB4) *46*
4.3 EXTERNAL INTERFACE PANEL CONNECTORS 46

4.3.1 External HDMI Combo Connector (HDMI1) *46*
4.3.2 External DP Combo Connector (DP1) *47*
4.3.3 LAN Connectors (LAN1/LAN2/LAN3) *48*
4.3.4 USB 3.2 Gen 2 Combo Connectors (USB1/USB2/USB3) *48*
4.3.5 RS-232/422/485 Serial Port Connectors (COM1/2) *49*
4.4 SYSTEM JUMPER SETTINGS 50
4.4.1 Flash Descriptor Security Override Jumper (J_FLASH1) *50*
4.4.2 AT/ATX Power Mode Setting (J_ATX_AT1) *51*
4.4.3 Clear CMOS Setup (J_CMOS1) *51*

5 BIOS 52

5.1 INTRODUCTION 53
5.1.1 Starting Setup *53*
5.1.2 Using Setup *54*
5.1.2.1 Keyboard Navigation 54
5.1.2.2 Touch Navigation 55
5.1.3 Getting Help *56*
5.1.4 Unable to Reboot after Configuration Changes *56*
5.1.5 BIOS Menu Bar *56*
5.2 MAIN 57
5.3 ADVANCED 61
5.3.1 CPU Configuration *62*
5.3.2 PCH-FW Configuration *66*
5.3.2.1 PTT Configuration 67
5.3.3 Trusted Computing *68*
5.3.4 F81966 Super IO Configuration *69*
5.3.4.1 Serial Port 1 Configuration 70
5.3.4.2 Serial Port 2 Configuration 71
5.3.4.3 Serial Port 3 Configuration 72
5.3.4.4 Serial Port 4 Configuration 73
5.3.5 ITE 5571 Monitor *74*
5.3.5.1 Smart Fan Mode Configuration 75
5.3.6 Serial Port Console Redirection *77*
5.3.6.1 Console Redirection Settings 78
5.3.7 Intel TXT Information *80*

5.3.8 NVMe Configuration *81*
5.4 CHIPSET 82
5.4.1 System Agent (SA) Configuration *83*
5.4.1.1 Memory Configuration 84
5.4.1.2 Graphics Configuration 85
5.4.1.3 PEG Port Configuration 87
5.4.1.3.1 PEG Port Feature Configuration 88
5.4.2 PCH-IO Configuration *89*
5.4.2.1 PCI Express Configuration 91
5.4.2.1.1 PCIe Root Port Setting 91
5.4.2.2 SATA And RST Configuration 93
5.4.2.3 HD Audio Configuration 95
5.5 SECURITY 96
5.6 BOOT 97
5.6.1 Boot Configuration *97*
5.6.2 Boot Option Priorities *98*
5.7 SAVE & EXIT 99

A REGULATORY COMPLIANCE 101

B SAFETY PRECAUTIONS 106

B.1 SAFETY PRECAUTIONS 107
B.1.1 General Safety Precautions *107*
B.1.2 Anti-static Precautions *108*
B.1.3 Product Disposal *109*
B.2 MAINTENANCE AND CLEANING PRECAUTIONS 110
B.2.1 Maintenance and Cleaning *110*
B.2.2 Cleaning Tools *110*

C BIOS MENU OPTIONS 112

D WATCHDOG TIMER 116

E ERROR BEEP CODE 119

E.1 PEI BEEP CODES 120
E.2 DXE BEEP CODES 120

F HAZARDOUS MATERIALS DISCLOSURE 121

F.1 RoHS II Directive (2015/863/EU) 122
F.2 China RoHS 123

List of Figures

Figure 1-1: FLEX-BX210 Series Box PC 2
Figure 1-2: Front Panel 4
Figure 1-3: Rear Panel 5
Figure 1-4: FLEX-BX210 Dimensions with Wall Mount Brackets (mm) 9
Figure 3-1: Unlock HDD Cover 16
Figure 3-2: Drive Tray Removal 16
Figure 3-3: SSD Retention Screws 17
Figure 3-4: SSD Installation 17
Figure 3-5: Top Cover Retention Screw Removal 19
Figure 3-6: Remove the Top Cover 19
Figure 3-7: M.2 Slot Locations 20
Figure 3-8: Removing the M.2 Module Retention Screw 20
Figure 3-9: Inserting the M.2 Module into the Slot at an Angle 21
Figure 3-10: Securing the M.2 Module 21
Figure 3-11: Slide the Upper Cover to the Release Position 22
Figure 3-12: Open the Upper Cover of the SIM Slot 22
Figure 3-13: Install the SIM Card and Close the Upper Cover 23
Figure 3-14: Slide the Upper Cover to the Locking Position 23
Figure 3-15: PCIe Slot Locations 24
Figure 3-16: Mounting Bracket Retention Screws 25
Figure 3-17: Mounting Bracket Surface Dimension 26
Figure 3-18: Install Rack Mount Bracket 27
Figure 3-19: Mounting Bracket Retention Screws 27
Figure 3-20: RS-232 Connector (COM1, COM2) 28
Figure 3-21: Power Button 29
Figure 3-22: IEI Resource Download Center 30
Figure 3-23: RAID Configuration–BIOS Setting 33
Figure 4-1: Main Board Layout Diagram (Front Side) 38
Figure 4-2: HDMI Connector 47
Figure 4-3: External DP Connector Connector 47
Figure 4-4: LAN Connector 48

Figure 4-5: RS-232/422/485 Serial Port Connectors 49
Figure 4-6: AT/ATX Power Mode Switch 51
Figure 4-7: Clear CMOS Button 51

List of Tables

Table 1-1: FLEX-BX210 PC Series 3
Table 1-2: Technical Specifications 8
Table 2-1: Package List 12
Table 2-2: Optional Packing List 12
Table 3-1: RS-232 Connector Pinouts 28
Table 4-1: Peripheral Interface Connectors 40
Table 4-2: ATX Power Input Connector (ATX1) Pinouts 40
Table 4-3: Audio Connector (AUDIO1) Pinouts 40
Table 4-4: Battery Connector (BAT1) Pinouts 41
Table 4-5: Chassis Intrusion Connector (CHASSIS1) Pinouts 41
Table 4-6: CPU Power Connector (CPU12V1) 41
Table 4-7: DIO Connector (DIO1) Pinouts 41
Table 4-8: Debug Connector (DBG_PORT1) Pinouts 42
Table 4-9: EC Debug Connector (EC_FLASH1) Pinouts 42
Table 4-10: CPU Fan Connector (CPU_FAN1) Pinouts 42
Table 4-11: System Fan Connectors Pinouts 42
Table 4-12: Mini SAS Connector (MINI_SAS1) Pinouts 43
Table 4-13: I^2C Connector (I2C1) Pinouts 43
Table 4-14: HDD LED Connector (H_LED1) Pinouts 44
Table 4-15: Power LED Connector (P_LED1) Pinouts 44
Table 4-16: Additional Power Connector (PWIN1) Pinouts 44
Table 4-17: RS-422/485 Connector (COM3) Pinouts 44
Table 4-18: Power Button Connector (P_BTN1) Pinouts 45
Table 4-19: SMBus Connector (SMB1) Pinouts 45
Table 4-20: Speaker Connector (SPK1) Pinouts 45
Table 4-21: TPM Connector (TPM1) Pinouts 45
Table 4-22: Dual USB 2.0 Connector (JUSB3) Pinouts 46
Table 4-23: Peripheral Interface Connectors 46
Table 4-24: External HDMI Connector Pinouts 46
Table 4-25: External DP Connector Pinouts 47
Table 4-26: LAN Connector Pinouts 48

Table 4-27: LAN Connector LEDs 48
Table 4-28: External USB 3.2 Gen 2 Connector Pinouts 48
Table 4-29: RS-232/422/485 Serial Port Connector Pinouts 49
Table 4-30: System Jumper Settings 50
Table 4-31: Flash Descriptor Security Override Jumper (J_FLASH1) Settings 50
Table 4-32:AT/ATX Power Mode Switch Pinouts 51
Table 4-33: Clear CMOS Button Pinouts 51
Table 5-1: BIOS Navigation Keys 54
Table 5-2: BIOS On-screen Navigation Keys 55
Table 5-3: BIOS Options and Configured USB Ports 90

List of BIOS Menus

BIOS Menu 1: BIOS Starting Menu 53
BIOS Menu 2: Touch Navigation 55
BIOS Menu 3: Main (1/2) 57
BIOS Menu 4: Main (2/2) 58
BIOS Menu 5: Advanced 61
BIOS Menu 6: CPU Configuration (1/2) 62
BIOS Menu 7: CPU Configuration (2/2) 63
BIOS Menu 8: PCH-FW Configuration 66
BIOS Menu 9: PTT Configuration 67
BIOS Menu 10: PCH-FW Configuration 68
BIOS Menu 11: F81966 Super IO Configuration 69
BIOS Menu 12: Serial Port 1 Configuration Menu 70
BIOS Menu 13: Serial Port 2 Configuration Menu 71
BIOS Menu 14: Serial Port 3 Configuration Menu 72
BIOS Menu 15: Serial Port 4 Configuration Menu 73
BIOS Menu 16: ITE 5571 Monitor 74
BIOS Menu 17: Smart Fan Mode Configuration 75
BIOS Menu 18: Serial Port Console Redirection 77
BIOS Menu 19: COM Console Redirection Settings 78
BIOS Menu 20: Intel TXT Information 80
BIOS Menu 21: NVMe Configuration 81
BIOS Menu 22: Chipset 82
BIOS Menu 23: System Agent (SA) Configuration 83
BIOS Menu 24: Memory Configuration 84
BIOS Menu 25: Graphics Configuration 85
BIOS Menu 26: PEG Port Configuration 87
BIOS Menu 27: PEG Port Feature Configuration 88
BIOS Menu 28: PCH-IO Configuration 89
BIOS Menu 29: PCI Express Configuration 91
BIOS Menu 30: PCIe Slot Configuration Submenu 92
BIOS Menu 31: SATA Configuration 93

BIOS Menu 32: HD Audio Configuration 95
BIOS Menu 33: Security 96
BIOS Menu 34: Boot Menu 97
BIOS Menu 35: Save & Exit 99

Chapter

1

Introduction

1.1 Overview

Figure 1-1: FLEX-BX210 Series Box PC

The FLEX-BX210 Box PC is powered by 10th/11th Generation Intel® Core™ i9/i7/i5/i3 processor. It can be used as an inference computing system for industrial applications and supports IEI Mustang accelerator card.

The FLEX-BX210 also includes four low-profile PCIe slots for various expansions, they can be used for adding additional GPU cards or image processing cards for high-performance Artificial Intelligence computing.

Four 2.5" SATA SSD bays with RAID function are protected in a lockable cover to ensure security of data and disks. The system is also equipped with one M.2 M-key (2280) slot to support PCIe SSD and NVMe, providing a variety of storage interfaces for users to choose.

Wi-Fi capabilities and three RJ-45 Ethernet connectors provide the system with smooth connection to an external LAN. Moreover, the FLEX-BX210 also supports WWAN communication via an optional M.2 WWAN module.

1.2 Model Variations

The model variations the FLEX-BX210 box PC series are listed in below **(See Table 1-1)**.

Model No.	Processor	Chipset	Preinstalled Memory& Power
FLEX-BX210-Q470-i3C-R20	Intel® Core™ i3-10320	Intel® Q470	8 GB + 350W PSU
FLEX-BX210-Q470-i5C-R20	Intel® Core™ i5-10500TE	Intel® Q470	8 GB + 350W PSU
FLEX-BX210-Q470-i7D-R20	Intel® Core™ i7-10700TE	Intel® Q470	16 GB + 350W PSU
FLEX-BX210-Q470-i9D-R20	Intel® Core™ i9-10900TE	Intel® Q470	16 GB + 350W PSU

Table 1-1: FLEX-BX210 PC Series

1.3 Features

The FLEX-BX210 has the following features

- 10th/11th Generation Intel® Core™ i9/i7/i5/i3 processor
- 2U chassis for 19-inch rack mount
- Support up to 64 GB of 2933 MHz DDR4 memory
- Pre-installed one Mustang-V100-MX8 accelerator card which is equipped with Intel® Movidius™ Myriad™ X Vision Processing Unit
- Two PCIe Gen3 x4 slots and two PCIe Gen3 x8 slots for expansion
- Four hot-swappable 2.5" SATA HDD/SSD bays
- Two M.2 slots support NVMe SSD and WWAN connection
- Three GbE LAN
- Wi-Fi 802.11ac and Bluetooth v5.1 supported
- Various I/O interfaces, including six USB 3.2 Gen 1 (5 Gb/s) ports, two RS-232 ports, DisplayPort output, HDMI output, audio line-out and mic-in
- RoHS compliant design

1.4 Front Panel

The front panel of the FLEX-BX210 has the following button and indicator:

- 1 x Power button with power LED indicator (power on: solid blue)
- 1 x HDD LED indicator (HDD activity: blinking red)

Figure 1-2: Front Panel

1.5 Rear Panel

An overview of the rear panel is shown in below **(See Figure 1-3).**

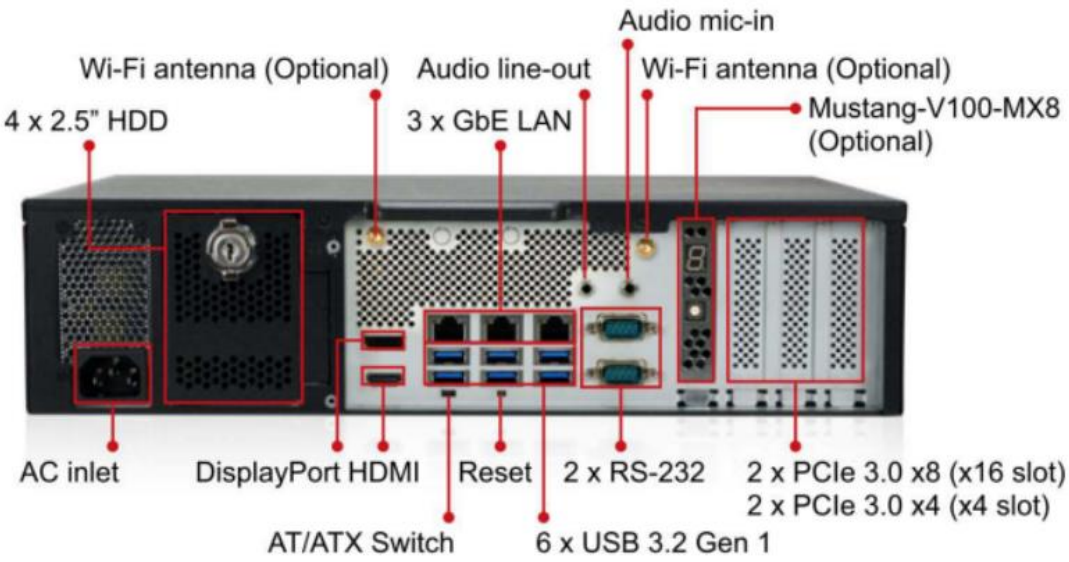

Figure 1-3: Rear Panel

NOTE:

Each USB 3.2 Gen 1 port on the FLEX-BX210's rear panel can supply 900mA power. However, if these six USB ports are all connected to devices when booting up, the system could fail to startup due to the sudden load increase.

To solve this problem, it is recommended to set **USB Power SW1** to [**+5V**] in BIOS (Chipset → PCH-IO Configuration).

1.6 Technical Specifications

The FLEX-BX210 technical specifications are listed **in Table 1-2**

	FLEX-BX210
CPU	Support 10th/11th Generation Intel® Core™ CPU: Intel® Core™ i9-10900TE 1.8GHz (up to 4.5GHz, 10-core, TDP 35W) Intel® Core™ i7-10700TE 2.0GHz (up to 4.4GHz, 8-core, TDP 35W) Intel® Core™ i5-10500TE 2.3GHz (up to 3.7GHz, 6-core, TDP 35W) Intel® Core™ i3-10320 3.8GHz (up to 4.6GHz, 4-core, TDP 65W)
Chipset	Intel® Q470/Q470E
BIOS	AMI UEFI BIOS
Memory	Two 288-pin 2933/2666 MHz dual-channel unbuffered DDR4 SDRAM DIMM slots (system max. 64 GB) - Core i9 & i7 SKU with 16 GB RAM pre-installed - Core i5 & i3 SKU with 8 GB RAM pre-installed
Graphics Engine	-Intel® HD Graphics Gen 9 Engines with low power 16 execution units, supports DX2015, OpenGL 5.X and OpenCL2.x, ES 2.0
Ethernet	LAN1: Intel® I225LM Ethernet controller LAN2 & LAN3: Intel® I225V Ethernet controller
Storage	4 x hot-swappable 2.5" HDD/SSD SATA 6G/s bays (support RAID 0/1/5/10) with LED indicators 1 x M.2 M-key 2280 slot (supports PCIe Gen3 x4)
WLAN	Intel® AC 9260 (802.11ac, 2.4GHz/5GHz, 2T2R) via M.2 2230
Bluetooth	Bluetooth v5.1 (optional)
WWAN and GNSS	M.2 3042/3052 B-key support LTE module (optional)

USB	6 x USB 3.2 Gen 1 (5 Gb/s) Type-A
COM	2 x RS-232 (DB-9, COM3 & COM4)
Audio	1 x Line out 1 x Mic in
Display	1 x DisplayPort output 1 x HDMI output
Buttons and Indicators	1 x HDD LED (front panel) 1 x Power button with LED indicator (front panel) 1 x Reset button (rear panel) 1 x AT/ATX mode switch (rear panel)
Expansions	2 x PCIe Gen3 x8 **(Max. length size: 190 mm)** 2 x PCIe Gen3 x4 **(Max. length size: 190 mm)** 1 x M.2 3042/3052 B-Key socket (with SIM card slot, supporting 5G/LTE; supports PCIe Gen3 x1 & USB 3.2 Gen1) 1 x M.2 2280 M-Key socket (supports PCIe Gen3 x4)
Thermal	3 x System fan 1 x CPU fan
Power supply	AC input ATX power supply 350 W power supply - Input: 90VAC~264VAC, 50/60Hz - Output (max.): 3.3V@14A, 5V@16A, 12V@29A, -12V@0.3A
Chassis Construction	Metal housing
Mounting	Wall mount, rack mount
Color	Black C

Dimensions (LxDxH)	357 mm x 230 mm x 88 mm
Net Weight	4 kg
Watchdog Timer	Software programmable support 1~255 sec. system reset
Vibration	5~17Hz, 0.1 double amplitude displacement 17~640Hz 1.5G acceleration peak to peak
Shock	10G acceleration part to part (11ms)
Operating Temperature	-10°C ~ 50°C
Storage Temperature	-20°C ~ 60°C
Operating Humidity	5% ~95%, non-condensing
Safety/EMC	CE/FCC

Table 1-2: Technical Specifications

1.7 Dimensions

The dimensions of the FLEX-BX210 are listed below and shown in **Figure 1-4**.

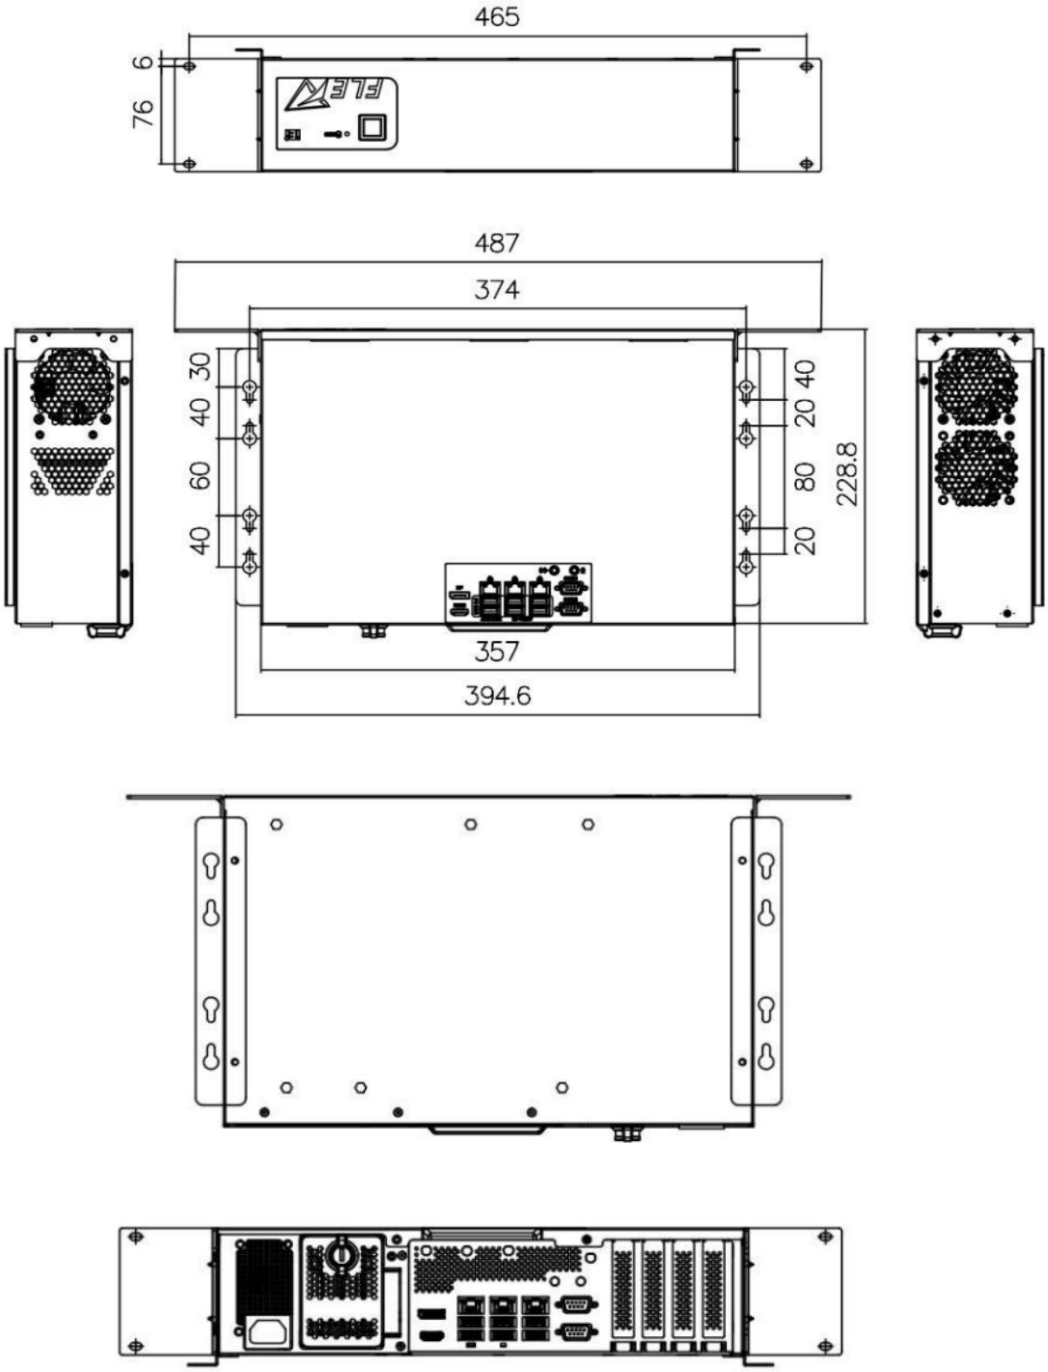

Figure 1-4: FLEX-BX210 Dimensions with Wall Mount Brackets (mm)

Chapter

2

Unpacking

2.1 Unpacking

To unpack the box PC, follow the steps below:

Step 1: Use box cutters, a knife or a sharp pair of scissors that seals the top side of the external (second) box.

Step 2: Open the external (second) box.

Step 3: Use box cutters, a knife or a sharp pair of scissors that seals the top side of the internal (first) box.

Step 4: Lift the system out of the boxes.

Step 5: Remove both polystyrene ends, one from each side.

Step 6: Make sure all the components listed in the packing list are present.

2.2 Packing List

NOTE:

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the FLEX-BX210 was purchased from or contact an IEI sales representative directly by sending an email to sales@ieiworld.com.

The FLEX-BX210 box PC is shipped with the following components:

Quantity	Item	Image
1	FLEX-BX210 box PC	
1	Power cord	

2	Keys for locking HDD cover	
2	Wall mount bracket	
8	Screws (M4*6) for mounting brackets	
16	Screws (M3*4) for HDD installation	
4	Foot pad	

Table 2-1: Package List

2.3 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
Rack mount bracket (**P/N**: FLEX-BXRK-R10)	
Wi-Fi module (**P/N**: EMB-WIFI-KIT02I3-R10)	

Table 2-2: Optional Packing List

Chapter

3

Installation

3.1 Anti-static Precautions

WARNING:

Failure to take ESD precautions during the maintenance of the FLEX-BX210 may result in permanent damage to the FLEX-BX210 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the WAFER series motherboard and the power module. (Dry climates are especially susceptible to ESD.) It is therefore critical that whenever the FLEX-BX210 is opened and any electrical component handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband***: Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding***: Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad***: When configuring the FLEX-BX210, place it on an anti-static pad. This reduces the possibility of ESD damaging the FLEX-BX210.

3.2 Installation Precautions

During installation, be aware of the precautions below:

- **Read the user manual**: The user manual provides a complete description of the FLEX-BX210, installation instructions and configuration options.
- **DANGER! Disconnect Power**: Power to the FLEX-BX210 must be disconnected during the installation process. Failing to disconnect the power may cause severe injury to the body and/or damage to the system.
- **Qualified Personnel**: The FLEX-BX210 must be installed and operated only by trained and qualified personnel. Maintenance, upgrades, or repairs may

only be carried out by qualified personnel who are familiar with the associated dangers.

- **Air Circulation**: Make sure there is sufficient air circulation when installing the FLEX-BX210. The FLEX-BX210's cooling vents must not be obstructed by any objects. Blocking the vents can cause overheating of the FLEX-BX210. Leave at least 5 cm of clearance around the FLEX-BX210 to prevent overheating.
- **Grounding**: The FLEX-BX210 should be properly grounded. The voltage feeds must not be overloaded. Adjust the cabling and provide external overcharge protection per the electrical values indicated on the label attached to the back of the FLEX-BX210.

3.3 Installation Procedure

To properly install the FLEX-BX210, the following steps must be followed. Detailed descriptions of these instructions are listed in the sections that follow.

Step 1: Unpacking the FLEX-BX210 box PC

Step 2: Install SATA SSD

Step 3: Install M.2 SSD (optional)

Step 4: Install expansion cards (optional)

Step 5: Mount the FLEX-BX210

Step 6: Connect the peripheral devices

Step 7: Power the system up

3.4 Solid-State Drive Installation

Four 2.5" SATA drives can be installed in the FLEX-BX210. The SATA drives are installed into the removable hard drive trays protected by a lockable cover on the rear panel. To install the SSD into the system, please follow the steps below.

Step 1: Turn the lock knob 90° counterclockwise by hand to unlock the HDD cover on the rear panel.

Figure 3-1: Unlock HDD Cover

Step 2: Open the HDD cover, and you will see four drive trays (**Figure 3-2**). Pull out one of the drive trays.

Figure 3-2: Drive Tray Removal

Step 3: Place an SSD onto the drive tray and secure the SSD with the bracket by inserting four retention screws (M3*4) into the bottom of the SSD (**Figure 3-3**).

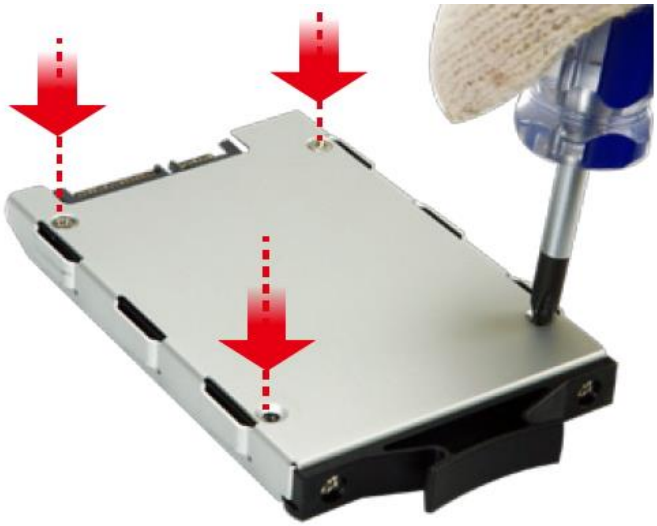

Figure 3-3: SSD Retention Screws

Step 4: Carefully insert the SSD into the slot on the rear panel. Make sure the SATA connector on the SSD is securely connected to the SATA connector inside the chassis.

Figure 3-4: SSD Installation

Step 5: Repeat **Step 2 ~ Step 4** described above to install another SSD.

Step 6: Close the HDD cover. Turn the lock knob 90° clockwise by hand, and lock it with the key if necessary.

NOTE:

To temporarily close the HDD cover, turn the lock knob 90° counterclockwise by hand to secure the cover.

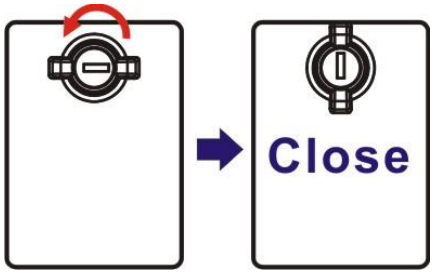

3.5 Removing the Top Cover

WARNING:

Before any internal installation procedures are carried out on the system, make sure the system is turned off and cooled down for 15 minutes. Failing to turn off the system before opening it can cause permanent damage to the system and serious or fatal injury to the user.

To access the FLEX-BX210 internally the top cover must be removed. To remove the top cover, please follow the steps below.

Step 7: Remove the six retention screws, two on the rear and two on each side **(See Figure 3-5).**

Figure 3-5: Top Cover Retention Screw Removal

Step 8: Slide the top cover towards the I/O panel until it is disengaged from the locking mechanism. Then, lift the top cover off the chassis. **(See Figure 3-6).**

Figure 3-6: Remove the Top Cover

3.6 M.2 Module Installation (Optional)

The two M.2 slots allow installation of M.2 2280 M-key cards and M.2 3042 B-key cards. To install an M.2 card, please follow the steps below.

Step 1: Remove the top cover. See Section 3.5 above.

Step 2: Locate the M.2 slot as shown in below **(See Figure 3-7).**

Figure 3-7: M.2 Slot Locations

Step 3: Remove the on-board retention screw as shown in below **(See Figure 3-8).**

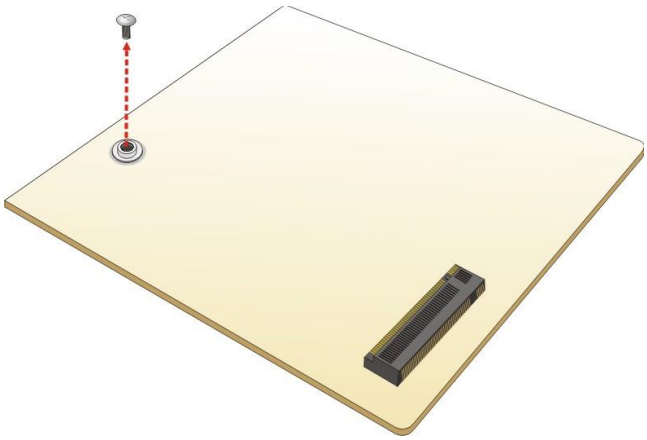

Figure 3-8: Removing the M.2 Module Retention Screw

Step 4: Line up the notch on the module with the notch on the slot. Slide the M.2 module into the socket at an angle of about 20º **(See Figure 3-9).**

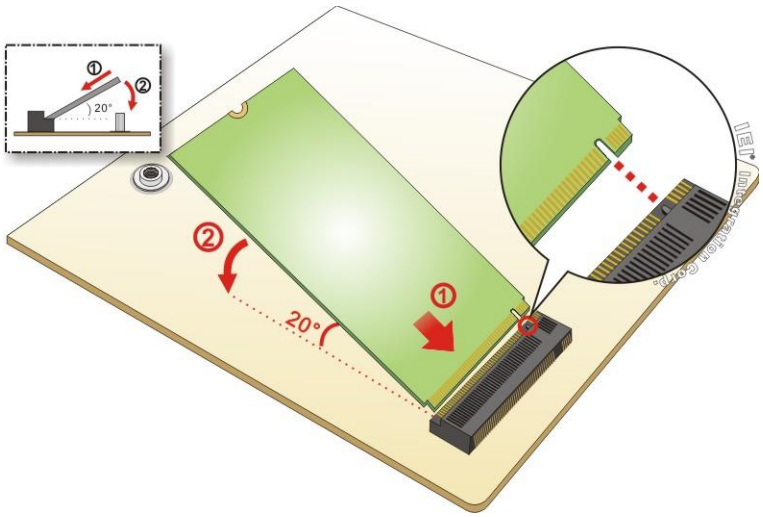

Figure 3-9: Inserting the M.2 Module into the Slot at an Angle

Step 5: Push the M.2 module down and secure it with the previously removed retention screw **(See Figure 3-10).**

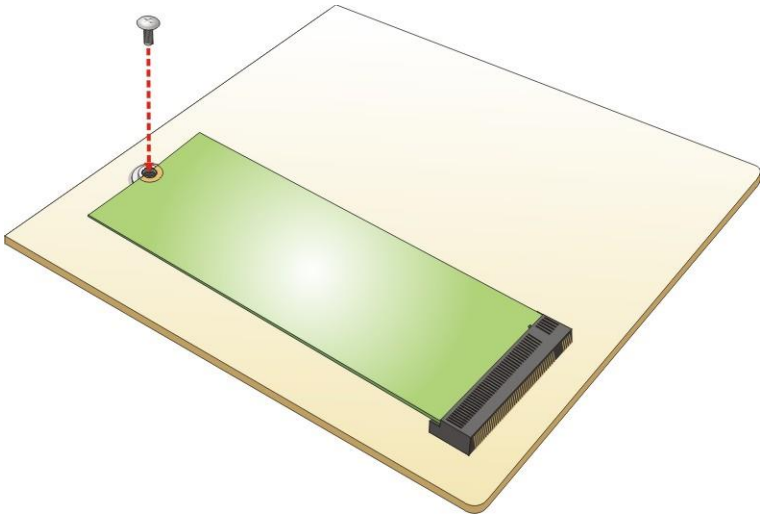

Figure 3-10: Securing the M.2 Module

Step 6: Re-install the top cover and secure it with the six retention screws previously removed.

3.7 SIM Module Installation (Optional)

The SIM card slot allows installation of the SIM card based on M.2 B-key signals. To install a SIM card, please follow the steps below.

Step 7: Slide the upper cover to the release position according to the direction of the unlocking symbol **(See Figure 3-11).**

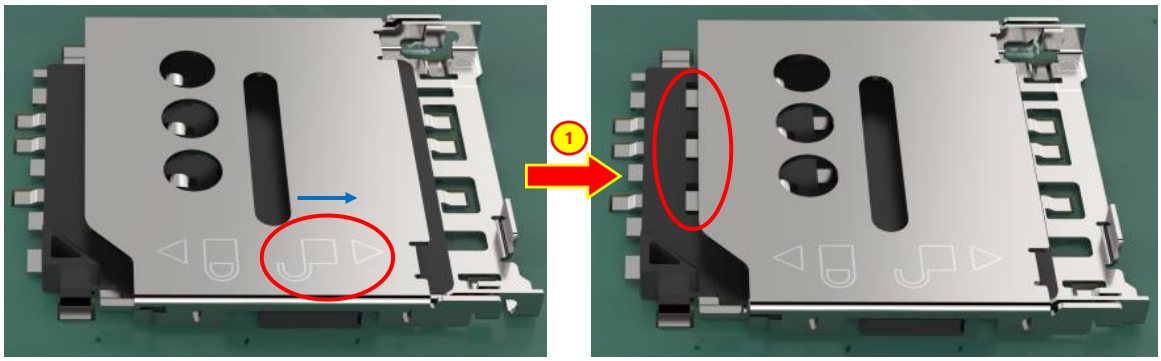

Figure 3-11: Slide the Upper Cover to the Release Position

Step 8: Open the upper cover of the SIM slot, and orient the SIM card to align with the notch of the SIM slot **(See Figure 3-12).**

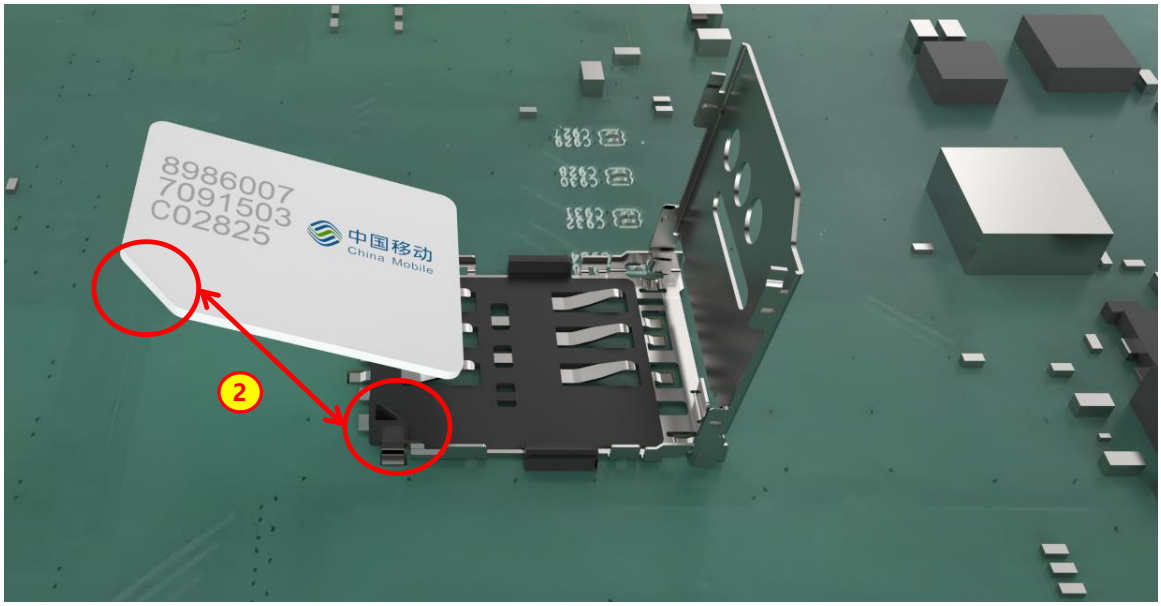

Figure 3-12: Open the Upper Cover of the SIM Slot

Step 9: Place the SIM card onto the SIM card slot, then close the upper cover of the SIM card slot **(See Figure 3-13).**

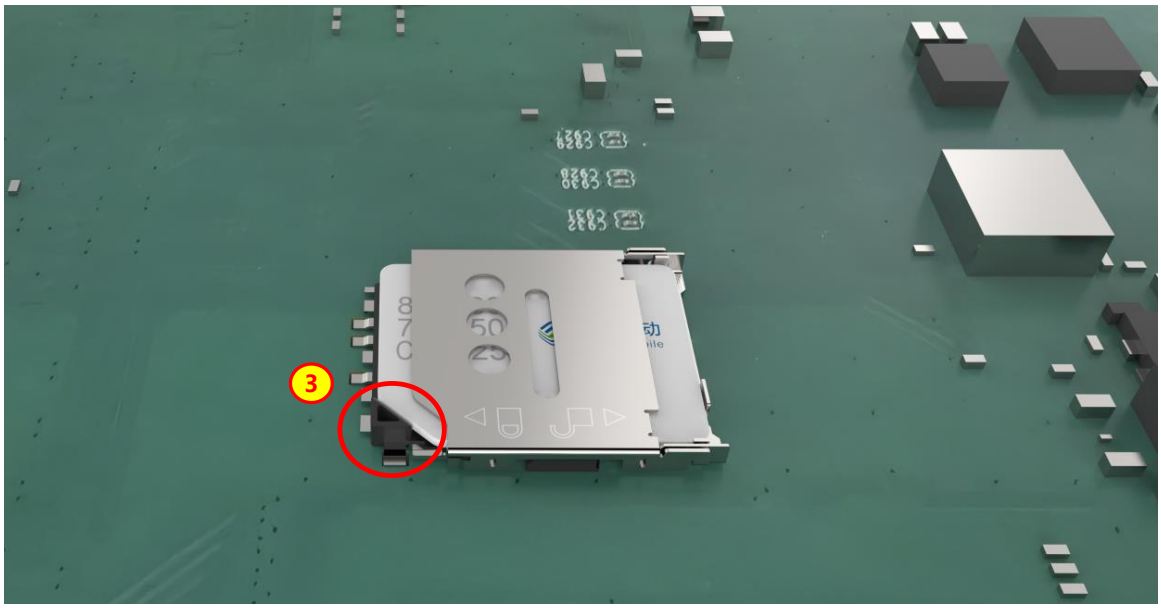

Figure 3-13: Install the SIM Card and Close the Upper Cover

Step 10: Slide the upper cover to the lock position according to the direction of the locking symbol **(See Figure 3-14).**

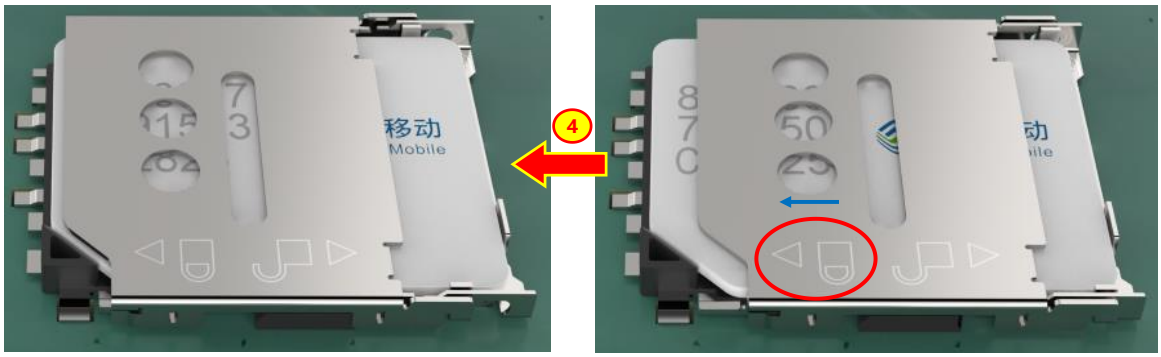

Figure 3-14: Slide the Upper Cover to the Locking Position

3.8 Expansion Card Installation (Optional)

The FLEX-BX210 supports multiple PCIe slots which are compatible with standard low-profile add-on cards, including one PCIe Gen3 x16 (x8 mode) slot and two PCIe Gen3 x4 slots. To install an expansion card, follow the steps below.

Step 1: Remove the top cover. See **Section 3.5** above.

Step 2: Locate an empty PCIe slot.

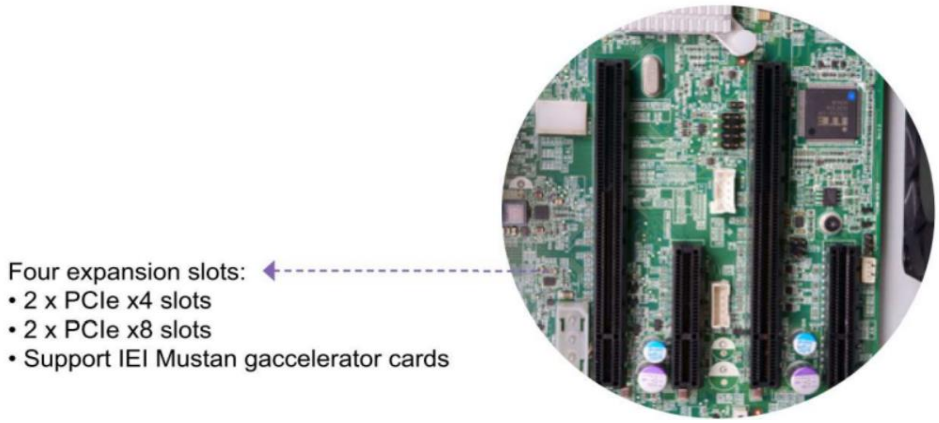

Figure 3-15: PCIe Slot Locations

Step 3: Remove the blank bracket panel on the back of the FLEX-BX210 that aligns with the empty PCIe slot. Save this bracket screw.

Step 4: Align the expansion card to a PCIe slot. Press down gently, but firmly, to seat the expansion card correctly in the slot.

Step 5: Install the bracket screw to secure the expansion card to the system chassis.

Step 6: Re-install the top cover and secure it with the six retention screws previously removed.

3.9 Mounting the System

The following sections describe the mounting methods supported by the FLEX-BX210.

3.9.1 Wall Mount

To mount the box PC onto a wall or some other surface using the two mounting brackets, please follow the steps below.

Step 1: Turn the box PC over.

Step 2: Align the two retention screw holes in each bracket with the retention screw holes on the sides of the bottom surface.

Step 3: Secure the brackets to the system by inserting two retention screws (M4*6) into each bracket **(See Figure 3-16).**

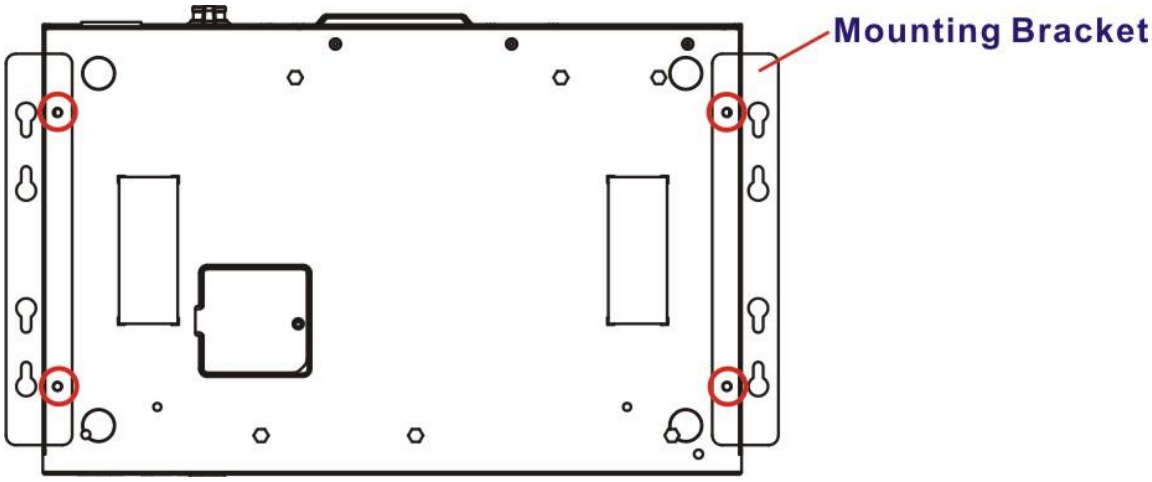

Figure 3-16: Mounting Bracket Retention Screws

Step 4: Drill holes in the intended installation surface according to the bracket dimensions listed below. **(See Figure 3-17)**

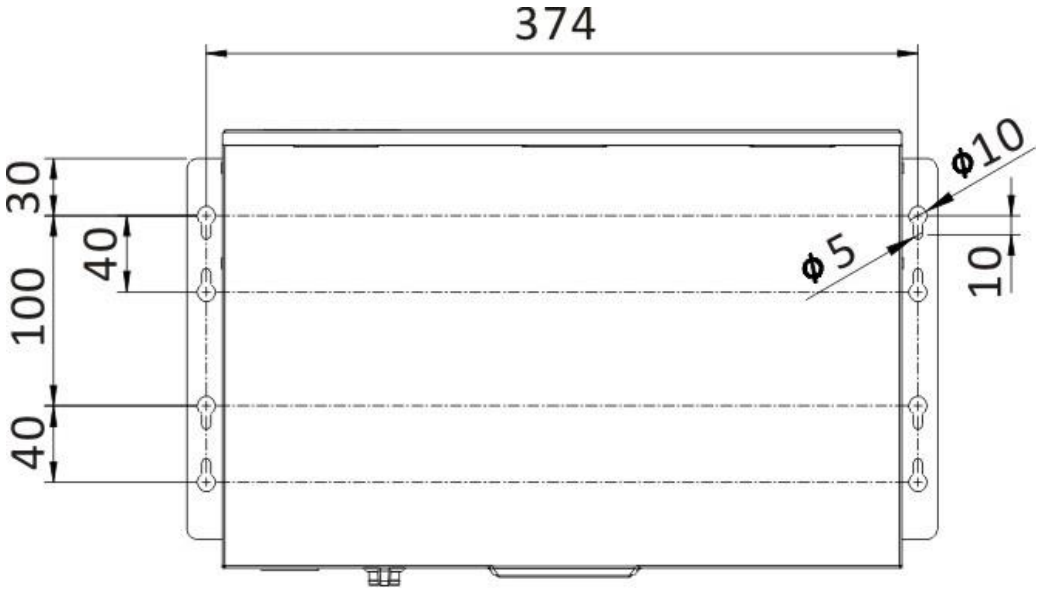

Figure 3-17: Mounting Bracket Surface Dimension

Step 5: Align the mounting holes in the sides of the mounting brackets with the predrilled holes in the mounting surface.

Step 6: Insert retention screws into each bracket to secure the system to the wall.

3.9.2 Rack Mount (Optional)

The 2U chassis of the box PC is designed to support 19" rack mount. To mount the box PC onto a rack by using the optional rack mount brackets, please follow the steps below.

Step 7: Secure the optional rack mount brackets to the system by inserting two retention screws (M4*6) into each bracket.

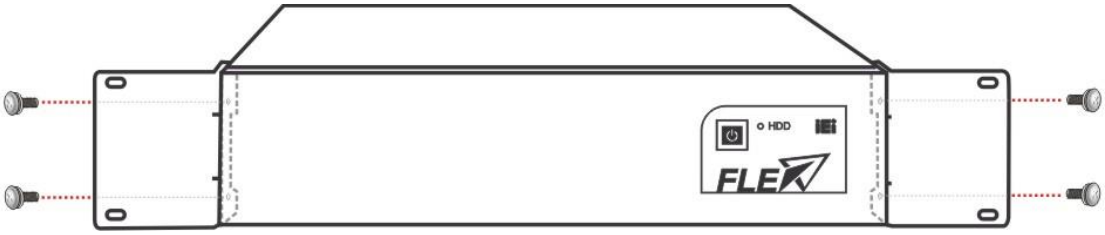

Figure 3-18: Install Rack Mount Bracket

Step 8: Slide the box PC with the attached rack mount brackets into a rack.

Step 9: Once the box PC has been properly inserted into the rack, secure the front of the rack mount bracket to the front of the rack.

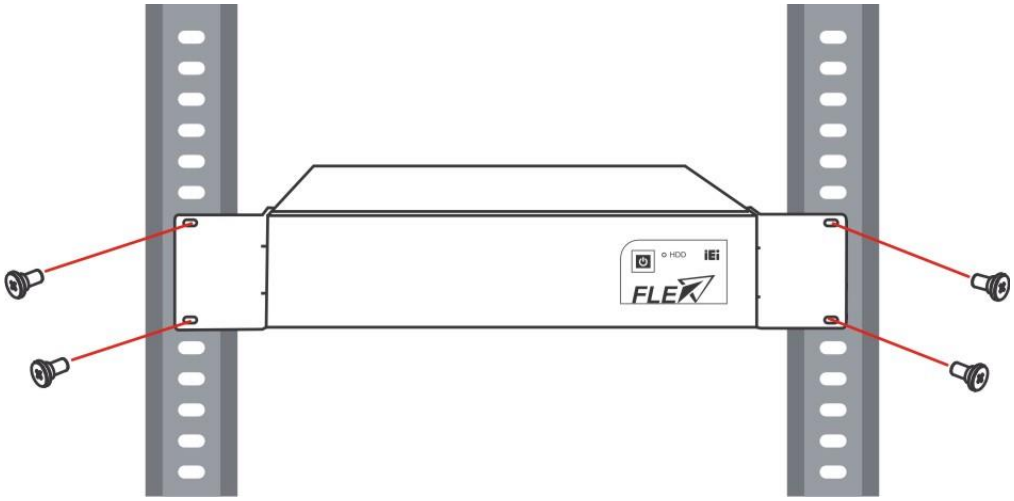

Figure 3-19: Mounting Bracket Retention Screws

3.10 COM Port Connection

The FLEX-BX210 has two DB-9 connectors for RS-232 serial port connection. The pinouts for the RS-232 connectors (COM1and COM2) are listed in the figure and table below.

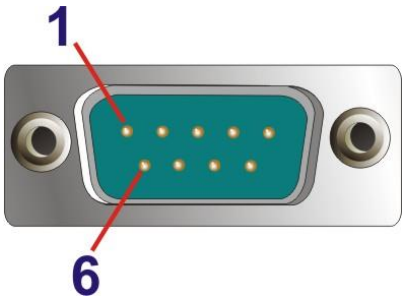

Figure 3-20: RS-232 Connector (COM1, COM2)

PIN NO.	DESCRIPTION
1	DCD
2	RX
3	TX
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

Table 3-1: RS-232 Connector Pinouts

3.11 Power-On Procedure

3.11.1 Installation Checklist

WARNING:

Make sure a power supply with the correct input voltage is being fed into the system. Incorrect voltages applied to the system may cause damage to the internal electronic components and may also cause injury to the user.

To power on the box PC please make sure of the following:

- The top cover is installed
- All peripheral devices are connected
- The power cables are plugged in
- The system is securely mounted

3.11.2 Power-on Procedure

To power-on the FLEX-BX210 please follow the steps below:

Step 1: Connect the power source to the power inlet on the rear panel. Ensure to connect the power cord to a socket-outlet with earthing connection.

Step 2: Short-press the power button on the front panel to power up the system. The power LED lights on in blue **(See Figure 3-21).**

Figure 3-21: Power Button

3.12 Software Installation

All the drivers for the FLEX-BX210 are available on IEI Resource Download Center (https://download.ieiworld.com). Type FLEX-BX210 and press Enter to find all the relevant software, utilities, and documentation.

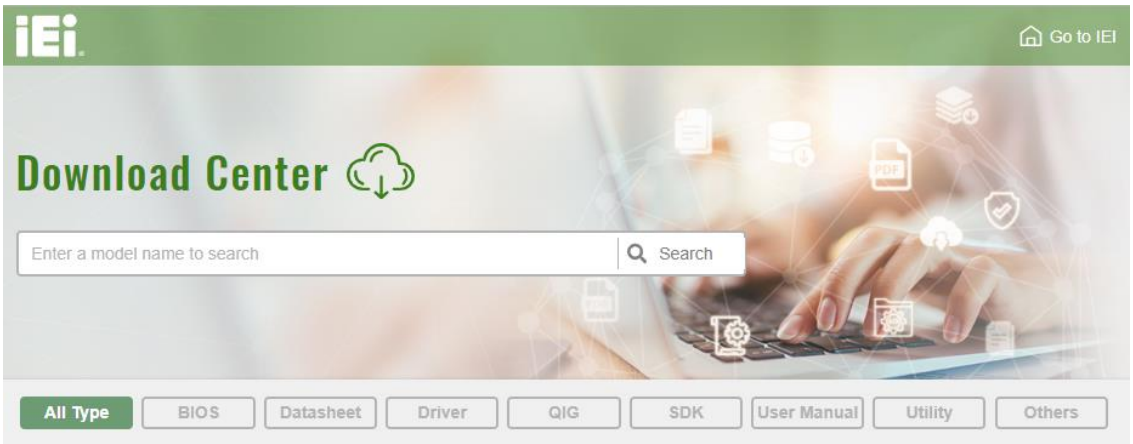

Figure 3-22: IEI Resource Download Center

3.12.1 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

Step 1: Go to https://download.ieiworld.com. Type FLEX-BX210 sand press Enter.

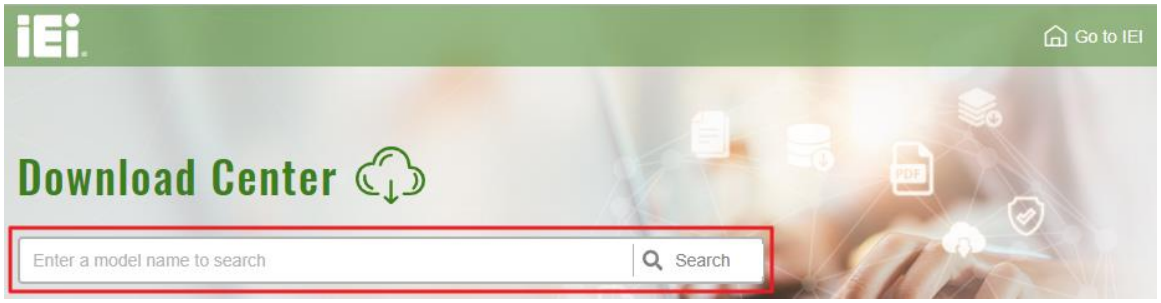

Step 2: All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.

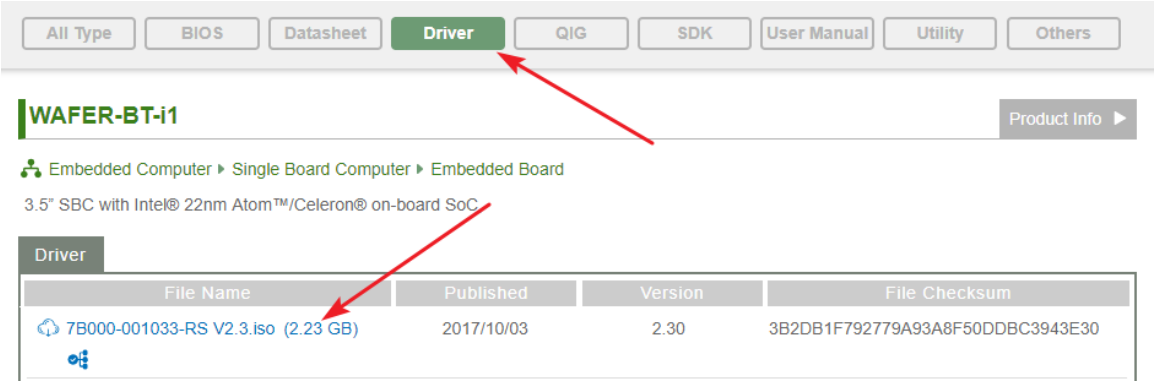

Step 3: Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (❶), or click the small arrow to find an individual driver and click the file name to download (❷).

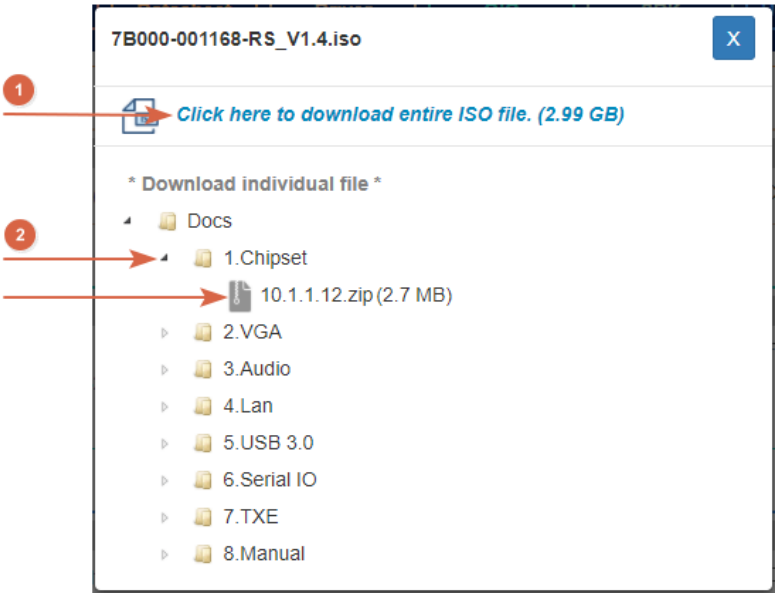

NOTE:

To install software from the downloaded ISO image file in Windows 10 (or later), double-click the ISO file to mount it as a virtual drive to view its content.

3.13 RAID Configuration

The **FLEX-BX210** can provide data protection for serial ATA (SATA) disks via the Intel® Rapid Storage Technology. To access the Intel® Rapid Storage Technology, please follow the steps below.

WARNING!

Irrecoverable data loss occurs if a working drive is removed when trying to remove a failed drive. It is strongly recommended to mark the physical connections of all SATA disk drives. Drive locations can be identified by attaching stickers to the drive bays. If a drive member of a RAID array should fail, the failed drive can then be correctly identified.

CAUTION!

Do not accidentally disconnect the SATA drive cables. Carefully route the cables within the chassis to avoid system down time.

Step 1: **Connect SATA drives to the system**. Connect two or more SATA drives to the system. Make sure the drives have the same capacity, are the same type and have the same speed.

NOTE:

Make sure the SATA drives are EXACTLY the same when they are configured in a RAID configuration. If they are not the same size, disk drive capacity is sacrificed and overall performance affected.

Step 2: **Enable SATA drives in BIOS**. Start the computer and access the BIOS setup program. Go to **Chipset → PCH-IO Configuration → SATA and RST Configuration → SATA Mode Selection**. Enable RAID support for all SATA devices **(See Figure 3-23).**

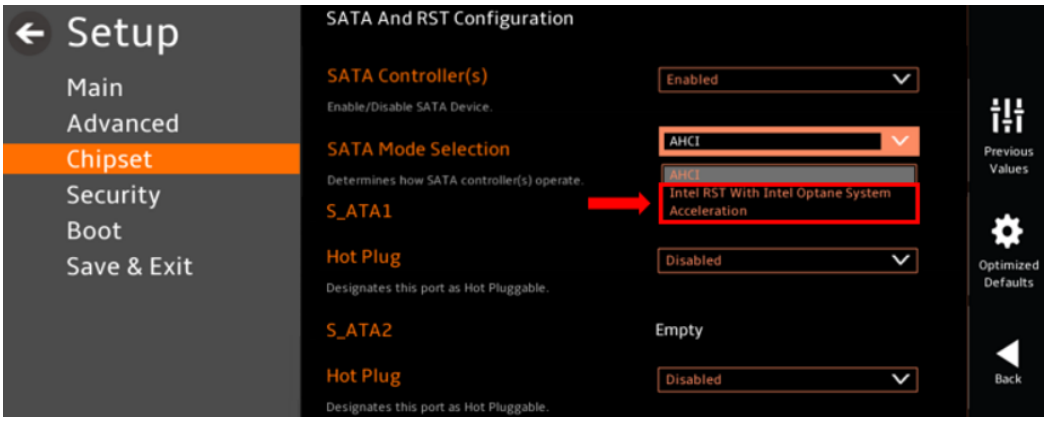

Figure 3-23: RAID Configuration–BIOS Setting

Step 3: **Save and Exit BIOS**. After the SATA support option is enabled, save and exit the BIOS.

Step 4: **Reboot the system**. Reboot the system after saving and exiting the BIOS.

Step 5: **Press Ctrl+I. during the system boot process**, press Ctrl+I when prompted to enter the RAID configuration software.

```
Intel(R) Rapid Storage Technology - Option ROM - 15.2.0.2740
Copyright (C) Intel Corporation. All rights reserved.

  RAID Volumes:
  None defined.

  Physical Devices:
  ID Device Model        Serial #                     Size Type/Status(Vol
ID)
  1  256GB SATA Flash    076616F100208548        23.4GB Non-RAID Disk
  2  256GB SATA Flash    077302EF00503528        23.4GB Non-RAID Disk
Press <CTRL+I> to enter Configuration Utility…
```

Step 6: **Configure the RAID settings**. Use the Intel® Rapid Storage Technology to configure the RAID array.

A) Select the option to **Create RAID Volume** from the Main Menu and press Enter.

```
     Intel(R) Rapid Storage Technology - Option ROM - 15.2.0.2748
        Copyright (C) Intel Corporation. All rights reserved.
============================[MAIN
MENU]============================
          1. Create RAID Volume        4. Recovery Volume Options
          2. Delete RAID Volume        5. Acceleration Options
          3. Reset Disks to Non-RAID   6. Exit
=====================[DISK/VOLUME
INFORMATION]=====================
RAID Volumes:
None defined.
```

B) Press the up/down arrows on the keyboard to choose the **RAID Level** and press Enter. Select the hard drives for the RAID configuration and press Enter when done.

```
     Intel(R) Rapid Storage Technology - Option ROM - 15.2.0.2748
        Copyright (C) Intel Corporation. All rights reserved.
========================[CREATE VOLUME
MENU]========================
                     Name:  Volume1
                RAID Level:  RAID0(Stripe)
                     Disks:  Select Disks
                Strip Size:  16KB
                  Capacity:  238.5 GB
                      Sync:  N/A
                             Create Volume
```

Step 7: **Create RAID Volume.** Highlight **Create Volume** and press Enter, then choose Y when the warning prompt appears to create volume.

```
     Intel(R) Rapid Storage Technology - Option ROM - 15.2.0.2748
        Copyright (C) Intel Corporation. All rights reserved.
========================[CREATE VOLUME
MENU]========================
                     Name:  Volume1
                RAID Level:  RAID0(Stripe)
                     Disks:  Select Disks
                Strip Size:  16KB
                  Capacity:  238.5 GB
                      Sync:  N/A
                             Create Volume
```

3.14 Troubleshooting and Maintenance

WARNING:

Take Anti-Static precautions whenever maintenance is being carried out on the system components. Failure to take anti-static precautions can cause permanent system damage. For more details on anti-static precautions, please refer to **Section 3.1**.

3.14.1 FLEX-BX210 System Maintenance Overview

NOTE:

When doing maintenance operations on the system, please follow the instructions in this chapter. Failure to follow these instructions may lead to personal injury and system damage.

To preserve the working integrity of the FLEX-BX210 box PC, the system must be properly maintained. If box PC components need replacement, the proper maintenance procedures must be followed to ensure the system can continue to operate normally.

3.14.2 System Troubleshooting

This section provides some simple troubleshooting suggestions.

3.14.2.1 The System Doesn't Turn On

If after turning the system on, there is no power (indicated by the power LED on the front panel not turning on) please do the following:

Step 1: Check that the power cable connector is properly connected to the system rear panel.

Step 2: Check that the power cable connector is properly plugged into the power source.

Step 3: Make sure the power button is turned on.

Step 4: Plug the system into a monitor and check to see if anything appears on the screen. If the boot-up screen appears it means the power LED has failed. To fix this problem, contact an IEI sales representative directly.

3.14.2.2 The System Doesn't Boot Up

If the system doesn't boot up please do the following:

Step 1: Check the power is turned on. See Section 3.14.2.1 above.

Step 2: Make sure the SO-DIMM modules are properly installed.

3.14.2.3 More Troubleshooting

Nothing appears on the monitor after booting up the system: Make sure the monitor is properly connected to the system and the monitor is connected to a power supply and turned on.

WARNING!

If all troubleshooting measures have been taken and the system still fails to start, contact the IEI reseller or vendor you purchased the FLEX-BX210 from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@ieiworld.com.

Chapter

4

Interface Connectors

4.1 Peripheral Interface Connectors

The FLEX-BX210 box PC motherboard comes with a number of peripheral interface connectors and configuration jumpers. The connector locations are shown **in Figure 4-1.** The connector pinouts for these connectors are listed in the following sections.

4.1.1 Layout

The figures below show all the connectors and jumpers of the system motherboard.

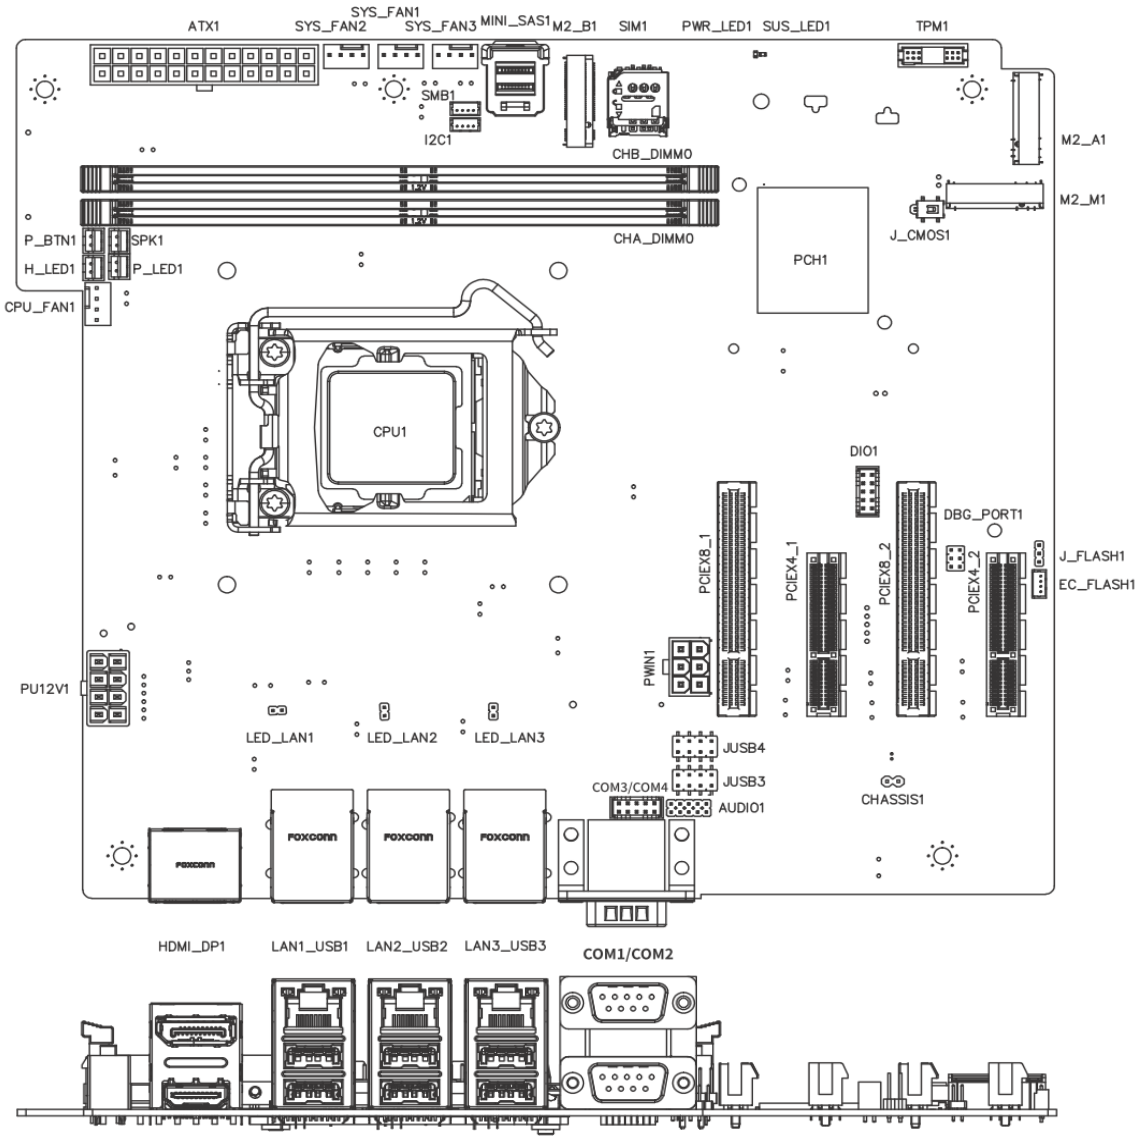

Figure 4-1: Main Board Layout Diagram (Front Side)

4.2 Internal Peripheral Connectors

The table below shows a list of the internal peripheral interface connectors on the system motherboard. Pinouts of these connectors can be found in the following sections.

Connector	Type	Label
ATX power input connector	24-pin Molex	ATX1
Audio connector	10-pin header	AUDIO1
Battery connector	2-pin wafer	BAT1
Chassis intrusion connector	2-pin header	CHASSIS1
CPU power connector	8-pin Molex	CPU12V1
DIMM sockets	DDR4 DIMM socket	CHA_DIMM0, CHB_DIMM0
DIO connector	10-pin box header	DIO1
Debug connector	6-pin header	DBG_PORT1
EC debug connector	4-pin wafer	EC_FLASH1
Fan connector (CPU)	4-pin wafer	CPU_FAN1
Fan connector (system)	4-pin wafer	SYS_FAN1, SYS_FAN2, SYS_FAN3
I^2C connector	4-pin wafer	I2C1
LED connector, HDD	2-pin wafer	H_LED1
LED connector, power	2-pin wafer	P_LED1
Mini SAS connector	Mini SAS	MINI_SAS1
M.2 M-key slot	M.2 2280 M-key	M2_M1
M.2 B-key slot	M.2 3042 B-key	M2_B1
M.2 A-key slot	M.2 2230 A-key	M2_A1
PCIe x4 slots	PCIe x4 slot	PCIEX4_1, PCIEX4_2
PCIe x8 slots	PCIe x16 slot	PCIEX8_1, PCIEX8_2
Power button connector	2-pin wafer	P_BTN1
Additional power connector	6-pin connector	PWIN1
RS-422/485 connector (dual)	10-pin box header	COM3
SIM card slot	Micro SIM slot	SIM1
SMBus connector	4-pin wafer	SMB1
Speaker connector	2-pin wafer	SPK1

Connector	Type	Label
TPM connector	20-pin box header	TPM1
USB 2.0 connector (dual)	8-pin header	JUSB3, JUSB4

Table 4-1: Peripheral Interface Connectors

4.2.1 ATX Power Input Connector (ATX1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC3V	13	VCC3V
2	VCC3V	14	-VCC12V
3	GND	15	GND
4	VCC5V	16	PS_ON
5	GND	17	GND
6	VCC5V	18	GND
7	GND	19	GND
8	PWR_OK	20	NC
9	SB5V	21	VCC5V
10	VCC12V	22	VCC5V
11	VCC12V	23	VCC5V
12	VCC3V	24	GND

Table 4-2: ATX Power Input Connector (ATX1) Pinouts

4.2.2 Audio Connector (AUDIO1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	FRONT-R	2	LINE-R
3	GND	4	GND
5	FRONT-L	6	LINE-L
7	GND	8	GND
9	MIC1-CONN-R	10	MIC-CONN-L

Table 4-3: Audio Connector (AUDIO1) Pinouts

4.2.3 Battery Connector (BAT1)

PIN NO.	DESCRIPTION
1	VBATT
2	GND

Table 4-4: Battery Connector (BAT1) Pinouts

4.2.4 Chassis Intrusion Connector (CHASSIS1)

PIN NO.	DESCRIPTION
1	VCC3V
2	CHASSIE

Table 4-5: Chassis Intrusion Connector (CHASSIS1) Pinouts

4.2.5 CPU Power Connector (CPU12V1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	5	VCC12V
2	GND	6	VCC12V
3	GND	7	VCC12V
4	GND	8	VCC12V

Table 4-6: CPU Power Connector (CPU12V1)

4.2.6 DIO Connector (DIO1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	VCC
3	Output 3	4	Output 2
5	Output 1	6	Output 0
7	Input 3	8	Input 2
9	Input 1	10	Input 0

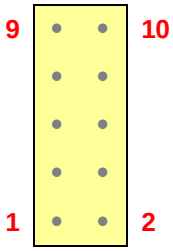

Table 4-7: DIO Connector (DIO1) Pinouts

4.2.7 Debug Connector (DBG_PORT1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+5V	2	SMCLK_EC
3	NC	4	SMDATA_EC
5	GND	6	PLTRST_N

Table 4-8: Debug Connector (DBG_PORT1) Pinouts

4.2.8 EC Debug Connector (EC_FLASH1)

PIN NO.	DESCRIPTION
1	GND
2	EC_FLASH_DATA
3	EC_FLASH_CLK
4	NC

Table 4-9: EC Debug Connector (EC_FLASH1) Pinouts

4.2.9 Fan Connector, CPU (CPU_FAN1)

PIN NO.	DESCRIPTION
1	GND
2	+12V
3	FANIO
4	PWM

Table 4-10: CPU Fan Connector (CPU_FAN1) Pinouts

4.2.10 Fan Connectors, System (SYS_FAN1, SYS_FAN2, SYS_FAN3)

PIN NO.	DESCRIPTION
1	GND
2	+12V
3	FANIO
4	PWM

Table 4-11: System Fan Connectors Pinouts

4.2.11 Mini SAS Connector (MINI_SAS1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
A1	NC	B1	NC
A2	NC	B2	NC
A3	GND	B3	GND
A4	SATA_RX1+	B4	SATA_RX0+
A5	SATA_RX1-	B5	SATA_RX0-
A6	GND	B6	GND
A7	SATA_RX3+	B7	SATA_RX2+
A8	SATA_RX3-	B8	SATA_RX2-
A9	GND	B9	GND
C1	NC	D1	NC
C2	NC	D2	NC
C3	GND	D3	GND
C4	SATA_TX1+	D4	SATA_TX0+
C5	SATA_TX1-	D5	SATA_TX0-
C6	GND	D6	GND
C7	SATA_TX3+	D7	SATA_TX2+
C8	SATA_TX3-	D8	SATA_TX2-
C9	GND	D9	GND

Table 4-12: Mini SAS Connector (MINI_SAS1) Pinouts

4.2.12 I^2C Connector (I2C1)

PIN NO.	DESCRIPTION
1	GND
2	I2C_DATA
3	I2C_CLK
4	+5V

Table 4-13: I^2C Connector (I2C1) Pinouts

4.2.13 LED Connector, HDD (H_LED1)

PIN NO.	DESCRIPTION
1	VCC5V
2	SATA_LED#

Table 4-14: HDD LED Connector (H_LED1) Pinouts

4.2.14 LED Connector, Power (P_LED1)

PIN NO.	DESCRIPTION
1	VCC5V
2	GND

Table 4-15: Power LED Connector (P_LED1) Pinouts

4.2.15 Additional Power Connector (PWIN1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC12V	4	GND
2	VCC12V	5	GND
3	VCC12V	6	GND

Table 4-16: Additional Power Connector (PWIN1) Pinouts

4.2.16 RS-422/485 Connector (COM3)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	COM3_TX-	2	COM4_TX-
3	COM3_TX+	4	COM4_TX+
5	COM3_RT-	6	COM4_RT-
7	COM3_RX+	8	COM4_RX+
9	GND	10	GND

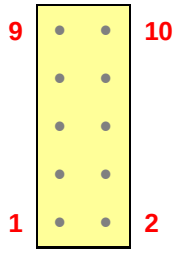

Table 4-17: RS-422/485 Connector (COM3) Pinouts

4.2.17 Power Button Connector (P_BTN1)

PIN NO.	DESCRIPTION
1	PWRBTN_SW#
2	GND

Table 4-18: Power Button Connector (P_BTN1) Pinouts

4.2.18 SMBus Connector (SMB1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	3	SMB_CLK
2	SMB_DATA	4	VCC5V

Table 4-19: SMBus Connector (SMB1) Pinouts

4.2.19 Speaker Connector (SPK1)

PIN NO.	DESCRIPTION
1	VCC5V
2	PC_BEEP

Table 4-20: Speaker Connector (SPK1) Pinouts

4.2.20 TPM Connector (TPM1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	CLOCK	2	GND
3	FRAME	4	NC
5	RESET	6	VCC5V
7	LAD3	8	LAD2
9	VCC3V	10	LAD1
11	LAD0	12	GND
13	SMB_CLK	14	SMB_DATA
15	SB3V	16	SERIRQ
17	GND	18	CLKRUN
19	LPCPD	20	DRQ

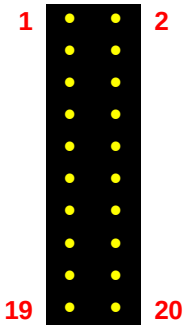

Table 4-21: TPM Connector (TPM1) Pinouts

4.2.21 USB 2.0 Connectors, Dual (JUSB3, JUSB4)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	SB5V	2	GND
3	DATA-	4	DATA+
5	DATA+	6	DATA-
7	GND	8	SB5V

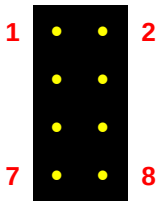

Table 4-22: Dual USB 2.0 Connector (JUSB3) Pinouts

4.3 External Interface Panel Connectors

The table below shows a list of the external interface panel connectors on the system motherboard. Pinouts of these connectors can be found in the following sections.

Connector	Type	Label
DP and HDMI connectors	DisplayPorts, HDMI	HDMI_DP1
Ethernet and USB 3.2 Gen 2 combo connectors	RJ-45, USB 3.2 Gen 2 Type-A	LAN1_USB1, LAN2_USB2, LAN3_USB3,
RS-232/422/485 connectors	DB-9	COM1, COM2

Table 4-23: Peripheral Interface Connectors

4.3.1 External HDMI Combo Connector (HDMI1)

Pin	Description	Pin	Description
1	HDMI_DATA2	11	GND
2	GND	12	HDMI_CLK#
3	HDMI_DATA2#	13	N/C
4	HDMI_DATA1	14	N/C
5	GND	15	HDMI_SCL
6	HDMI_DATA1#	16	HDMI_SDA
7	HDMI_DATA0	17	GND
8	GND	18	+5V
9	HDMI_DATA0#	19	HDMI_HPD
10	HDMI_CLK		

Table 4-24: External HDMI Connector Pinouts

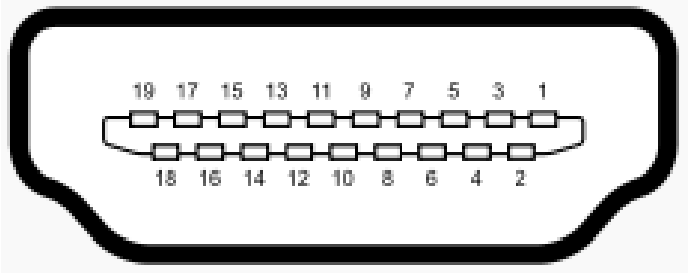

Figure 4-2: HDMI Connector

4.3.2 External DP Combo Connector (DP1)

Pin	Description	Pin	Description
1	LANE0P	11	GND
2	GND	12	LANE3N
3	LANE0N	13	AUX_CTRL_DET_C
4	LANE1P	14	GND
5	LANE1N	15	AUXP
6	GND	16	GND
7	LANE2P	17	AUXN
8	GND	18	HPD
9	LANE2N	19	GND
10	LANE3P	20	+3.3V

Table 4-25: External DP Connector Pinouts

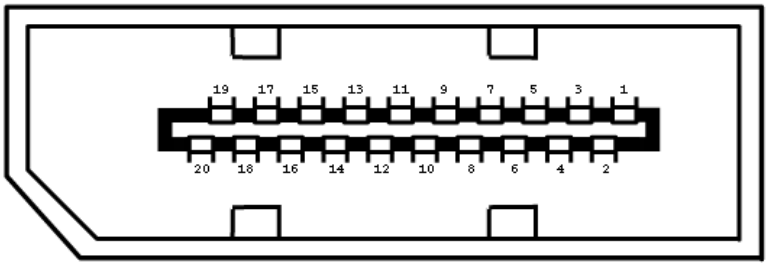

Figure 4-3: External DP Connector Connector

4.3.3 LAN Connectors (LAN1/LAN2/LAN3)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	MDIA3-	5	MDIA1+
2	MDIA3+	6	MDIA2+
3	MDIA2-	7	MDIA0-
4	MDIA1-	8	MDIA0+

Table 4-26: LAN Connector Pinouts

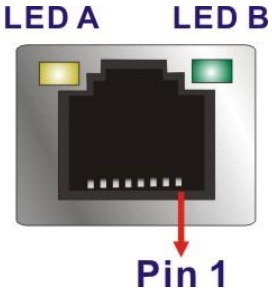

Figure 4-4: LAN Connector

LED	Description	LED	Description
A	on: linked blinking: data is being sent/received	B	off: 10 Mb/s green: 100 Mb/s orange: 1000 Mb/s

Table 4-27: LAN Connector LEDs

4.3.4 USB 3.2 Gen 2 Combo Connectors (USB1/USB2/USB3)

PIN	DESCRIPTION	PIN	DESCRIPTION
1	VBUS_30_0	10	VBUS_30_1
2	USB_DATA-	11	USB_DATA-
3	USB_DATA+	12	USB_ DATA+
4	GND	13	GND
5	USB3_RX-	14	USB3_RX-
6	USB3_RX+	15	USB3_ RX+
7	GND	16	GND
8	USB3_TX-	17	USB3_TX-
9	USB3_TX+	18	USB3_TX+

Table 4-28: External USB 3.2 Gen 2 Connector Pinouts

4.3.5 RS-232/422/485 Serial Port Connectors (COM1/2)

Mode	RS-232	RS-422	RS-485
PIN NO.	DESCRIPTION	DESCRIPTION	DESCRIPTION
1	DCD#	TX-	TX-
2	RXD	TX+	TX+
3	TXD	RX+	
4	DTR#	RX-	
5	GND		
6	DSR#		
7	RTS#		
8	CTS#		
9	RI#		

Table 4-29: RS-232/422/485 Serial Port Connector Pinouts

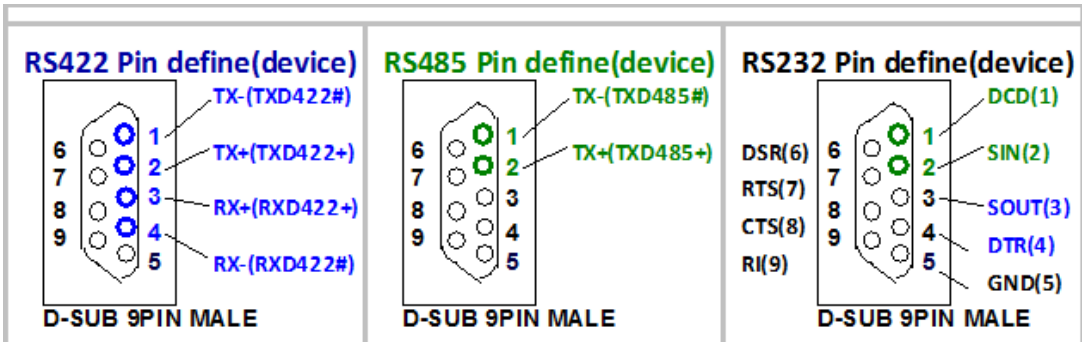

Figure 4-5: RS-232/422/485 Serial Port Connectors

4.4 System Jumper Settings

The following table shows a list of jumpers on the FLEX-BX210 motherboard.

Jumper Name	Type	Label
Flash Descriptor Security Override	3-pin header	J_FLASH1
AT/ATX Power Mode Setting	3-pin switch	J_ATX_AT1
Clear CMOS	Button	J_CMOS1

Table 4-30: System Jumper Settings

4.4.1 Flash Descriptor Security Override Jumper (J_FLASH1)

Pin	Description
Short 1-2	Disabled (default)
Short 2-3	Enabled

Table 4-31: Flash Descriptor Security Override Jumper (J_FLASH1) Settings

To update the ME firmware, please follow the steps below.

Step 1: Before turning on the system power, short pin 2-3 of the Flash Descriptor Security Override jumper.

Step 2: Update the BIOS and ME firmware, and then turn off the system power.

Step 3: Remove the metal clip on the Flash Descriptor Security Override jumper or return to its default setting (short pin 1-2).

Step 4: Restart the system. The system will reboot 2 ~ 3 times to complete the ME firmware update.

4.4.2 AT/ATX Power Mode Setting (J_ATX_AT1)

Use the **J_ATX_AT1** switch to specify the systems power mode as AT or ATX

PIN NO.	DESCRIPTION
1-2 (Right)	ATX Power Mode (default)
2-3 (Left)	AT Power Mode

Table 4-32:AT/ATX Power Mode Switch Pinouts

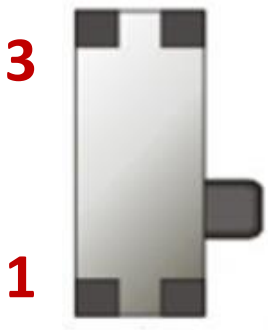

Figure 4-6: AT/ATX Power Mode Switch

4.4.3 Clear CMOS Setup (J_CMOS1)

To clear the CMOS Setup (for example if you have forgotten the password, you should clear the CMOS and then reset the password), you should take off the battery(BT1) and press the button for about 3 seconds. This will set back to normal operation mode.

PIN NO.	DESCRIPTION
NC	Keep CMOS Setup (Normal Operation)
Press button	Clear CMOS Setup

Table 4-33: Clear CMOS Button Pinouts

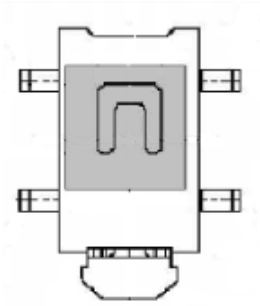

Figure 4-7: Clear CMOS Button

Chapter

5

BIOS

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.

NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. **Using keyboard**: Press the **DEL** or **F2** as soon as the system is turned on.
2. **Using touchscreen**: Press the **Setup** button on the upper right corner of the BIOS Starting Menu.

If the message disappears before the **DEL or F2** key is pressed, restart the computer and try again, then the BIOS Starting Menu will appear (**BIOS Menu 1**). Select "Setup" and press Enter to get into the BIOS Setup.

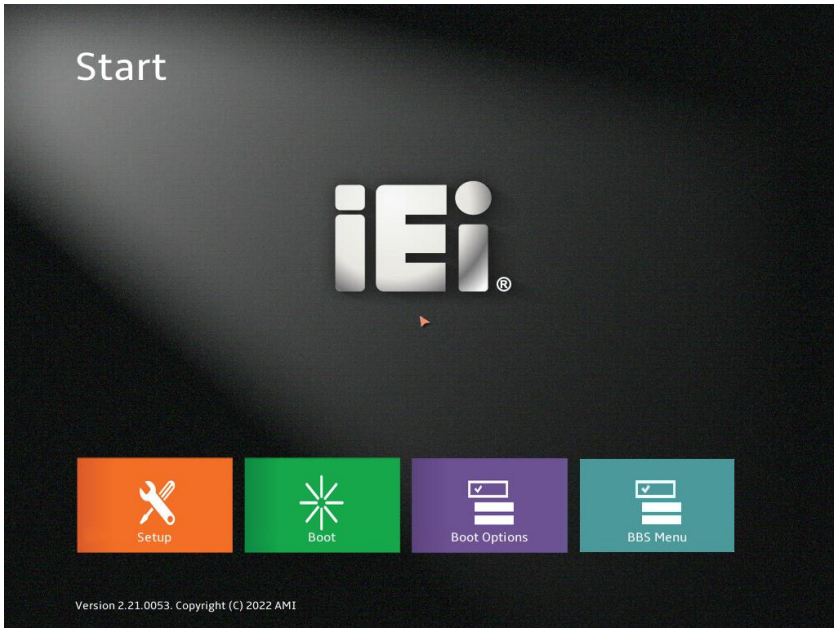

BIOS Menu 1: BIOS Starting Menu

5.1.2 Using Setup

The BIOS Setup menu can be navigated by using a keyboard or a touchscreen.

5.1.2.1 Keyboard Navigation

For keyboard navigation, use the navigation keys shown in **Table 5-1**.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page
Page Dn	Move to the next page
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS
<K>	Scroll help area upwards
<M>	Scroll help area downwards

Table 5-1: BIOS Navigation Keys

5.1.2.2 Touch Navigation

For touchscreen navigation (**BIOS Menu 2**), use the on-screen navigation keys shown below.

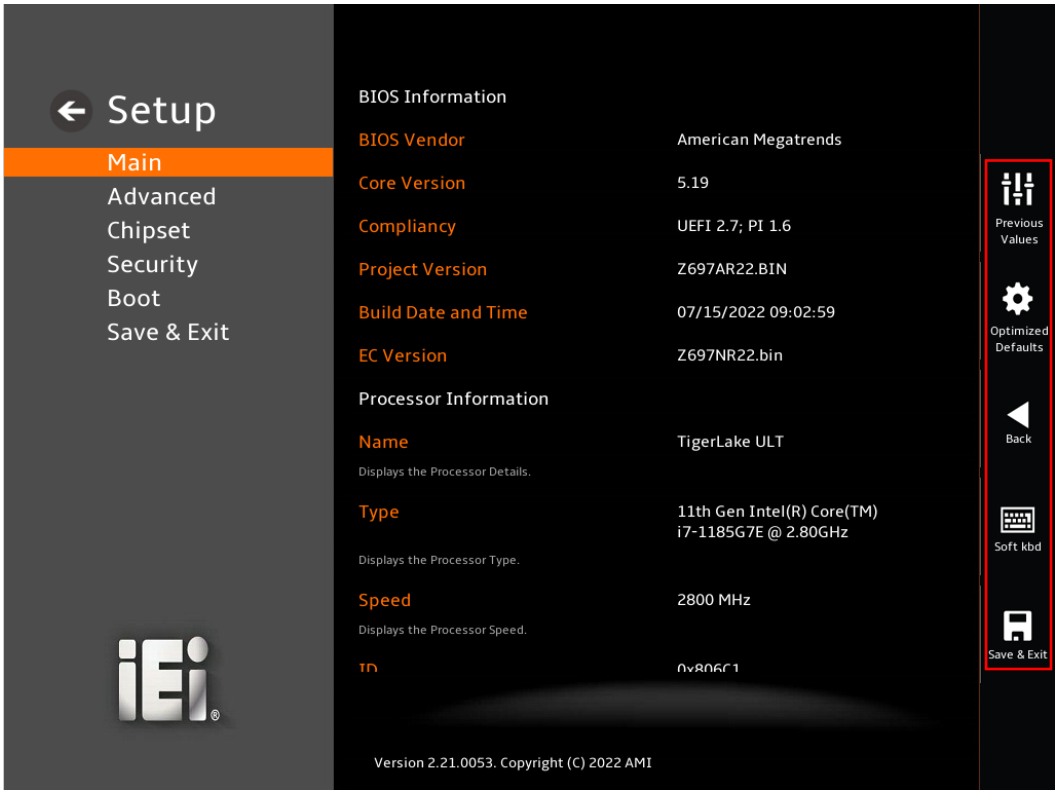

BIOS Menu 2: Touch Navigation

On-screen Button	Function
Previous Values	Load the last value you set.
Optimized Defaults	Load the factory default values in order to achieve the best performance.
Back	Return to the previous menu.
Soft kbd	Display the on-screen keyboard.
Save & Exit	Save the changes made to the BIOS options and reset the system.

Table 5-2: BIOS On-screen Navigation Keys

5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window, press the **Esc** key.

5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the clear CMOS button described in **Chapter 4**.

5.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

5.2 Main

The **Main** BIOS menu appears when the **BIOS Setup** program is entered. The **Main** menu (**BIOS Menu 3** & **BIOS Menu 3**) gives an overview of the basic system information.

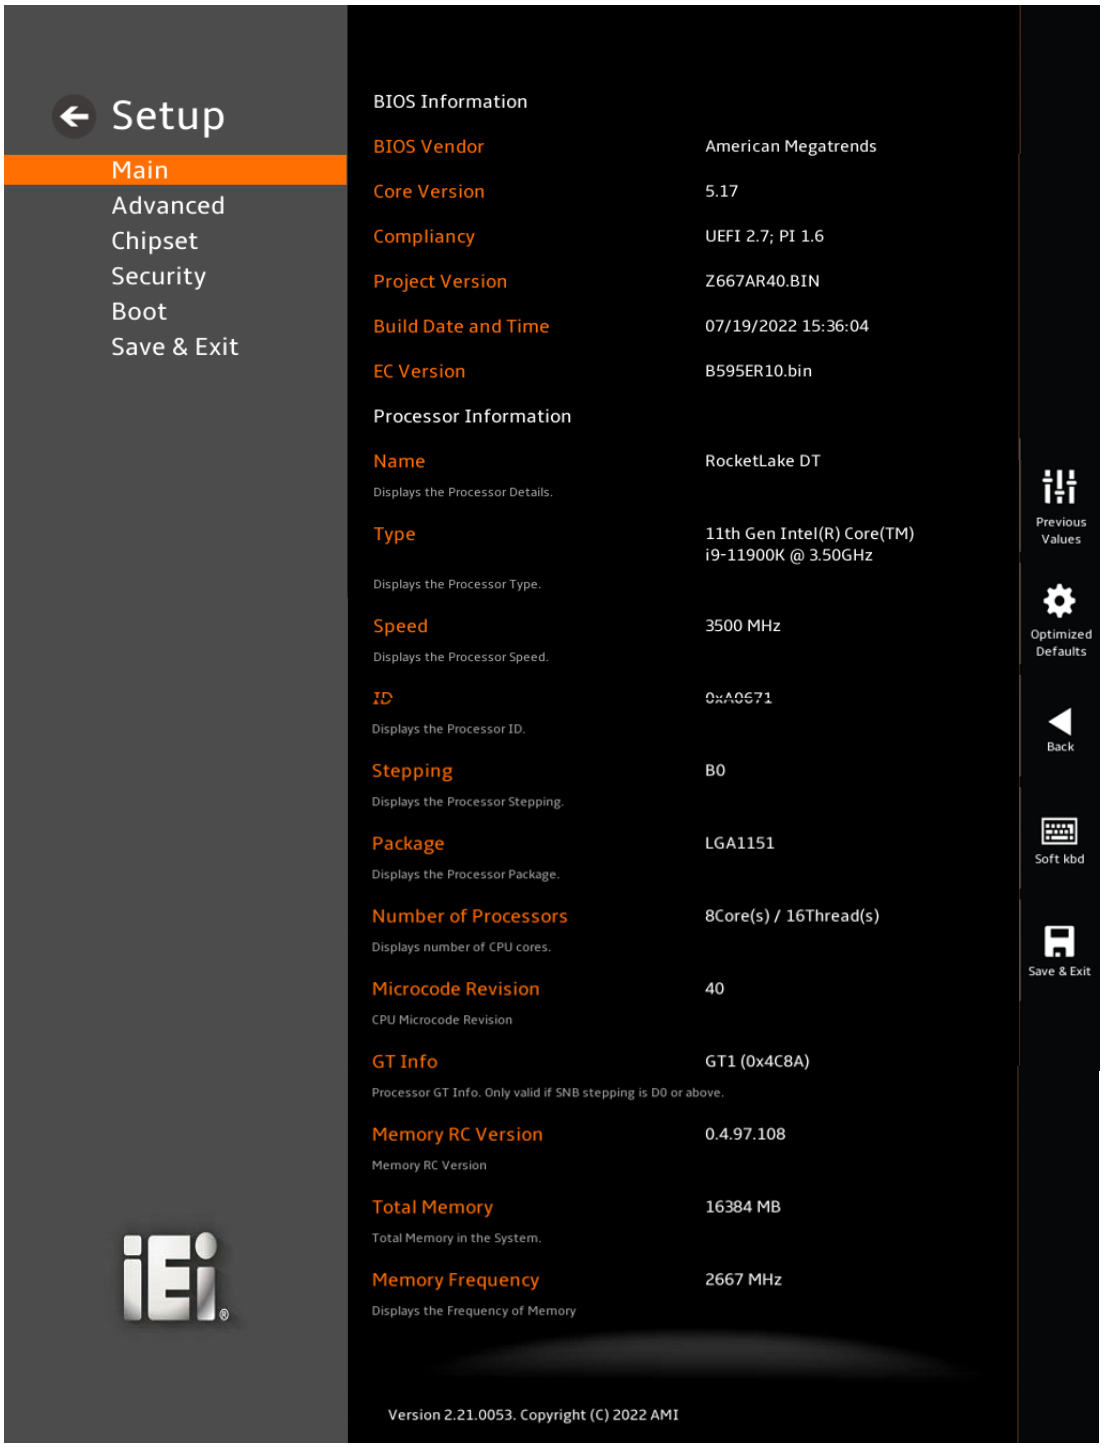

BIOS Menu 3: Main (1/2)

BIOS Menu 4: Main (2/2)

➔ BIOS Information

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- **BIOS Vendor:** Installed BIOS vendor
- **Core Version:** Current BIOS version
- **Compliancy:** Current UEFI & PI version

- **Project Version:** the board version
- **Build Date:** Date the current BIOS version was made
- **EC Version:** Current EC version

➔ **Processor Information**

The **Processor Information** lists a brief summary of the Processor. The fields in **Processor Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the processor details
- **Type:** Displays the processor type
- **Speed:** Displays the processor speed
- **ID:** Displays the processor ID
- **Stepping:** Displays the processor stepping
- **Package:** Displays the processor package
- **Number of Processors:** Displays number of CPU cores
- **Microcode Revision:** CPU Microcode revision
- **GT Info:** Processor GT Info. Only valid if SNB stepping is D0 or above
- **Memory RC Version:** Displays the memory RC version
- **Total Memory:** Displays the install memory in the system
- **Memory Frequency:** Displays the Frequency of memory

➔ **PCH Information**

The **PCH Information** lists a brief summary of the PCH. The fields in **PCH Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the PCH name
- **PCH SKU:** Displays the PCH SKU
- **Stepping:** Displays the PCH stepping
- **Dual Output Fast Read Support:** Displays the support of dual output fast read
- **Read ID/Status Clock Freq:** Displays the frequency of reading ID and status clock frequency
- **Write and Erase Clock Freq:** Displays the frequency of writing and erasing clock frequency

- **ME FW Version:** Displays the ME firmware Version
- **ME Firmware SKU:** Displays the ME firmware SKU
- **PMC FW Version:** Displays the PMC firmware version

The System Overview field also has two user configurable fields:

➔ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

➔ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 5**) to configure the CPU and peripheral devices through the following sub-menus:

WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

BIOS Menu 5: Advanced

5.3.1 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 6 & BIOS Menu 7**) to view detailed CPU specifications or enable the Intel Virtualization Technology.

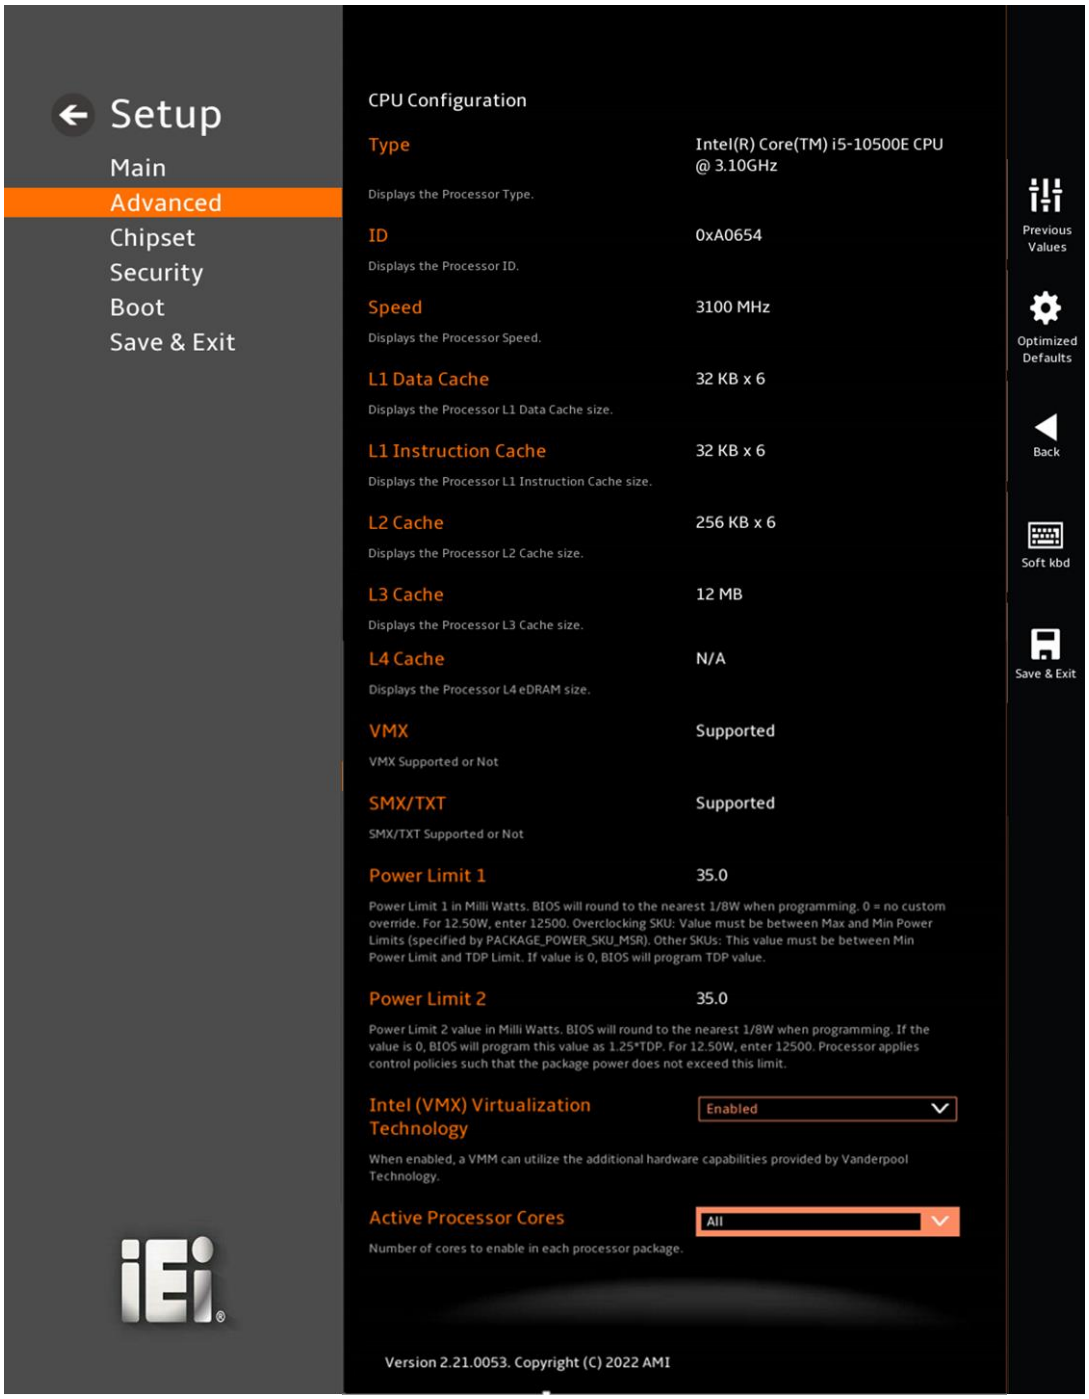

BIOS Menu 6: CPU Configuration (1/2)

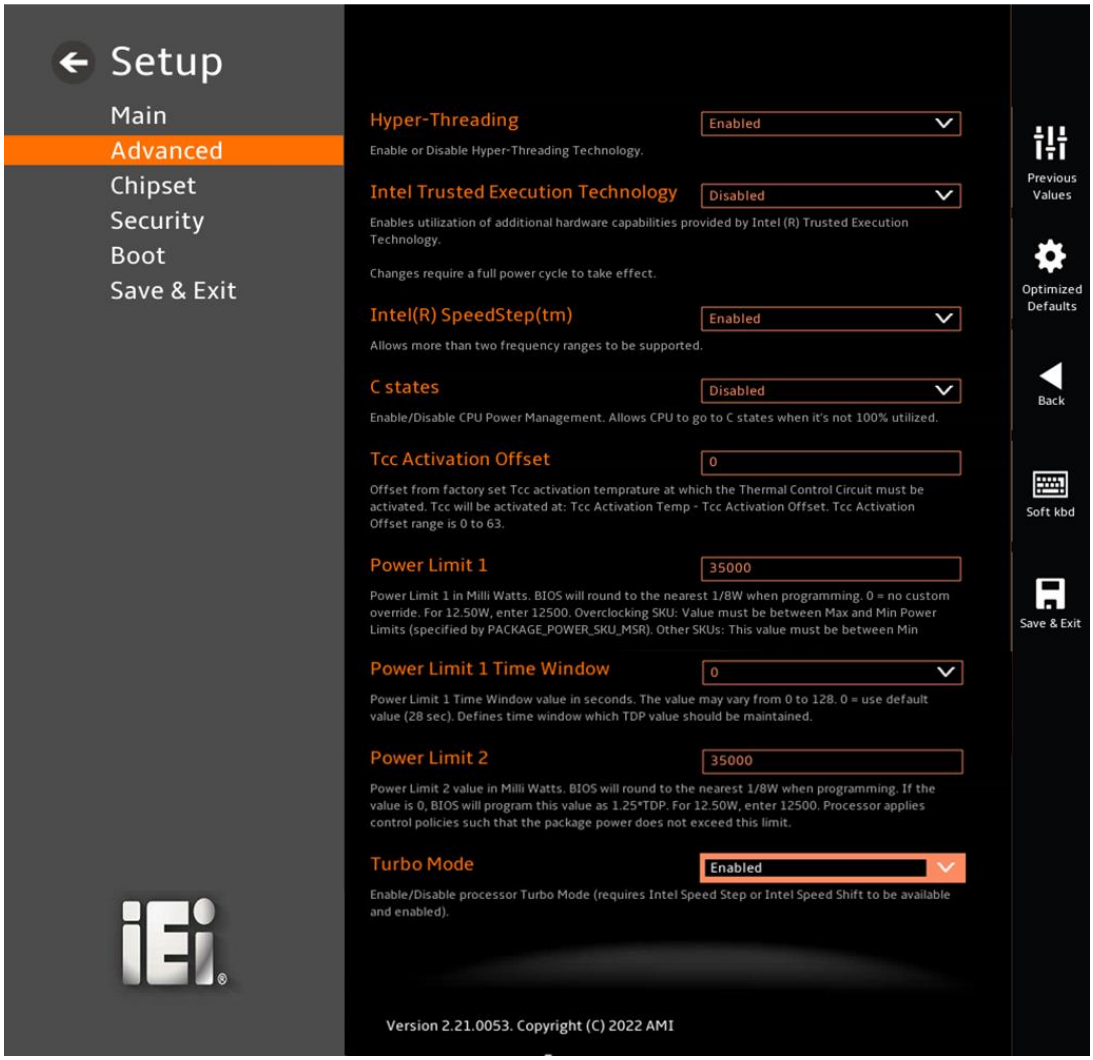

BIOS Menu 7: CPU Configuration (2/2)

➔ Intel (VMX) Virtualization Technology [Enabled]

Use the **Intel (VMX) Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

➔ **Disabled**		Disables Intel Virtualization Technology.
➔ **Enabled**	**DEFAULT**	Enables Intel Virtualization Technology.

➔ **Active Processor Cores [All]**

Use the **Active Processor Cores** BIOS option to enable numbers of cores in the processor package.

➔ **All**	**DEFAULT**	Enable all cores in the processor package.
➔ **1**		Enable one core in the processor package.
➔ **2**		Enable two cores in the processor package.
➔ **3**		Enable three cores in the processor package.

➔ **Hyper-Threading [Enabled]**

Use the **Hyper-Threading** option to enable or disable the **Hyper-Threading** Technology.

➔ **Disabled**		Disables Hyper-Threading Technology
➔ **Enabled**	**DEFAULT**	Enables Hyper-Threading Technology

➔ **Intel(R) Trusted Execution Technology [Disabled]**

Use the **Intel Trusted Execution Technology (Intel® TXT)** option to enable or disable utilization of additional hardware capabilities provided by Intel (R) Trusted Execution Technology.

➔ **Disabled**	**DEFAULT**	Disables Intel® TXT Technology
➔ **Enabled**		Enables Intel® TXT Technology

➔ **Intel(R) SpeedStep(tm) [Enabled]**

Use the **Intel(R) SpeedStep(tm)** option to enable or disable the Intel® SpeedStep Technology which allows more than two frequency ranges to be supported.

➔ **Disabled**		Disables Intel® SpeedStep Technology
➔ **Enabled**	**DEFAULT**	Enables Intel® SpeedStep Technology

➔ **C states [Disabled]**

Use the **C states** option to enable or disable CPU power management which allows CPU to go to C states when it is not 100% utilized.

➔ **Disabled**	**DEFAULT**	Disables CPU power management
➔ **Enabled**		Enables CPU power management

➔ **Tcc Activation Offset [Enabled]**

Use the **Tcc Activation Offset** option to offset from default value of Thermal Control Circuit (TCC) activation temperature at which the TCC must be activated. TCC Activation Offset range is 0 to 63.

➔ **Disabled**	**DEFAULT**	Disables Tcc Activation Offset Technology
➔ **Enabled**		Enables Tcc Activation Offset Technology

➔ **Power Limit 1**

Use the + or – key to change the **Power Limit 1** value. BIOS will program the default values for Limit 1 and Power Limit 1 Time Window. For 12.50W, enter 12500.

➔ **Power Limit 1 Time Window [0]**

Use the **Power Limit 1 Time Window** option to select the PL1 time duration. The value may vary from 0 to 128. For 0 is the default value

➔ **Power Limit 2**

Use the + or – key to change the **Power Limit 2** value. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500.

➔ **Turbo Mode [Enabled]**

Use the **Turbo Mode** option to enable or disable Turbo Mode which requires Intel Speed Step or Intel Speed Shift to be available and enabled.

➔ **Disabled**		Disables Turbo Mode Technology
➔ **Enabled**	**DEFAULT**	Enables Turbo Mode Technology

5.3.2 PCH-FW Configuration

The **PCH-FW Configuration** menu (**BIOS Menu 8**) allows Intel® Active Management Technology (AMT) options to be configured.

BIOS Menu 8: **PCH-FW Configuration**

➔ **AMT BIOS Features [Enabled]**

Use **AMT BIOS Features** option to enable or disable the Intel® AMT function.

➔ **Disabled**		Intel® AMT is disabled
➔ **Enabled**	**DEFAULT**	Intel® AMT is enabled

➔ **Unconfigure ME [Disabled]**

Use the **Unconfigure ME** option to unconfigure ME with resetting MEBx password to default.

➔ **Disabled** **DEFAULT** Not unconfigure ME with resetting MEBx password to default

➔ **Enabled** Unconfigure ME with resetting MEBx password to default

5.3.2.1 PTT Configuration

Use the **PTT Configuration** submenu (**BIOS Menu 9**) to configure settings related to the Trusted Platform Module (TPM).

BIOS Menu 9: PTT Configuration

➔ **TPM Device Selection [dTPM (If supported)]**

Use the **TPM Device Selection** option to configure support for the TPM.

➔ **dTPM (If supported)** **DEFAULT** Disable PTT in SkuMgr.

➔ **PTT** Enable PTT in SkuMgr

5.3.3 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 10**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).

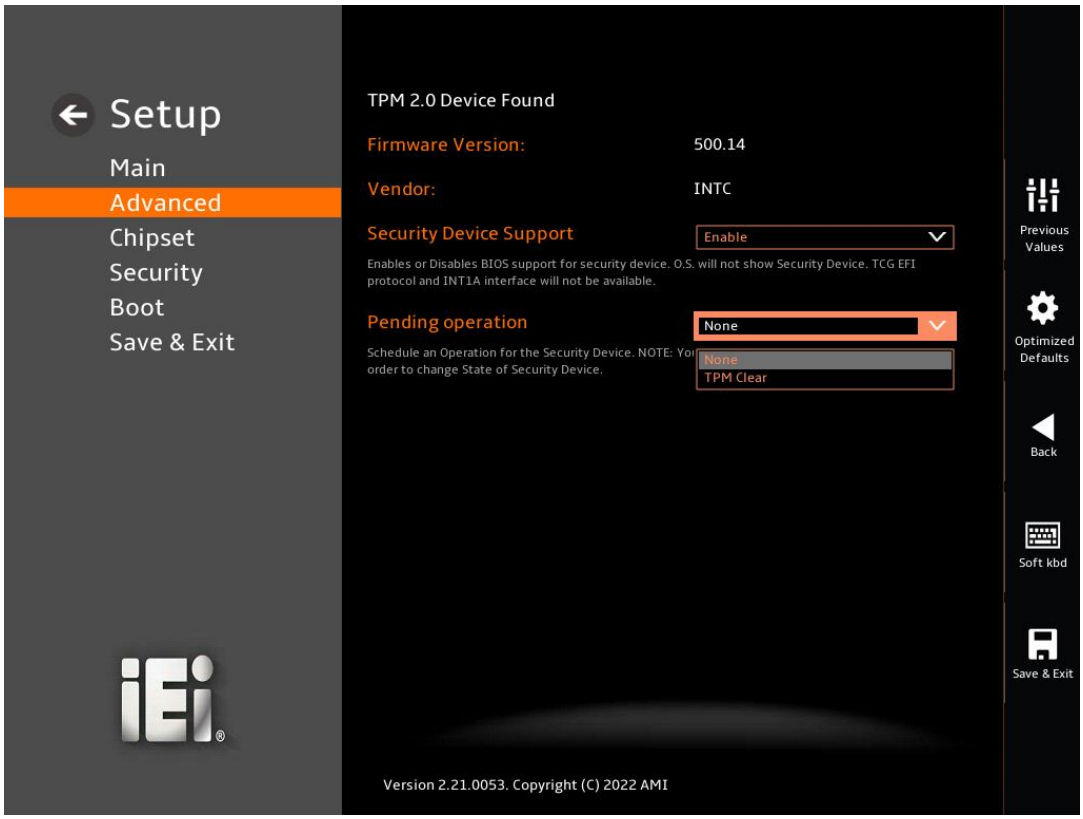

BIOS Menu 10: PCH-FW Configuration

➔ **Security Device Support [Enable]**

Use the **Security Device Support** option to configure support for the TPM.

➔ **Disable**		TPM support is disabled.
➔ **Enable**	**DEFAULT**	TPM support is enabled.

➔ **Pending Operation [None]**

Use the **Pending Operation** option to schedule an operation for the security device.

➔ **None**	**DEFAULT**	TPM information is previous.
➔ **TPM Clear**		TPM information is cleared

5.3.4 F81966 Super IO Configuration

Use the **F81966 Super IO Configuration** menu (**BIOS Menu 11**) to set or change the configurations for the serial ports.

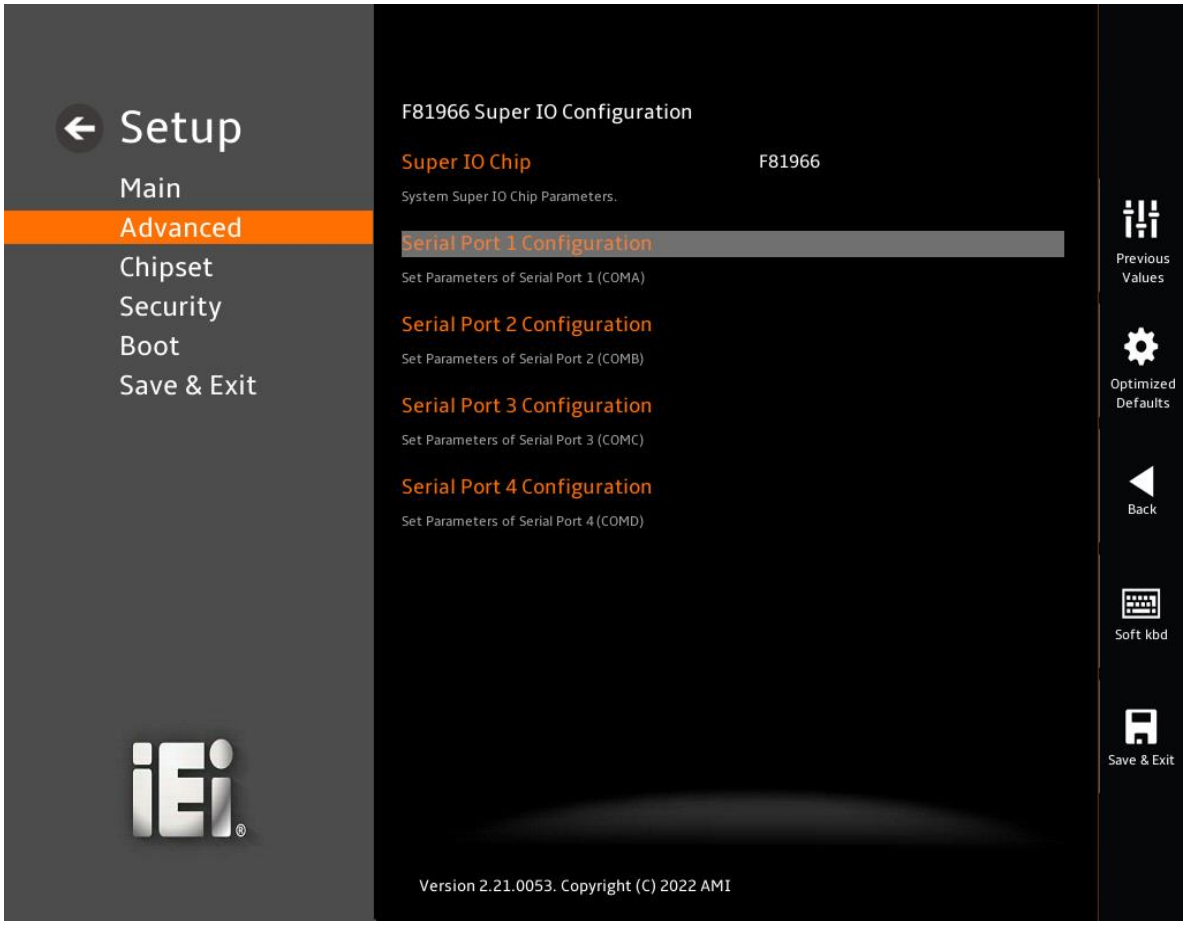

BIOS Menu 11: F81966 Super IO Configuration

➔ **F81966 Super IO Configuration**

The **F81966 Super IO Configuration** lists a brief summary of the Super IO Chip information. The items shown in the system overview include:

- **Serial Port 1 Configuration:** Set Parameters of Serial Port 1 (COMA)
- **Serial Port 2 Configuration:** Set Parameters of Serial Port 2 (COMB)
- **Serial Port 3 Configuration:** Set Parameters of Serial Port 3 (COMC)
- **Serial Port 4 Configuration:** Set Parameters of Serial Port 4 (COMD)

5.3.4.1 Serial Port 1 Configuration

Use the **Serial Port 1 Configuration** submenu (**BIOS Menu 12**) to configure serial port 1.

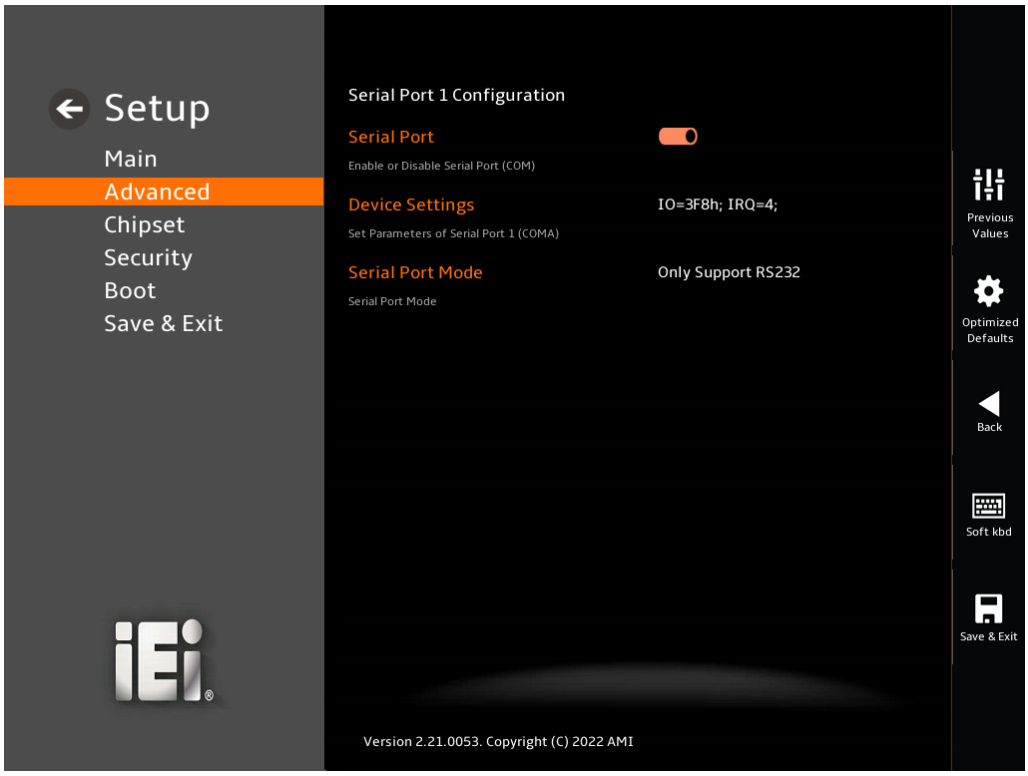

BIOS Menu 12: Serial Port 1 Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled**		Disable the serial port
➔ **Enabled**	**DEFAULT**	Enable the serial port

➔ **Device Settings**

Use the **Device Settings** option to view the serial port IO port address and interrupt address.

➔ **IO=3F8h; IRQ=4**	Serial Port I/O port address is 3F8h and the interrupt address is IRQ4

➔ **Serial Port Mode [Only Support RS232]**

5.3.4.2 Serial Port 2 Configuration

Use the **Serial Port 2 Configuration** submenu (**BIOS Menu 13**) to configure serial port 2.

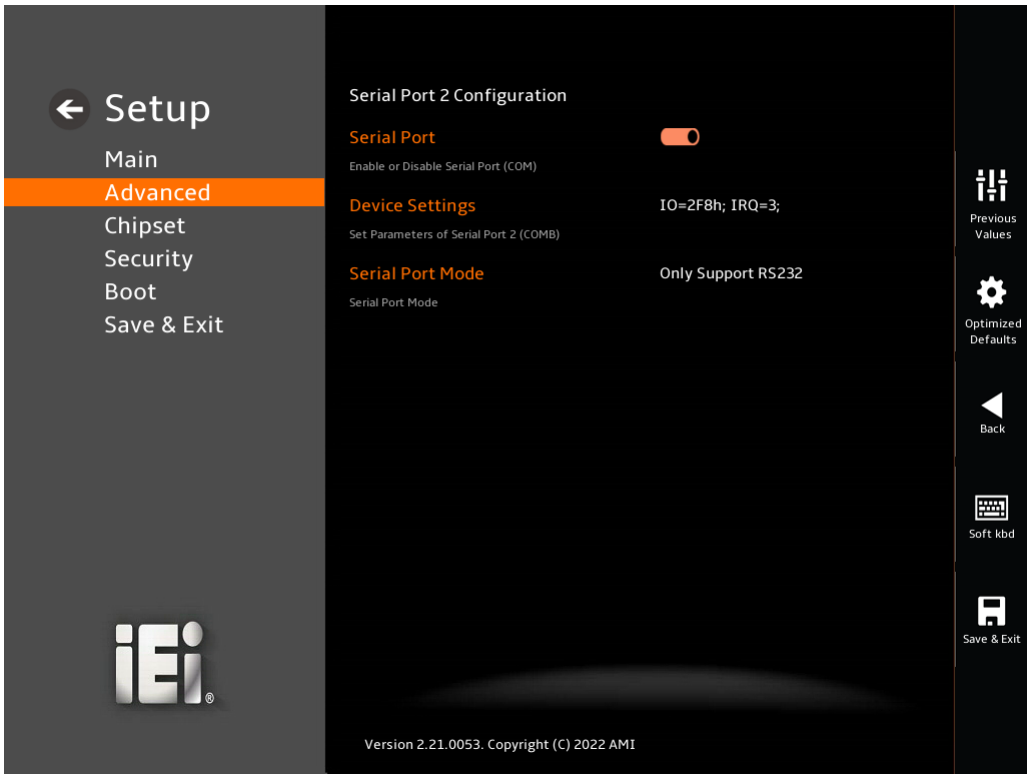

BIOS Menu 13: Serial Port 2 Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled** Disable the serial port

➔ **Enabled** **DEFAULT** Enable the serial port

➔ **Device Settings**

Use the **Device Settings** option to view the serial port IO port address and interrupt address.

➔ **IO=2F8h; IRQ=3** Serial Port I/O port address is 2F8h and the interrupt address is IRQ3

➔ **Serial Port Mode [Only Support RS232]**

5.3.4.3 Serial Port 3 Configuration

Use the **Serial Port 3 Configuration** submenu (**BIOS Menu 14**) to configure serial port 3.

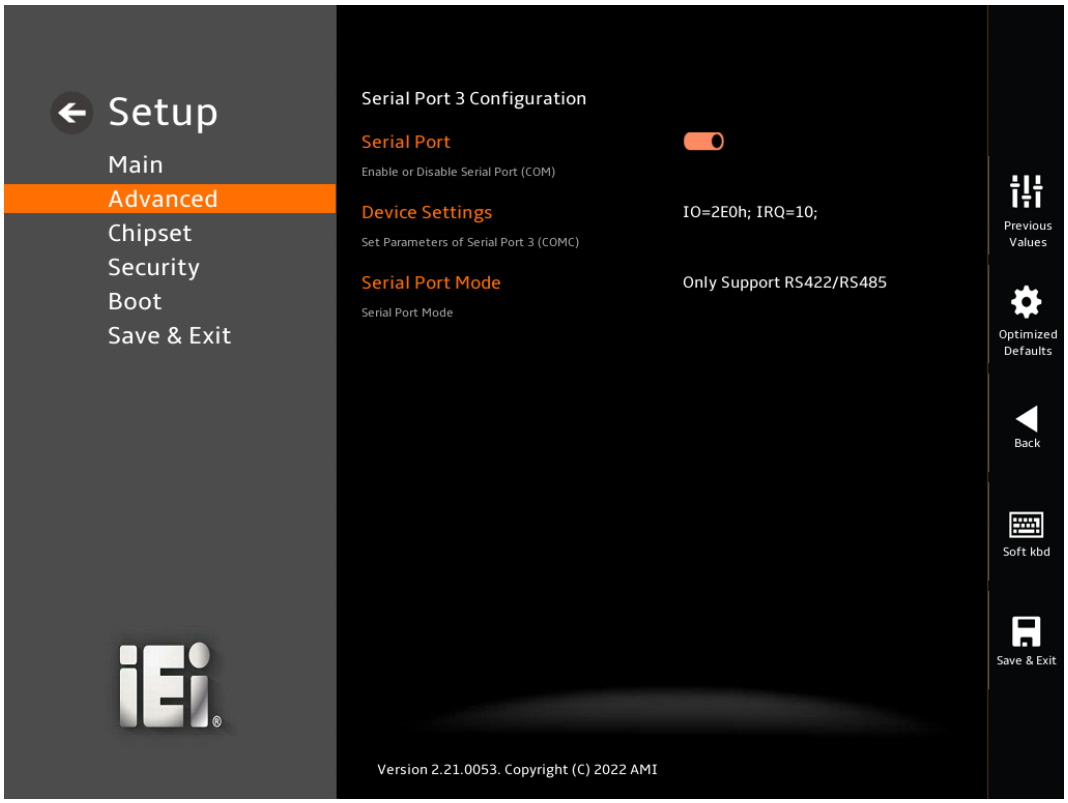

BIOS Menu 14: Serial Port 3 Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled** Disable the serial port

➔ **Enabled** **DEFAULT** Enable the serial port

➔ **Device Settings**

Use the **Device Settings** option to view the serial port IO port address and interrupt address.

➔ **IO=2E0h; IRQ=10** Serial Port I/O port address is 2E0h and the interrupt address is IRQ10

➔ **Serial Port Mode [Only Support RS422/485]**

5.3.4.4 Serial Port 4 Configuration

Use the **Serial Port 4 Configuration** submenu (**BIOS Menu 15**) to configure serial port 4.

BIOS Menu 15: Serial Port 4 Configuration Menu

➔ **Serial Port [Enabled]**

Use the **Serial Port** option to enable or disable the serial port.

➔ **Disabled** Disable the serial port

➔ **Enabled** **DEFAULT** Enable the serial port

➔ **Device Settings**

Use the **Device Settings** option to view the serial port IO port address and interrupt address.

➔ **IO=2E8h; IRQ=10** Serial Port I/O port address is 2E8h and the interrupt address is IRQ10

➔ **Serial Port Mode [Only Support RS422/485]**

5.3.5 ITE 5571 Monitor

The ITE 5571 Monitor menu (**BIOS Menu 16**) contains the smart fan mode configuration submenu and shows the state of H/W real-time operating temperature, fan speeds and system voltages.

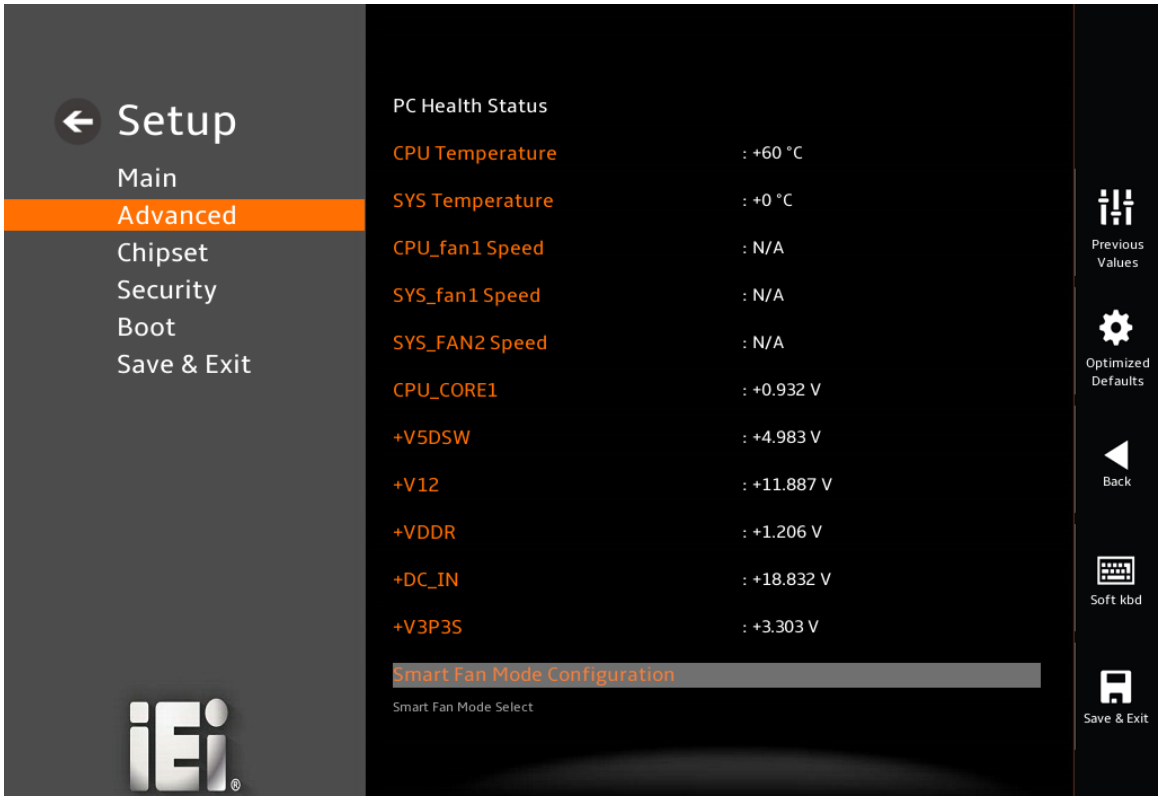

BIOS Menu 16: ITE 5571 Monitor

➔ **PC Health Status**

The following system parameters and values are shown. The system parameters that are monitored are:

System Temperatures:

- o CPU Temperature
- o System Temperature

Fan Speeds:

- o CPU_FAN1 Speed
- o SYS_FAN1 Speed
- o SYS_FAN2 Speed

Voltages:

- o CPU_CORE1
- o +V5DSW
- o +V12
- o +V5S
- o +DC_IN
- o + V3P3S

5.3.5.1 Smart Fan Mode Configuration

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 17**) to configure the CPU/system fan start/off temperature and control mode.

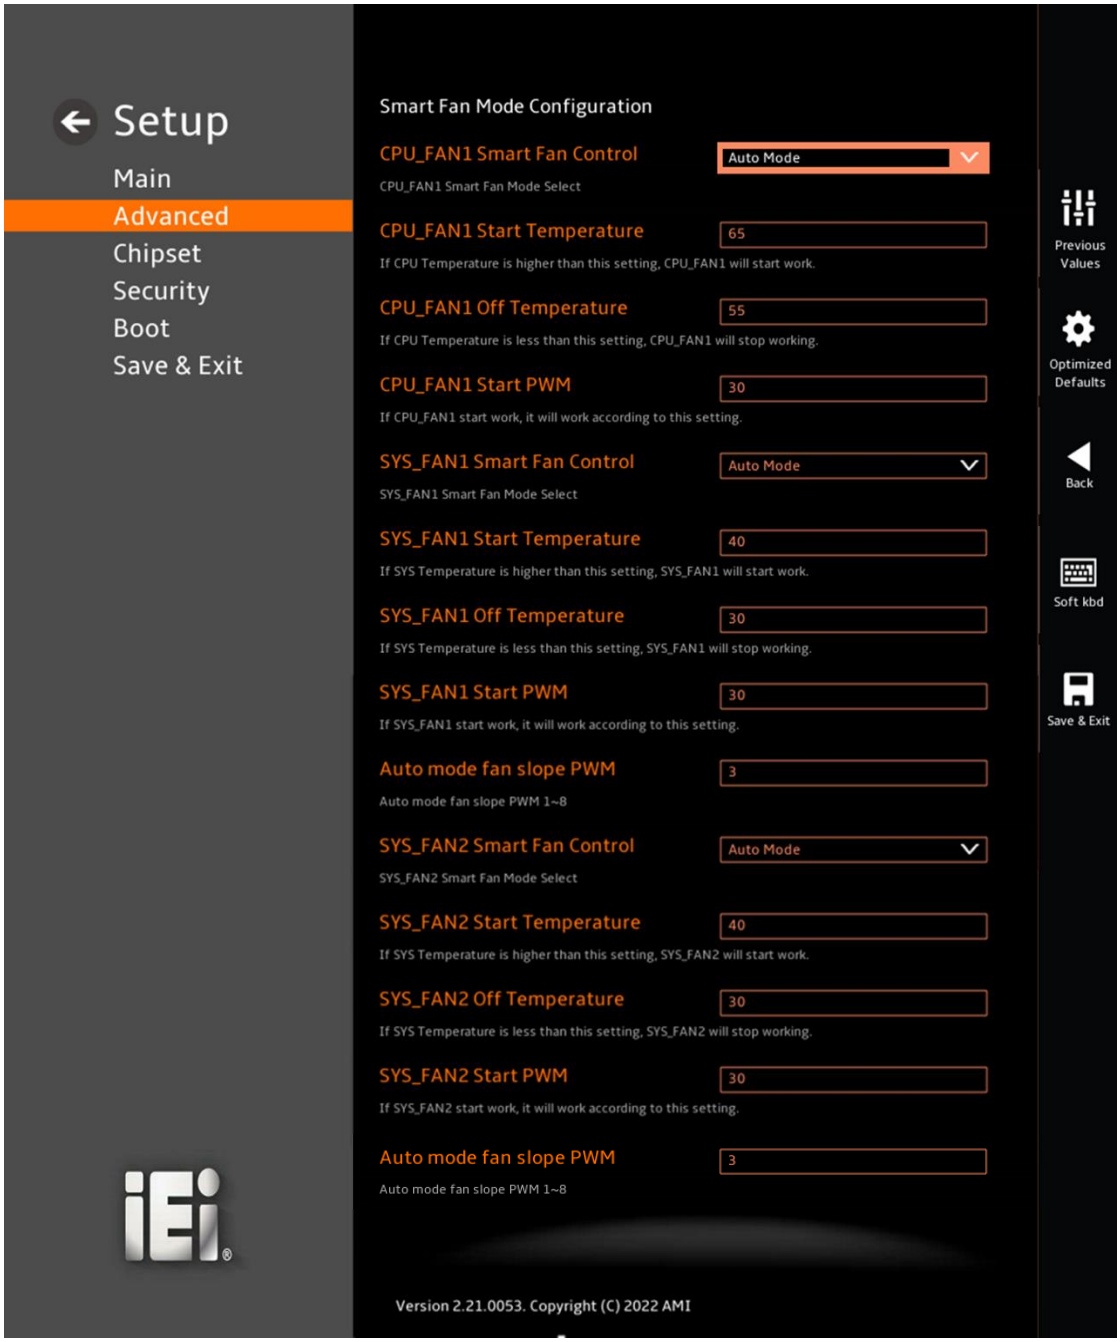

BIOS Menu 17: Smart Fan Mode Configuration

➔ **CPU_FAN/SYS_FAN Smart Fan Control [Auto Mode]**

Use the **CPU_FAN/SYS_FAN Smart Fan Control** option to configure the CPU/System Smart Fan.

➔ **Manual Mode**		The fan spins at the speed set in Manual Mode settings.
➔ **Auto Mode**	**DEFAULT**	The fan adjusts its speed using Auto Mode settings.

➔ **CPU_FAN/SYS_FAN start temperature**

If the CPU/System temperature is between **fan off** and **fan start**, the fan speed change to **fan start PWM**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

➔ **CPU_FAN/SYS_FAN off temperature**

If the CPU/System temperature is **lower than the value** set this option, the fan speed change to **be lowest**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

➔ **CPU_FAN/SYS_FAN start PWM**

Use the CPU_FAN/SYS_FAN Start PWM option to set the **PWM start value**. Use the + or – key to change the value or enter a decimal number between 1 and 100.

➔ **Auto mode fan slope PWM**

Use the **Auto mode fan slope PWM** option to select the linear rate at which the PWM mode increases with respect to an increase in temperature. Use the + or – key to change the value or enter a decimal number between 1 and 8

5.3.6 Serial Port Console Redirection

The **Serial Port Console Redirection** menu **(BIOS Menu 18)** allows the console redirection options to be configured. Console Redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

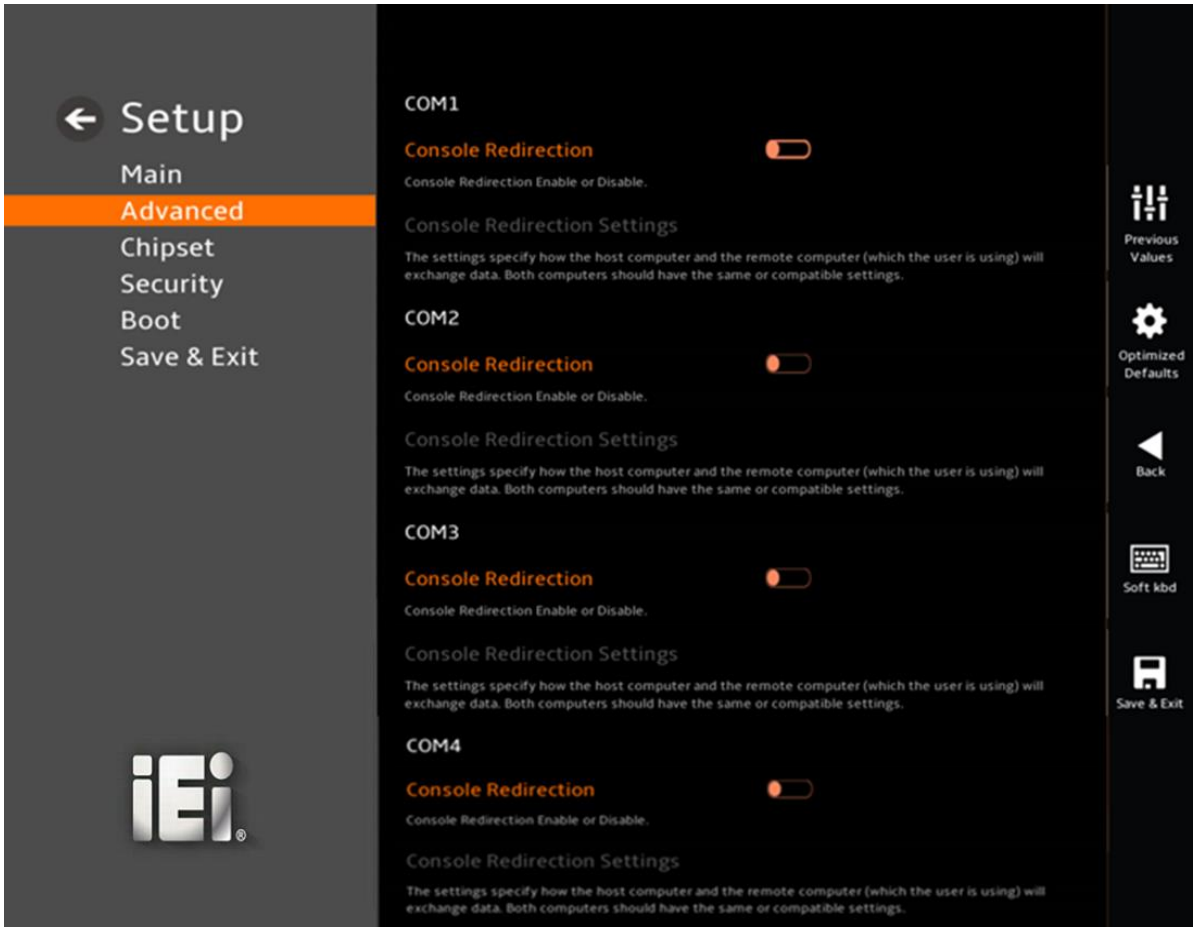

BIOS Menu 18: Serial Port Console Redirection

➔ **Console Redirection [Disabled]**

Use **Console Redirection** option to enable or disable the console redirection function.

➔ **Disabled**	**DEFAULT**	Disabled the console redirection function
➔ **Enabled**		Enabled the console redirection function

The **Console Redirection Settings** submenu will be available when the **Console Redirection** option is enabled.

5.3.6.1 Console Redirection Settings

The following options are available in the **Console Redirection Settings** submenu (**BIOS Menu 19**) when the **COM Console Redirection (for COM1 to COM4)** option is enabled.

BIOS Menu 19: COM Console Redirection Settings

➔ **Terminal Type [ANSI]**

Use the **Terminal Type** option to specify the remote terminal type.

➔ **VT100**		The target terminal type is VT100
➔ **VT100+**		The target terminal type is VT100+
➔ **VT-UTF8**		The target terminal type is VT-UTF8
➔ **ANSI**	**DEFAULT**	The target terminal type is ANSI

➔ **Bits per second [115200]**

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match on the other side. Long or noisy lines may require lower speeds.

➔ **9600**		Sets the serial port transmission speed at 9600.
➔ **19200**		Sets the serial port transmission speed at 19200.
➔ **38400**		Sets the serial port transmission speed at 38400.
➔ **57600**		Sets the serial port transmission speed at 57600.
➔ **115200**	**DEFAULT**	Sets the serial port transmission speed at 115200.

➔ **Data Bits [8]**

Use the **Data Bits** option to specify the number of data bits.

➔ **7**		Sets the data bits at 7.
➔ **8**	**DEFAULT**	Sets the data bits at 8.

➔ **Parity [None]**

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

➔ **None**	**DEFAULT**	No parity bit is sent with the data bits.
➔ **Even**		The parity bit is 0 if the number of ones in the data bits is even.
➔ **Odd**		The parity bit is 0 if the number of ones in the data bits is odd.
➔ **Mark**		The parity bit is always 1. This option does not allow for error detection.
➔ **Space**		The parity bit is always 0. T This option does not allow for error detection.

➔ **Stop Bits [1]**

Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

➔ **1**	**DEFAULT**	Sets the number of stop bits at 1.
➔ **2**		Sets the number of stop bits at 2.

5.3.7 Intel TXT Information

The **Intel TXT Information** menu (**BIOS Menu 20**) displays the Intel Trusted Execution Technology information.

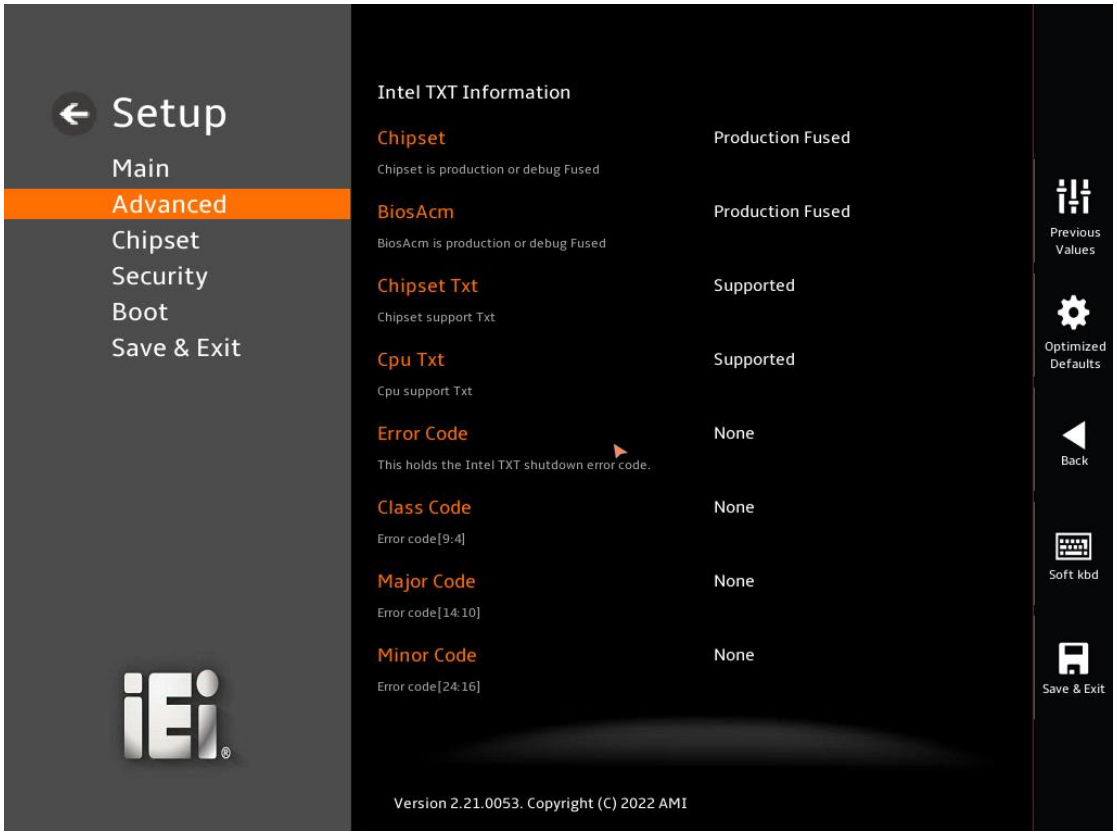

BIOS Menu 20: Intel TXT Information

➔ **Intel TXT Information**

The **Intel TXT Information** lists a brief summary of the Intel Trusted Execution Technology. The items shown in the system overview include:

- **Chipset:** Displays whether the chipset is production fused or debug fused.
- **BiosAcm:** Displays whether the BiosAcm is production fused or debug fused
- **Chipset Txt:** Displays whether the chipset supports TXT or not.
- **Cpu Txt:** Displays whether the CPU supports TXT or not.
- **Error Code:** Displays the Intel TXT shutdown error code.
- **Class Code:** Displays the Intel TXT shutdown class code.
- **Major Code:** Displays the Intel TXT shutdown major code.
- **Minor Code:** Displays the Intel TXT shutdown minor code.

5.3.8 NVMe Configuration

Use the **NVMe Configuration** (**BIOS Menu 21**) menu to display the NVMe controller and device information.

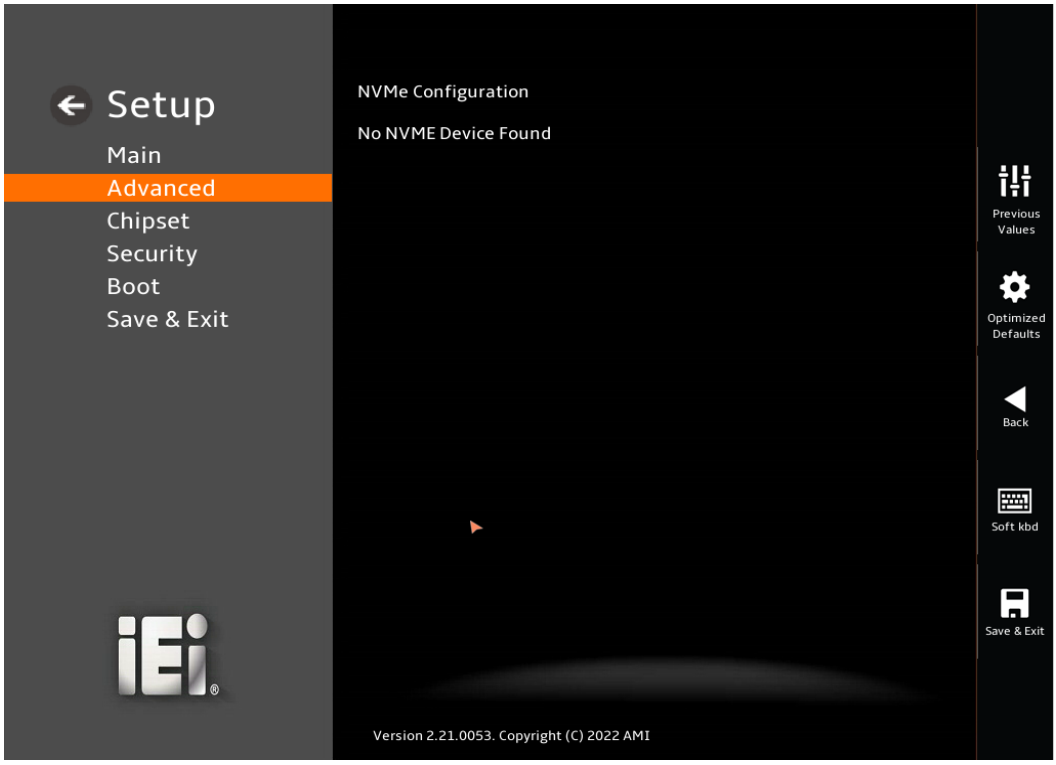

BIOS Menu 21: NVMe Configuration

5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 22**) to access the PCH IO and System Agent (SA) configuration menus.

WARNING!

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

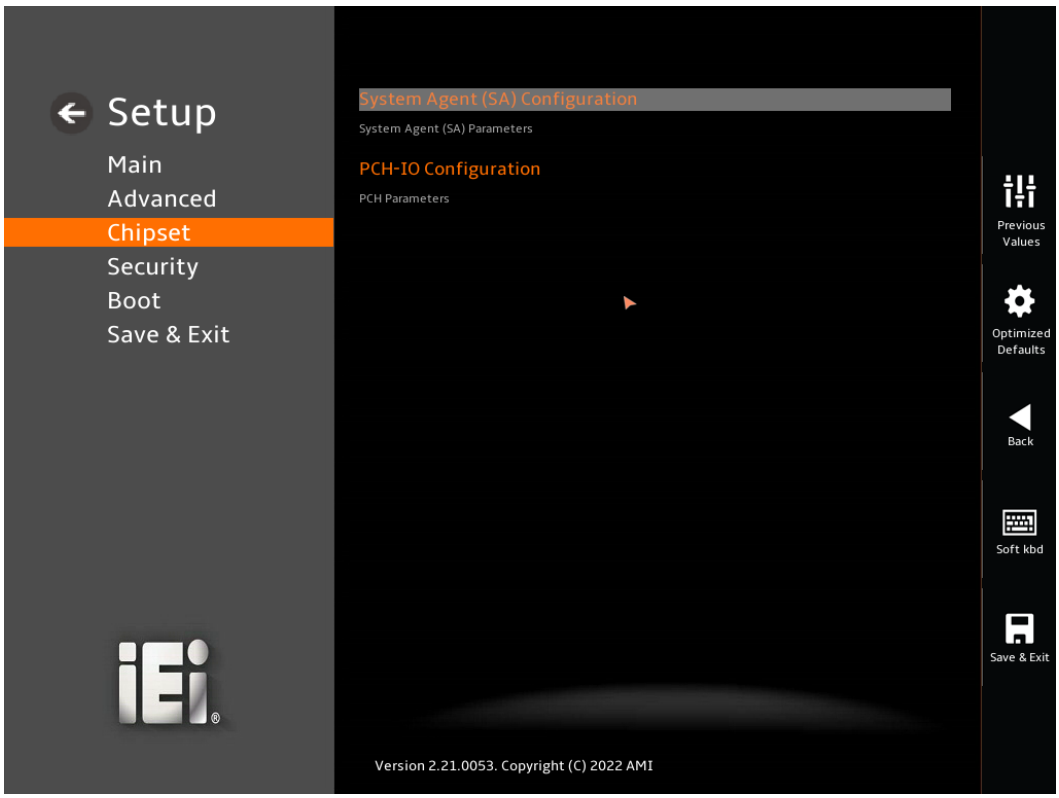

BIOS Menu 22: Chipset

5.4.1 System Agent (SA) Configuration

Use the **System Agent (SA) Configuration** menu (**BIOS Menu 23**) to configure the System Agent (SA) parameters.

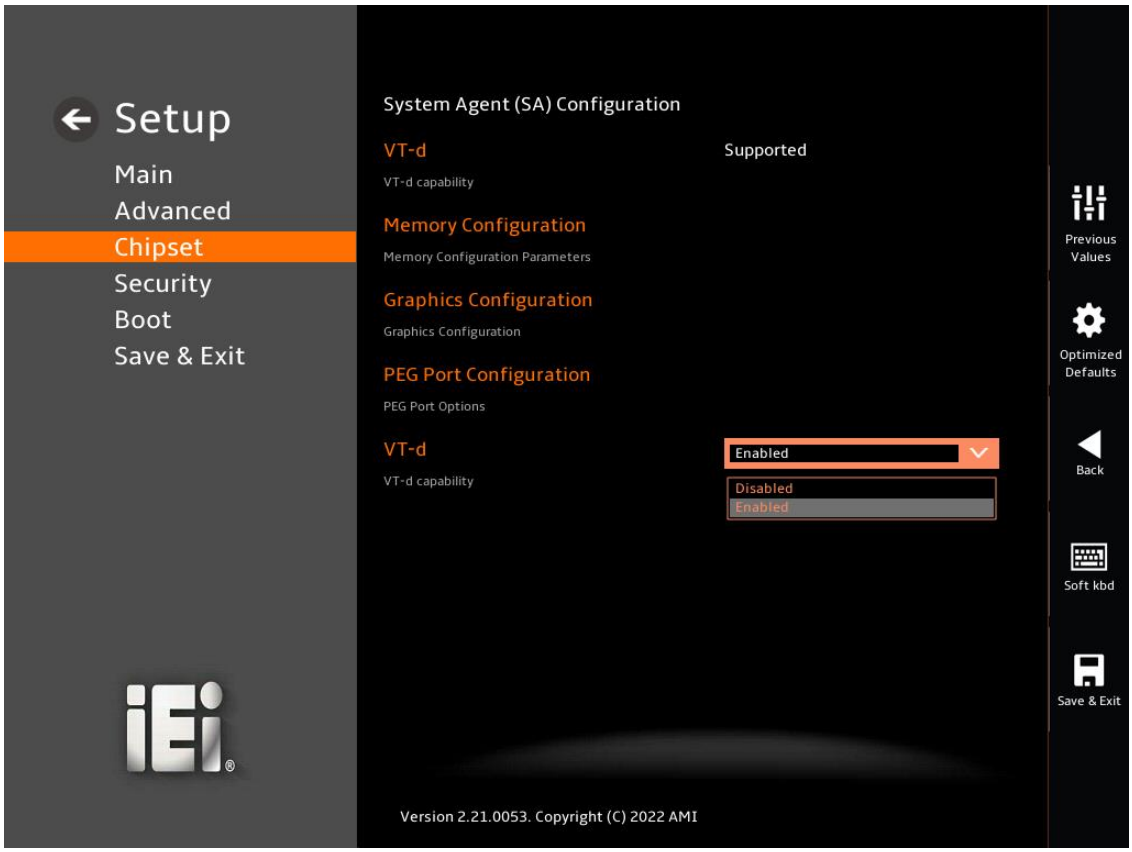

BIOS Menu 23: System Agent (SA) Configuration

➔ **VT-d [Enabled]**

Use the **VT-d** option to enable or disable the VT-d capability.

➔ **Disabled**		Disable the VT-d capability
➔ **Enabled**	**DEFAULT**	Enable the VT-d capability

5.4.1.1 Memory Configuration

Use the **Memory Configuration** submenu (**BIOS Menu 24**) to view the memory detailed information.

BIOS Menu 24: Memory Configuration

➔ **Memory Configuration**

The **Memory Configuration** lists a brief summary of the memory detailed information. The items shown in the system overview include:

- **CHA_DIMM0:** Displays the CHA_DIMM0 subtitle.
- **Size:** Displays the memory size in the slot
- **CHB_DIMM0:** Displays the CHB_DIMM0 subtitle.

5.4.1.2 Graphics Configuration

Use the **Graphics Configuration** (**BIOS Menu 25**) menu to configure the video device connected to the system.

BIOS Menu 25: Graphics Configuration

➔ **Primary Display [Auto]**

Use the **Primary Display** option to select the primary graphics controller the system uses. The following options are available:

- Auto **Default**
- IGFX
- PEG
- PCI
- SG

➔ **Internal Graphics [Enabled]**

Use the **Internal Graphics** option to configure whether to keep IGFX enabled. If user wants to support dual display by internal graphics and external graphics, this Internal Graphics option should be set to Enabled and the above Primary Display option should be set to IGFX.

➔ **Auto**		Auto mode
➔ **Disabled**		Disables IGFX.
➔ **Enabled**	**Default**	Enables IGFX.

➔ **DVMT Pre-Allocated [64M]**

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

- 32M
- 64M **Default**

➔ **DVMT Total Gfx Mem [MAX]**

Use the **DVMT Total Gfx Mem** option to select DVMT5.0 total graphic memory size used by the internal graphic device. The following options are available:

- 128M
- 256M
- MAX **Default**

5.4.1.3 PEG Port Configuration

Use the **PEG Port Configuration** menu (**BIOS Menu 26**) to configure the PCI Express Configuration settings.

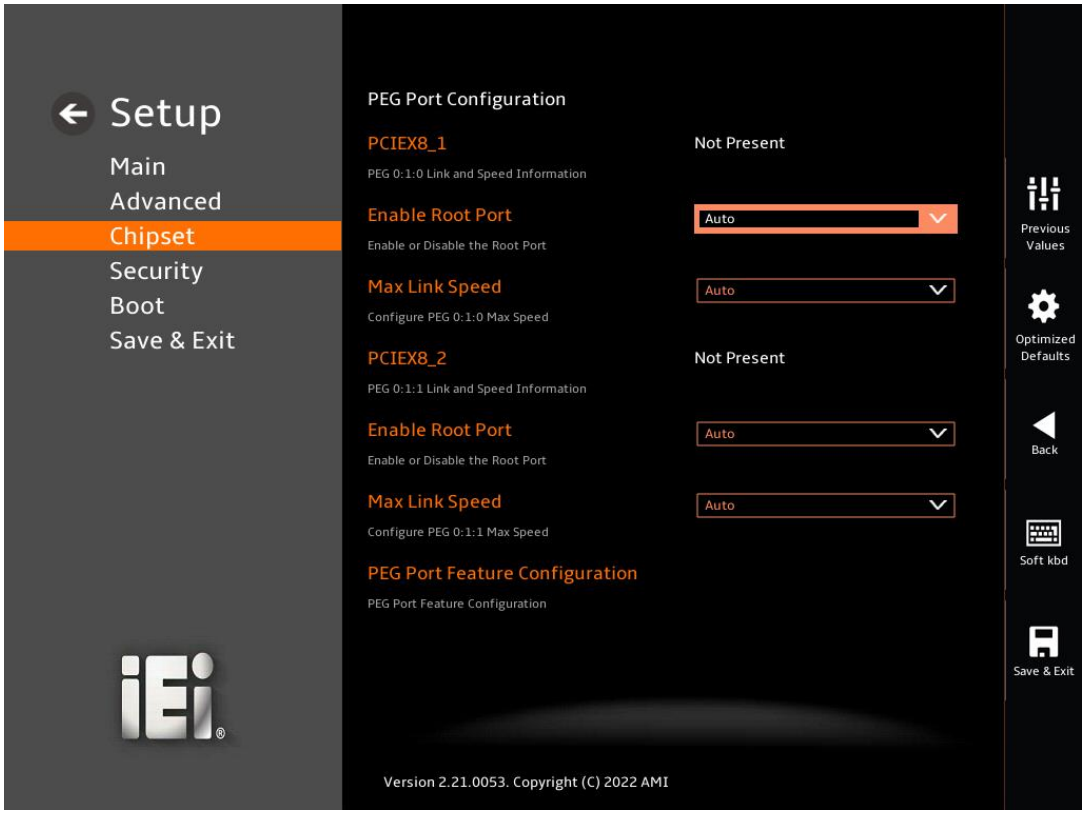

BIOS Menu 26: PEG Port Configuration

➔ **Enable Root Port [Auto]**

Use the **Enable Root Port** option to enable or disable the PCI Express (PEG) controller.

➔ **Disabled**		Disables the PCI Express (PEG) controller.
➔ **Enabled**		Enables the PCI Express (PEG) controller.
➔ **Auto**	**DEFAULT**	Set Auto Mode

➔ **Max Link Speed [Auto]**

Use the **Max Link Speed** option to select the maximum link speed of the PCI Express slot. The following options are available:

- Auto **Default**
- Gen1
- Gen2
- Gen3

5.4.1.3.1 PEG Port Feature Configuration

Use the **PEG Port Feature Configuration** submenu (**BIOS Menu 27**) to configure the SA PCIe settings.

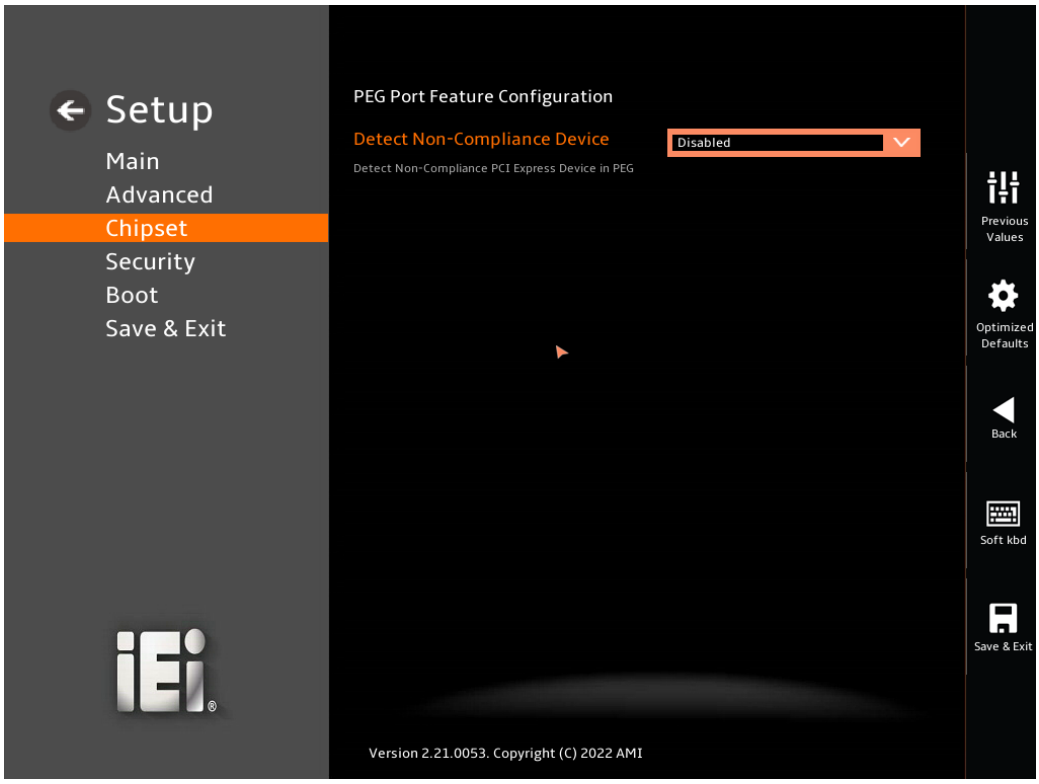

BIOS Menu 27: PEG Port Feature Configuration

➔ **Detect Non-Compliance Device [Disabled]**

Use the **Detect Non-Compliance Device** option to detect non-compliance PCIe device in PEG.

➔ **Disabled**	**DEFAULT**	Do not detect non-compliance PCIe device in PEG
➔ **Enabled**		Detect non-compliance PCIe device in PEG

5.4.2 PCH-IO Configuration

Use the **PCH-IO Configuration** menu (**BIOS Menu 28**) to configure the PCH parameters.

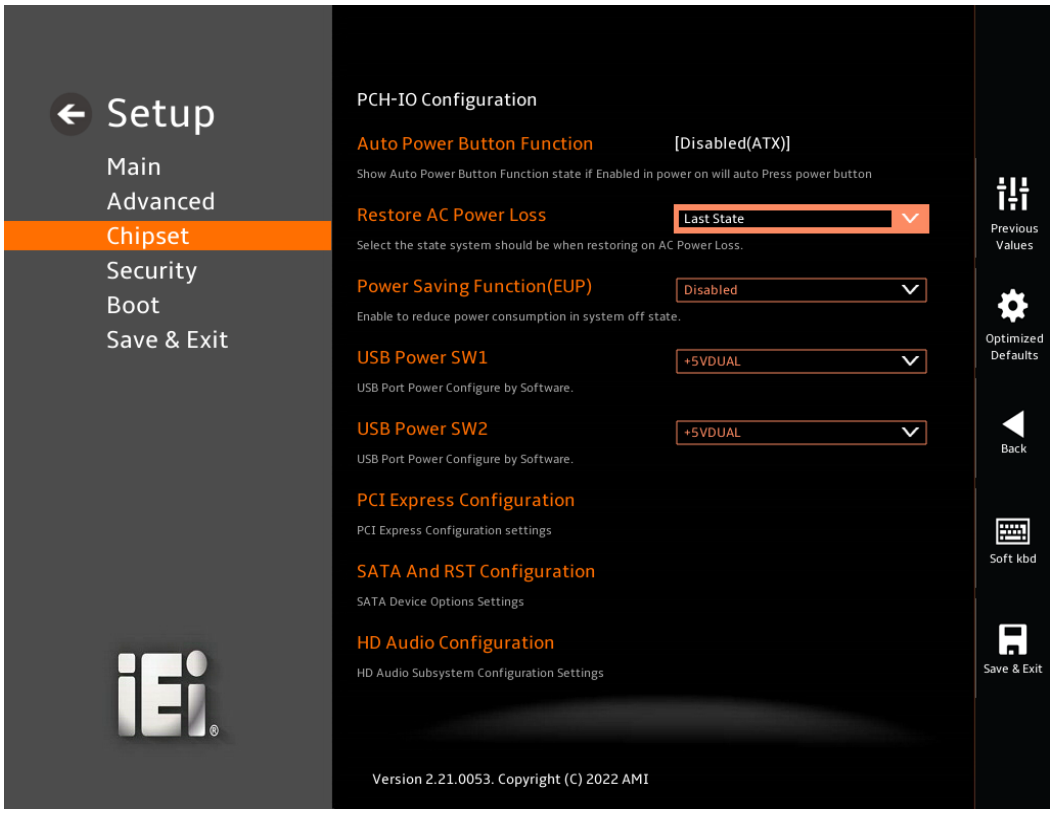

BIOS Menu 28: PCH-IO Configuration

➔ **Auto Power Button Function [Disabled(ATX)]**

Use the **Auto Power Button Function** BIOS option to show the power mode state. Use the **J_ATX_AT1** to switch the AT/ATX power mode.

➔ **Enabled (AT)** The system power mode is AT.

➔ **Disabled (ATX)** The system power mode is ATX.

➔ **Restore AC Power Loss [Last State]**

Use the **Restore AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system when the power mode is ATX.

➔ **Power Off** The system remains turned off

- **Power On** The system turns on
- **Last State** **DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

➔ **Power Saving Function(EUP) [Disabled]**

Use the **Power Saving Function(EUP)** BIOS option to enable or disable the power saving function.

- **Disabled** **DEFAULT** Power saving function is disabled.
- **Enabled** Power saving function is enabled. It will reduce power consumption when the system is off.

➔ **USB Power SW1 [+5V DUAL]**

Use the **USB Power SW1** BIOS option to configure the USB power source for the corresponding USB connectors (Table 5-3).

- **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual
- **+5V** Sets the USB power source to +5V

➔ **USB Power SW2 [+5V DUAL]**

Use the **USB Power SW2** BIOS option to configure the USB power source for the corresponding USB connectors (Table 5-3).

- **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual
- **+5V** Sets the USB power source to +5V

BIOS Options	Configured USB Ports
USB Power SW1	LAN1_USB1B (external USB 3.2 Gen 1 ports) LAN2_USB2B (external USB 3.2 Gen 1 ports)
USB Power SW2	LAN3_USB3B (external USB 3.2 Gen 1 ports) JUSB3 (internal USB 2.0 ports) JUSB4 (internal USB 2.0 ports)

Table 5-3: BIOS Options and Configured USB Ports

5.4.2.1 PCI Express Configuration

Use the **PCI Express Configuration** submenu (**BIOS Menu 29**) to configure the PCI Express Root Port Settings.

BIOS Menu 29: PCI Express Configuration

➔ **PCI Express Configuration**

The **PCI Express Configuration** lists a brief summary of the PCIe detailed information. The items shown in the system overview include:

- **M2_A1:** Configure the M2_A1 root port setting.
- **M2_B1:** Configure the M2_B1 root port setting.
- **PCIEX4_2:** Configure the PCIEX4_2 root port setting.
- **M2_M1:** Configure the M2_M1 root port setting.
- **PCIEX4_1:** Configure the PCIEX4_1 root port Setting.

5.4.2.1.1 PCIe Root Port Setting

Use the **PCIEX4_1, PCIEX4_2, M2_A1, M2_B1, M2_M1** submenu (**BIOS Menu 30**) to configure the PCI Root Port Setting.

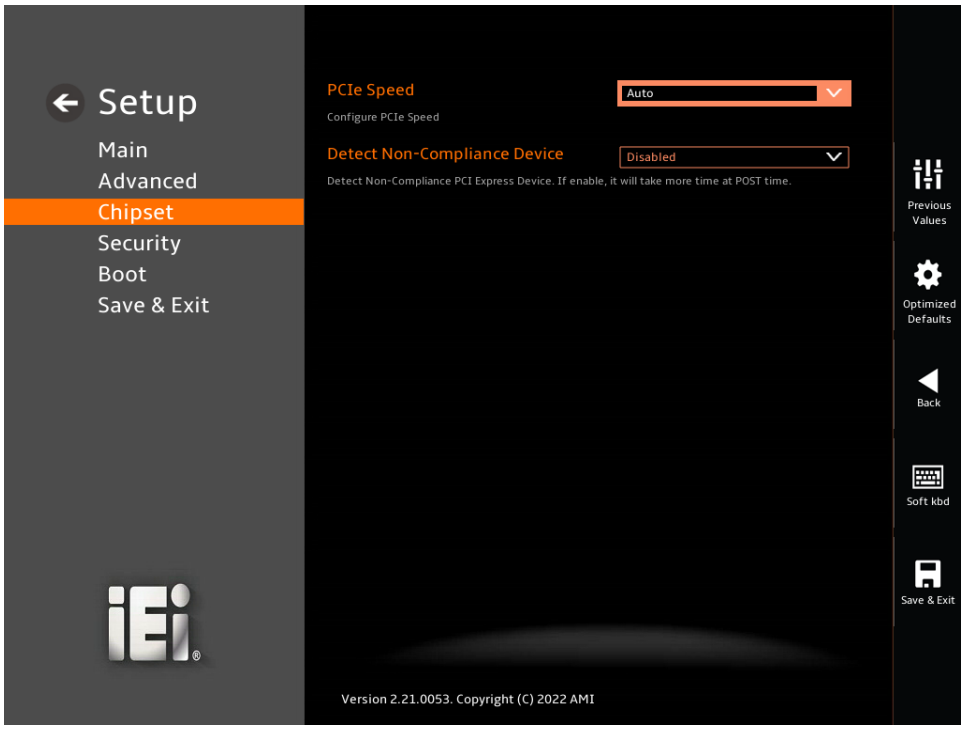

BIOS Menu 30: PCIe Slot Configuration Submenu

➔ **PCIe Speed [Auto]**

Use the **PCIe Speed** option to specify the PCI Express port speed .

➔ **Auto**	**DEFAULT**	Auto mode.
➔ **Gen1**		Configure PCIe Speed to Gen1.
➔ **Gen2**		Configure PCIe Speed to Gen2.
➔ **Gen3**		Configure PCIe Speed to Gen3.

➔ **Detect Non-Compliance Device [Disabled]**

Use the **Detect Non-Compliance Device** option to configure whether to detect if a non-compliance PCI Express device is connected to the PCI Express port.

➔ **Disabled**	**DEFAULT**	Do not detect if a non-compliance PCI Express device is connected to the PCI Express port.
➔ **Enabled**		Detect if a non-compliance PCI Express device is connected to the PCI Express port.

5.4.2.2 SATA And RST Configuration

Use the **SATA And RST Configuration** menu (**BIOS Menu 31**) to change and/or set the configuration of the SATA devices installed in the system.

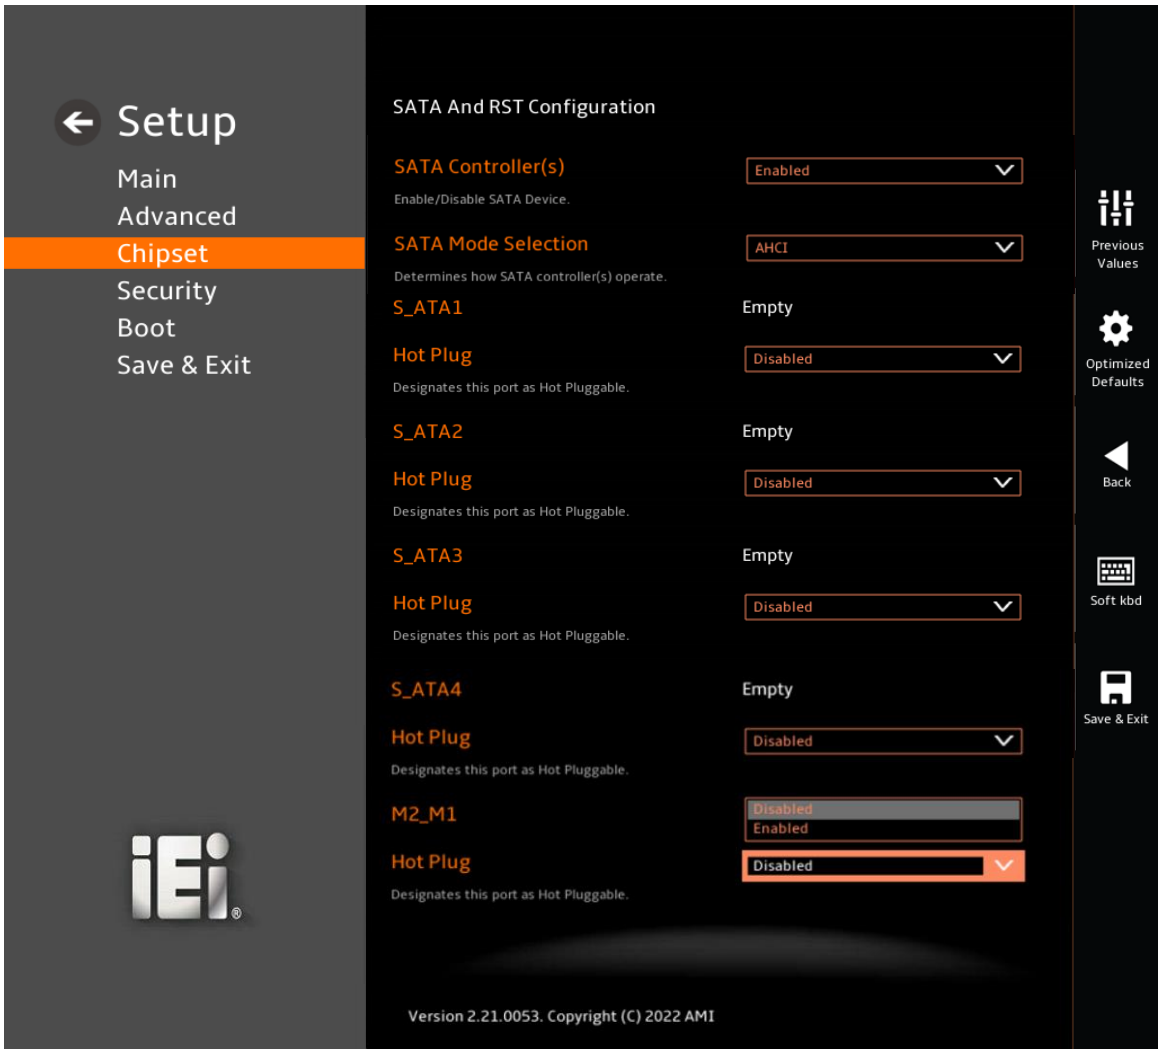

BIOS Menu 31: SATA Configuration

➔ **SATA Controller(s) [Enabled]**

Use the **SATA Controller(s)** option to configure the SATA controller(s).

➔ **Enabled**	**DEFAULT**	Enables the on-board SATA controller(s).
➔ **Disabled**		Disables the on-board SATA controller(s).

➔ **SATA Mode Selection [AHCI]**

Use the **SATA Mode Selection** option to determine how the SATA devices operate.

➔ **AHCI**	**DEFAULT**	Configures SATA devices as AHCI device.
➔ **Intel RST Premium With Intel Optane System Acceleration**		Configures SATA devices to the Intel RST Premium With Intel Optane System Acceleration mode.

➔ **Hot Plug [Disabled]**

Use the **Hot Plug** option (for S_ATA1 to S_ATA4 and M2_M1) to designate the correspondent port as hot-pluggable.

➔ **Disabled**	**DEFAULT**	Disables the hot-pluggable function of the SATA port.
➔ **Enabled**		Designates the SATA port as hot-pluggable.

5.4.2.3 HD Audio Configuration

Use the **HD Audio Configuration** menu (**BIOS Menu 32**) to configure the HD Audio Subsystem settings.

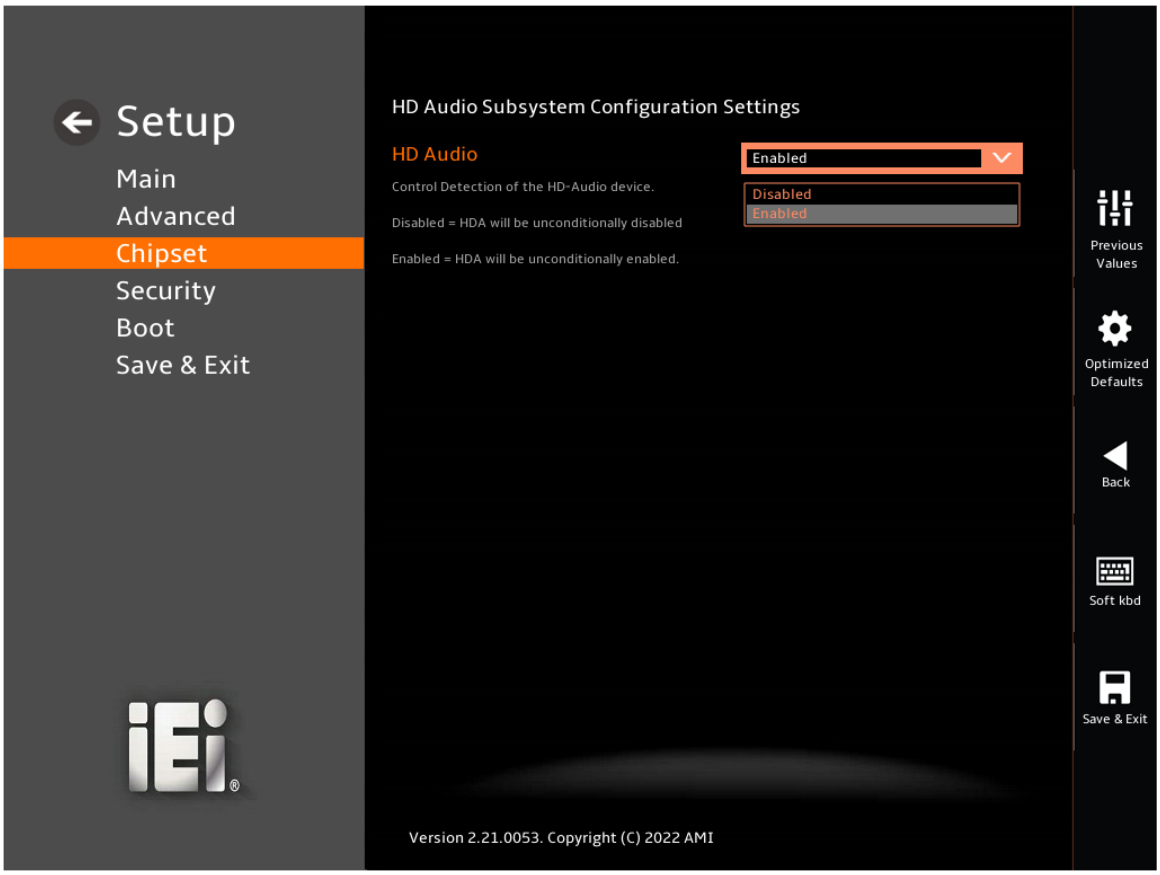

BIOS Menu 32: HD Audio Configuration

➔ **HD Audio [Enabled]**

Use the **HD Audio** option to enable or disable the High Definition Audio controller.

➔ **Disabled**		The onboard High Definition Audio controller is disabled.
➔ **Enabled**	**DEFAULT**	The onboard High Definition Audio controller is enabled.

5.5 Security

Use the **Security** menu (**BIOS Menu 33**) to set system and user passwords.

BIOS Menu 33: Security

➔ **Administrator Password**

Use the **Administrator Password** to set or change a administrator password.

➔ **User Password**

Use the **User Password** to set or change a user password.

5.6 Boot

Use the **Boot** menu (**BIOS Menu 34**) to configure system boot options.

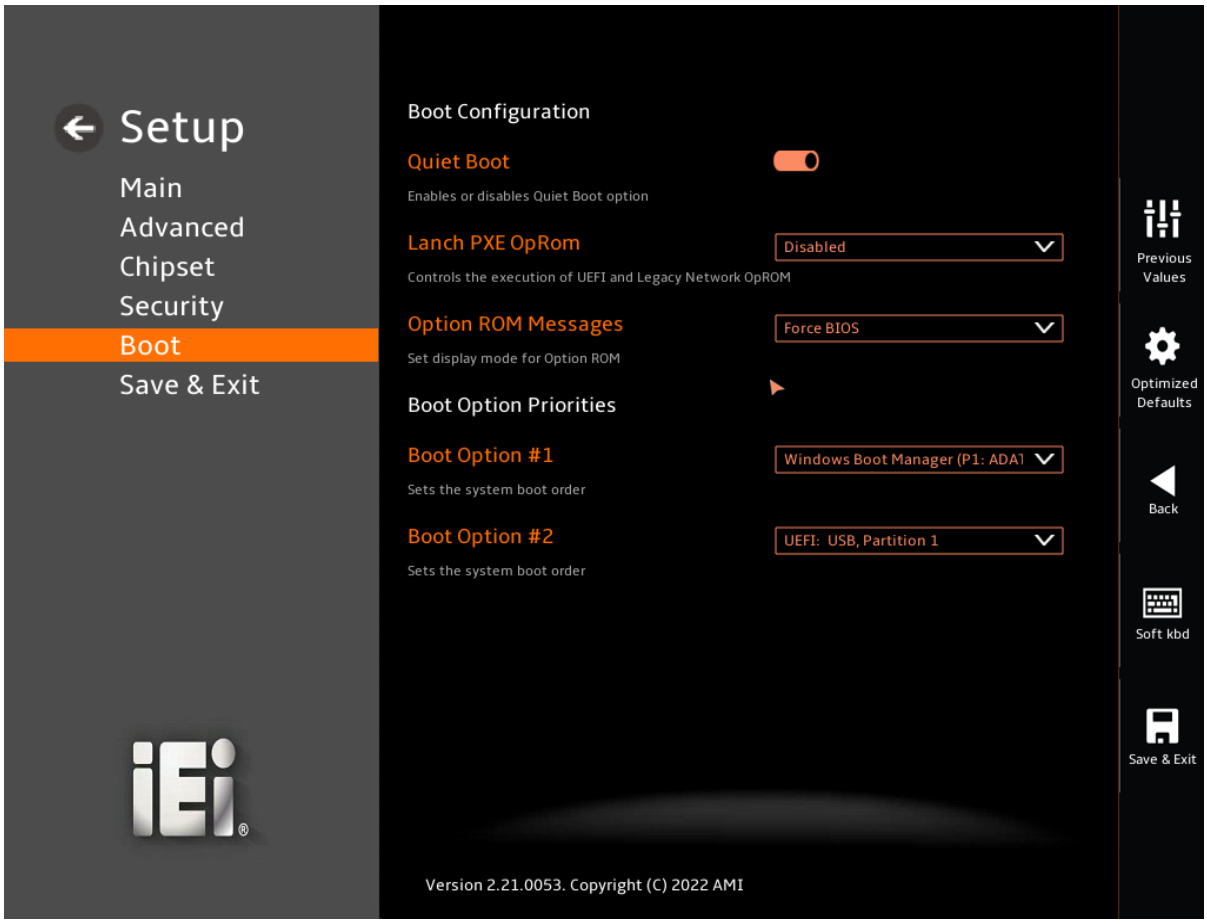

BIOS Menu 34: Boot Menu

5.6.1 Boot Configuration

➔ **Quiet Boot [Enabled]**

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

➔ **Disabled**		Normal POST messages displayed
➔ **Enabled**	**DEFAULT**	OEM Logo displayed instead of POST messages

➔ **Option ROM Messages [Force BIOS]**

Use the **Option ROM Messages** option to set the Option ROM display mode.

➔ **Force BIOS**	**DEFAULT**	Sets display mode to force BIOS.
➔ **Keep Current**		Sets display mode to current.

➔ **Launch PXE OpRom [Disabled]**

Use the **Launch PXE OpRom** option to enable or disable boot option for legacy network devices.

➔ **Disabled**	**DEFAULT**	Ignore all PXE Option ROMs
➔ **Enabled**		Load PXE Option ROMs.

5.6.2 Boot Option Priorities

Use the Boot Option # N to choose the system boots from the peripherals you selected The following Boot Options are listed as an example.

➔ **Boot Option #1**

Sets the system boot order **ADATA SP580** as the first priority.

➔ **Windows Boot Manager (P1: ADATA SSD SP580 240GB)**

➔ **Disabled**

➔ **Boot Option #2**

Sets the system boot order **UEFI: KingstonDataTraveler2.0** as the second priority.

➔ **UEFI: KingstonDataTraveler2.0, Partition 1**

➔ **Disabled**

5.7 Save & Exit

Use the **Save & Exit** menu (**BIOS Menu 35**) to load default BIOS values, optimal failsafe values and to save configuration changes.

BIOS Menu 35: Save & Exit

➔ **Save Changes and Reset**

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

➔ **Discard Changes and Reset**

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

➔ **Restore Defaults**

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

➔ **Save as User Defaults**

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

➔ **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY

This equipment is in conformity with the following EU directives:

- EMC Directive 2014/30/EU
- Low-Voltage Directive 2014/35/EU
- RoHS II Directive 2015/863/EU

If the user modifies and/or install other devices in the equipment, the CE conformity declaration may no longer apply.

If this equipment has telecommunications functionality, it also complies with the requirements of the R&TTE Directive 1999/5/EC.

English IEI Integration Corp declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Български [Bulgarian] IEI Integration Corp. декларира, че този оборудване е в съответст ие със съществените изисквания и другите приложими правила на Директива 1999/5/EC.
Česky [Czech] IEI Integration Corp tímto prohlašuje, že tento zařízení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ S.
Dansk [Danish] IEI Integration Corp erklærer herved, at følgende udstyr overholder de væsentlige krav c øvrige relevante krav i direktiv 1999/5/EF.
Deutsch [German] IEI Integration Corp, erklärt dieses Gerät entspricht den grundlegenden Anforderungen und den weiteren entsprechenden Vorgaben der Richtlinie 1999/5/EU.
Eesti [Estonian] IEI Integration Corp deklareerib seadme seadme vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Español [Spanish] IEI Integration Corp declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Ελληνική [Greek] IEI Integration Corp ΔΗΛΩΝΕΙ ΟΤΙ ΕΞΟΠΛΙΣΜΟΣ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Français [French] IEI Integration Corp déclare que l'appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5 CE.
Italiano [Italian] IEI Integration Corp dichiara che questo apparecchio è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian] IEI Integration Corp deklarē, ka iekārta atbilst būtiskajām prasībām un citiem ar to saistītajiem noteikumiem Direktīvas 1999/5/EK.
Lietuvių [Lithuanian] IEI Integration Corp deklaruoja, kad šis įranga atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands [Dutch] IEI In egration Corp dat het toestel toestel in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Malti [Maltese] IEI Integration Corp jiddikjara li dan prodott jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
Magyar [Hungarian] IEI Integration Corp nyilatkozom, hogy a berendezés megfelel a vonatkozó alapvetõ követelményeknek és az 1999/5/EC irányelv egyéb elõírásainak.
Polski [Polish] IEI Integration Corp oświadcza, że wyrobu jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Português [Portuguese] IEI Integration Corp declara que este equipamento está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Româna [Romanian] IEI Integration Corp declară că acest echipament este in conformitate cu cerinţele esenţiale şi cu celelalte prevederi relevante ale Directivei 1999/5/CE.
Slovensko [Slovenian] IEI Integration Corp izjavlja, da je ta opreme v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky [Slovak] IEI Integration Corp týmto vyhlasuje, že zariadenia spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 199 /5/ES.
Suomi [Finnish] IEI Integration Corp vakuuttaa täten että laitteet on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish] IEI Integration Corp förklarar att denna utrustningstyp står I överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

ROHS STATEMENT

The label on the product indicates this product complies to European (EU) Restriction of Hazardous Substances (RoHS) that set maximum concentration limits on hazardous materials used in electrical and electronic equipment.

FCC WARNING

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

CHINA ROHS

The label on the product indicates the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/ components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Appendix

B

Safety Precautions

WARNING:

The precautions outlined in this chapter should be strictly followed. Failure to follow these precautions may result in permanent damage to the FLEX-BX210.

B.1 Safety Precautions

Please follow the safety precautions outlined in the sections that follow:

B.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- ***Follow the electrostatic precautions*** outlined below whenever the device is opened.
- ***Make sure the power is turned off and the power cord is disconnected*** whenever the FLEX-BX210 is being installed, moved or modified.
- ***To prevent the risk of electric shock, make sure power cord is unplugged from wall socket.*** To fully disengage the power to the unit, please disconnect the power cord from the power outlet. Refer servicing to qualified service personnel. The power outlet shall be readily available and accessible.
- ***Do not apply voltage levels that exceed the specified voltage range***. Doing so may cause fire and/or an electrical shock. Use a power cord that matches the voltage of the power outlet, which has been approved and complies with the safety standard of your particular country.
- ***Electric shocks can occur*** if the FLEX-BX210 chassis is opened when it is running. To avoid risk of electric shock, this device must only be connected to a supply mains with protective earth.
- ***Do not drop or insert any objects*** into the ventilation openings of the FLEX-BX210.

- ***If considerable amounts of dust, water, or fluids enter the* device**, turn off the power supply immediately, unplug the power cord, and contact the FLEX-BX210 vendor.
- ***This equipment is not suitable for use in locations where children are likely to be present.***
- **DO NOT**:
  - Drop the device against a hard surface.
  - In a site where the ambient temperature exceeds the rated temperature

B.1.2 Anti-static Precautions

WARNING:

Failure to take ESD precautions during the installation of the FLEX-BX210 may result in permanent damage to the FLEX-BX210 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the FLEX-BX210. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the FLEX-BX210 is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband***: Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- ***Self-grounding***: Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad***: When configuring or working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- ***Only handle the edges of the electrical component***: When handling the electrical component, hold the electrical component by its edges.

B.1.3 Product Disposal

CAUTION:

Risk of explosion if the battery is replaced by an incorrect type;

Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;

Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas;

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union–If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union–The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

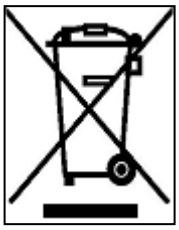

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

B.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the FLEX-BX210, please follow the guidelines below.

WARNING:

- For safety reasons, turn-off the power and unplug the box PC before cleaning.
- If you dropped any material or liquid such as water onto the box PC when cleaning, unplug the power cable immediately and contact your dealer or the nearest service center. Always make sure your hands are dry when unplugging the power cable.

B.2.1 Maintenance and Cleaning

Prior to cleaning any part or component of the FLEX-BX210, please read the details below.

- Never spray or squirt liquids directly onto any other components. To clean the box PC, gently wipe it with a piece of soft dry cloth or a slightly moistened cloth.
- The interior of the device does not require cleaning. Keep fluids away from the device interior.
- Be cautious of all small removable components when vacuuming the device.
- Never drop any objects or liquids through the openings of the device.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the device.
- Avoid eating, drinking and smoking within vicinity of the device.

B.2.2 Cleaning Tools

Some components in the FLEX-BX210 may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the FLEX-BX210.

- ***Cloth***– Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the device.
- ***Water or rubbing alcohol***–A cloth moistened with water or rubbing alcohol

can be used to clean the device.

- ***Using solvents***–The use of solvents is not recommended when cleaning the device as they may damage the plastic parts.
- ***Vacuum cleaner***–Using a vacuum specifically designed for computers is one of the best methods of cleaning the device. Dust and dirt can restrict the airflow in the device and cause its circuitry to corrode.
- ***Cotton swabs***–Cotton swaps moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- **Foam swabs**–Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Appendix

C

BIOS Menu Options

Below is a list of BIOS configuration options in the BIOS chapter.

- ➔ **BIOS Information** 58
- ➔ **Processor Information** 59
- ➔ **PCH Information** 59
- ➔ **System Date [xx/xx/xx]** 60
- ➔ **System Time [xx:xx:xx]** 60
- ➔ **Intel (VMX) Virtualization Technology [Enabled]** 63
- ➔ **Active Processor Cores [All]** 64
- ➔ **Hyper-Threading [Enabled]** 64
- ➔ **Intel(R) Trusted Execution Technology [Disabled]** 64
- ➔ **Intel(R) SpeedStep(tm) [Enabled]** 64
- ➔ **C states [Disabled]** 65
- ➔ **Tcc Activation Offset [Enabled]** 65
- ➔ **Power Limit 1** 65
- ➔ **Power Limit 1 Time Window [0]** 65
- ➔ **Power Limit 2** 65
- ➔ **Turbo Mode [Enabled]** 65
- ➔ **AMT BIOS Features [Enabled]** 66
- ➔ **Unconfigure ME [Disabled]** 66
- ➔ **TPM Device Selection [dTPM (If supported)]** 67
- ➔ **Security Device Support [Enable]** 68
- ➔ **Pending Operation [None]** 68
- ➔ **F81966 Super IO Configuration** 69
- ➔ **Serial Port [Enabled]** 70
- ➔ **Device Settings** 70
- ➔ **Serial Port [Enabled]** 71
- ➔ **Device Settings** 71
- ➔ **Serial Port [Enabled]** 72
- ➔ **Device Settings** 72
- ➔ **Serial Port [Enabled]** 73
- ➔ **Device Settings** 73
- ➔ **PC Health Status** 74
- ➔ **CPU_FAN/SYS_FAN Smart Fan Control [Auto Mode]** 76
- ➔ **CPU_FAN/SYS_FAN start temperature** 76

- CPU_FAN/SYS_FAN off temperature 76
- CPU_FAN/SYS_FAN start PWM 76
- Auto mode fan slope PWM 76
- Console Redirection [Disabled] 77
- Terminal Type [ANSI] 78
- Bits per second [115200] 79
- Data Bits [8] 79
- Parity [None] 79
- Stop Bits [1] 80
- Intel TXT Information 81
- VT-d [Enabled] 83
- Memory Configuration 84
- Primary Display [Auto] 85
- Internal Graphics [Enabled] 86
- DVMT Pre-Allocated [64M] 86
- DVMT Total Gfx Mem [MAX] 86
- Enable Root Port [Auto] 87
- Max Link Speed [Auto] 87
- Detect Non-Compliance Device [Disabled] 88
- Auto Power Button Function [Disabled(ATX)] 89
- Restore AC Power Loss [Last State] 89
- Power Saving Function(EUP) [Disabled] 90
- USB Power SW1 [+5V DUAL] 90
- USB Power SW2 [+5V DUAL] 90
- PCI Express Configuration 91
- PCIe Speed [Auto] 92
- Detect Non-Compliance Device [Disabled] 92
- SATA Controller(s) [Enabled] 93
- SATA Mode Selection [AHCI] 94
- Hot Plug [Disabled] 94
- HD Audio [Enabled] 95
- Administrator Password 96
- User Password 96
- Quiet Boot [Enabled] 97
- Option ROM Messages [Force BIOS] 98

➔ Launch PXE OpRom [Disabled] 98
➔ Boot Option #1 98
➔ Boot Option #2 98
➔ Save Changes and Reset 99
➔ Discard Changes and Reset 99
➔ Restore Defaults 100
➔ Save as User Defaults 100
➔ Restore User Defaults 100

Appendix

A

Watchdog Timer

NOTE:

The following discussion applies to DOS environment. IEI support is contacted or the IEI website visited for specific drivers for more sophisticated operating systems, e.g., Windows and Linux.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMI or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer:

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table D-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. While the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the Watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

NOTE:

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

Example program:

```
; INITIAL TIMER PERIOD COUNTER
;
W_LOOP:

        MOV     AX, 6F02H           ;setting the time-out value
        MOV     BL, 30              ;time-out value is 48 seconds
        INT      15H
 ;
; ADD THE APPLICATION PROGRAM HERE
;
        CMP      EXIT_AP, 1         ;is the application over?
        JNE      W_LOOP        ;No, restart the application

        MOV     AX, 6F02H      ;disable Watchdog Timer
        MOV     BL, 0          ;
        INT      15H
;
; EXIT ;
```

Appendix

B

Error Beep Code

E.1 PEI Beep Codes

Number of Beeps	Description
1	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXEIPL was not found
3	DXE Core Firmware Volume was not found
4	Recovery failed
4	S3 Resume failed
7	Reset PPI is not available

E.2 DXE Beep Codes

Number of Beeps	Description
1	Invalid password
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met

NOTE:

If you have any question, please contact IEI for further assistance.

Appendix

C

Hazardous Materials Disclosure

F.1 RoHS II Directive (2015/863/EU)

The details provided in this appendix are to ensure that the product is compliant with the RoHS II Directive (2015/863/EU). The table below acknowledges the presences of small quantities of certain substances in the product, and is applicable to RoHS II Directive (2015/863/EU).

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	Bis(2-ethylhexyl) phthalate (DEHP)	Butyl benzyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Housing	O	O	O	O	O	O	O	O	O	O
Display	O	O	O	O	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O	O	O	O	O
Battery	O	O	O	O	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in Directive (EU) 2015/863.

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in Directive (EU) 2015/863.

F.2 China RoHS

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有"环境友好使用期限"的标签，此期限是估算这些物质"不会有泄漏或突变"的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	O	O	O	O	O	O
显示	O	O	O	O	O	O
印刷电路板	O	O	O	O	O	O
金属螺帽	O	O	O	O	O	O
电缆组装	O	O	O	O	O	O
风扇组装	O	O	O	O	O	O
电力供应组装	O	O	O	O	O	O
电池	O	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求。